


STARTER ASSY REPLACEMENT

190C5-02

1. REMOVE ENGINE UNDER COVER RH

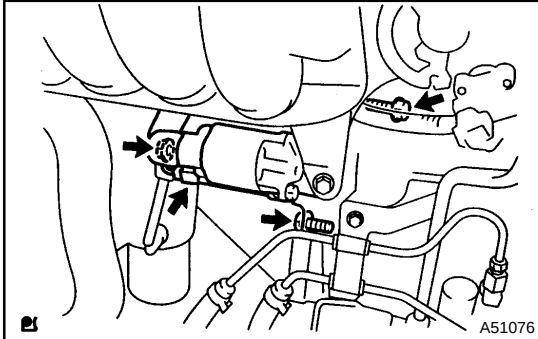

2. REMOVE STARTER ASSY

- (a) Disconnect the starter connector.
- (b) Remove the nut and disconnect the starter wire.
- (c) Remove the 2 bolts and starter.

3. INSTALL STARTER ASSY

Torque:

Bolt 37 N·m (378 kgf·cm, 27 ft·lbf)

Nut 9.8 N·m (100 kgf·cm, 7 ft·lbf)