


TRANSFER CASE RH OIL SEAL (U341F)

3102E-01

REPLACEMENT

1. REMOVE FRONT WHEELS
2. DRAIN TRANSAXLE OIL
 - (a) Remove the drain plug and gasket, and drain ATF.
 - (b) Install a new gasket and drain plug.
Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)
3. REMOVE TRANSFER CASE NO.2 PLUG
 - (a) Remove the No.2 plug and gasket.
4. DRAIN TRANSFER OIL
 - (a) Remove the drain plug and gasket, and drain transfer oil.
 - (b) Install a new gasket and drain plug.
Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)
5. REMOVE FRONT AXLE HUB RH NUT
SST 09930-00010
6. REMOVE FRONT DRIVE SHAFT ASSY RH (See page 30-15)

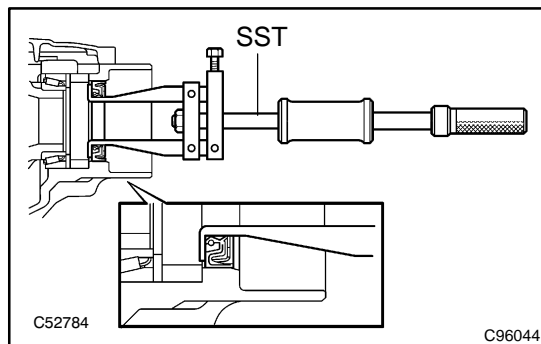


7. REMOVE TRANSFER CASE RH OIL SEAL

- (a) Using SST, remove the transfer case RH oil seal.
SST 09308-00010

NOTICE:

Do not damage the oil-seal-fitted surface of the case.

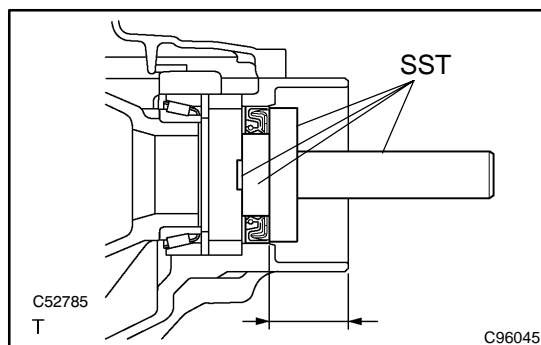

8. INSTALL TRANSFER CASE RH OIL SEAL

- (a) Using SST, drive a new oil seal into the case to the position shown in the illustration.

SST 09950-60010 (09951-00360, 09951-00590, 09952-06010), 09950-70010 (09951-07150)

Drive in depth: 33.7 - 34.3 mm (1.3268 - 1.3504 in.)

NOTICE:

Do not install the oil seal obliquely.

- (b) Apply small amount of MP grease to the lip of the oil seal.

9. INSTALL FRONT DRIVE SHAFT ASSY RH (See page 30-15)
10. INSTALL FRONT AXLE HUB RH NUT
11. ADD TRANSFER OIL (See page 31-3)
12. INSPECT TRANSFER OIL (See page 31-3)
13. INSTALL TRANSFER CASE NO.2 PLUG
 - (a) Install a new gasket and No.2 plug.
Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)
14. ADD TRANSAXLE OIL (See page 40-2)
15. INSPECT TRANSAXLE OIL (See page 40-2)
16. INSTALL FRONT WHEELS

2003 COROLLA MATRIX (RM940U)

17. INSPECT AND ADJUST FRONT WHEEL ALIGNMENT (See page 26-6)
18. CHECK ABS SPEED SENSOR SIGNAL (See page 05-316)