


DECELERATION SENSOR (4WD) REPLACEMENT


320JJ-01

1. REMOVE FRONT SEAT ASSEMBLY LH (See page 72-2)

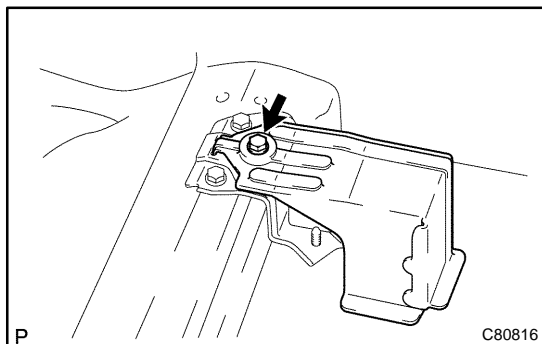


2. REMOVE DECELERATION SENSOR BRACKET

- (a) Remove the bolt and upper side deceleration sensor bracket.

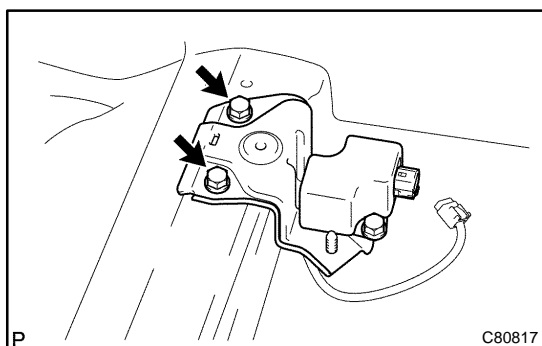

3. REMOVE DECELERATION SENSOR

- (a) Disconnect the deceleration sensor connector from the deceleration sensor, then remove the 2 bolts and deceleration sensor with the anchor side deceleration sensor bracket.

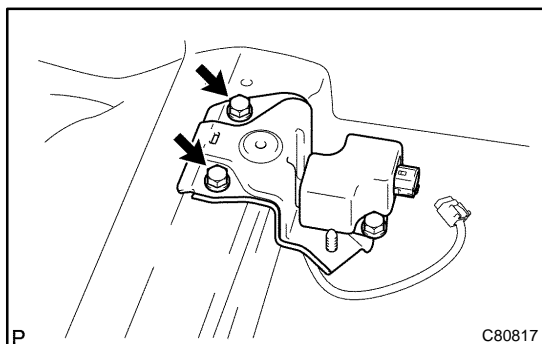


4. INSTALL DECELERATION SENSOR

- (a) Install the 2 bolts and deceleration sensor to the body, then connect the deceleration sensor connector to the deceleration sensor.

Torque: 21 N·m (214 ft·lbf, 15 ft·lbf)

NOTICE:

- Do not use the dropped or damage sensor.
- Free from the foreign matters or floor carpet between the deceleration sensor bracket and body.

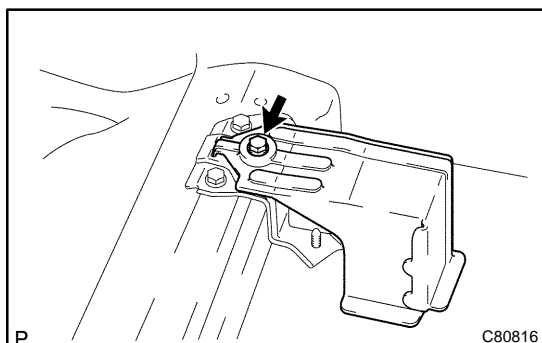

5. INSTALL DECELERATION SENSOR BRACKET

- (a) Install the bolt and upper side deceleration sensor bracket.

Torque: 21 N·m (214 ft·lbf, 15 ft·lbf)

6. INSTALL FRONT SEAT ASSEMBLY LH (See page 72-2)

7. CHECK DECELERATION SENSOR SIGNAL (See page 05-316)