


REPLACEMENT

HINT:



For parking brake cable assy No.2, perform the same procedure to the parking brake cable assy No.3.

1. **REMOVE REAR WHEEL**
2. **REMOVE REAR BRAKE DRUM SUB-ASSY (See page 32-41)**
3. **REMOVE PARKING BRAKE SHOE STRUT SET LH (See page 32-41)**
4. **REMOVE FRONT BRAKE SHOE (See page 32-41)**
SST 09718-00010
5. **REMOVE REAR BRAKE SHOE (See page 32-41)**
SST 09718-00010

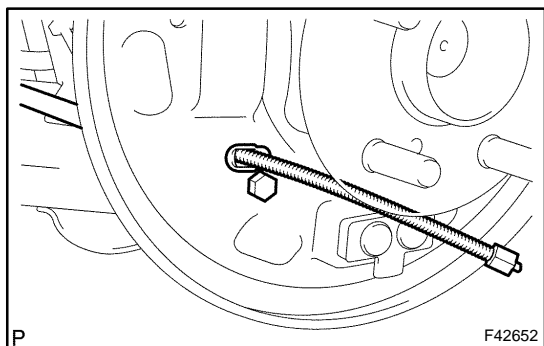

6. **DISCONNECT PARKING BRAKE CABLE ASSY NO.3**
 - (a) Remove the bolt, and disconnect the parking brake cable assy No.3 from the backing plate.
7. **REMOVE PARKING BRAKE CABLE ASSY NO.3**
 - (a) Remove the 4 bolts, cable retainer and No.1 clamp from the body.
 - (b) Disconnect the parking brake cable assy No.3 from the equalizer, and remove the parking brake cable assy No.3.
8. **INSTALL PARKING BRAKE CABLE ASSY NO.3**
 - (a) Connect the parking brake cable assy No.3 to the equalizer.

- (b) Install the parking brake cable assy No.3 with the 4 bolts, and install the cable retainer and No.1 clamp.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

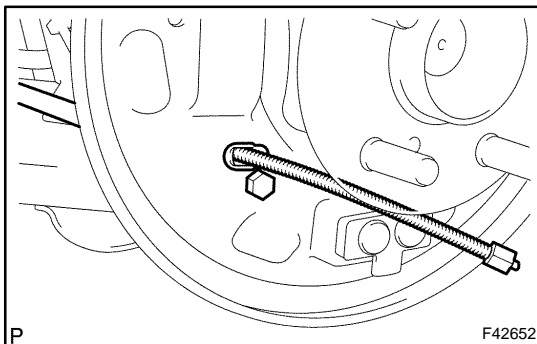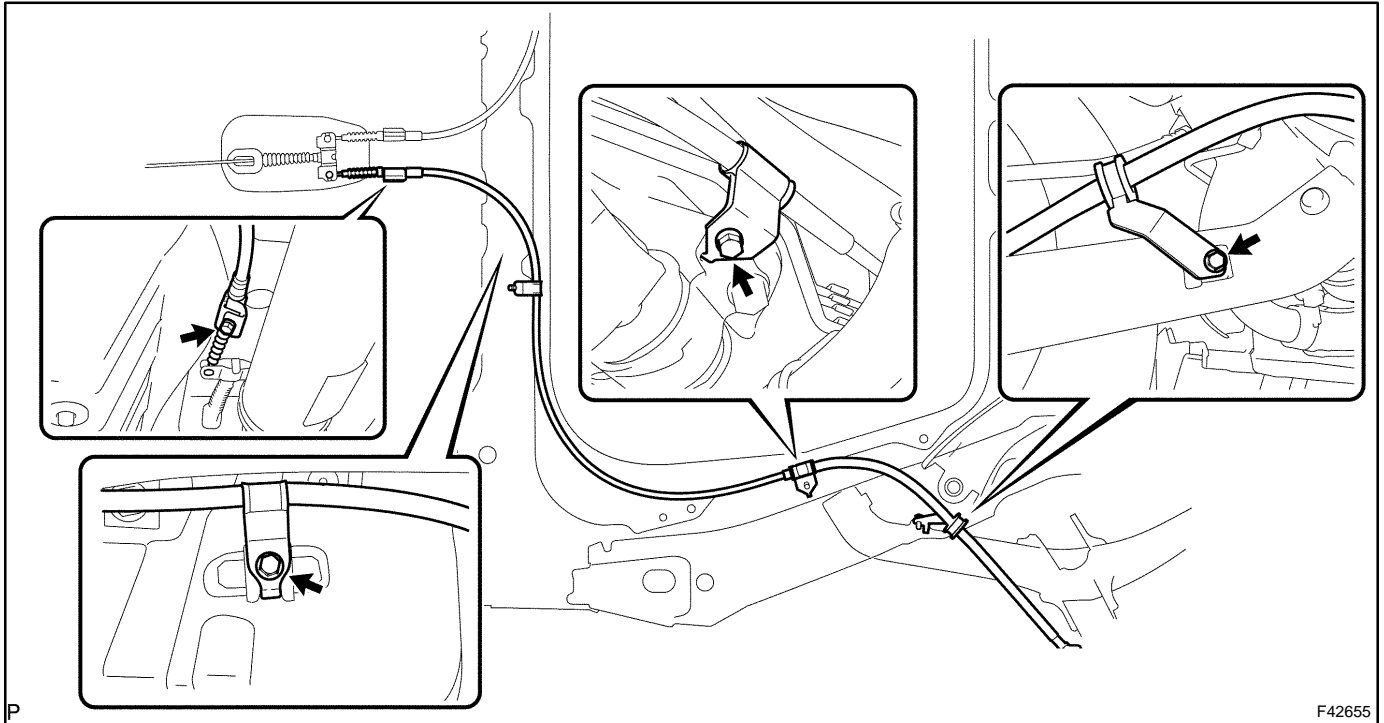

9. CONNECT PARKING BRAKE CABLE ASSY NO.3

- (a) Connect the parking brake cable assy No.3 to the backing plate with the bolt.
Torque: 7.8 N·m (80 kgf·cm, 69 in·lbf)

10. APPLICATION HIGH TEMPERATURE GREASE (See page 32-41)
11. INSTALL REAR BRAKE SHOE (See page 32-41)
SST 09718-00010
12. INSTALL FRONT BRAKE SHOE (See page 32-41)
SST 09718-00010
13. INSTALL PARKING BRAKE SHOE STRUT SET LH (See page 32-41)
14. CHECK REAR DRUM BRAKE INSTALLATION (See page 32-41)
15. INSTALL REAR BRAKE DRUM SUB-ASSY (See page 32-41)
16. ADJUST REAR DRUM BRAKE SHOE CLEARANCE (See page 32-41)
17. INSTALL REAR WHEEL
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
18. INSPECT PARKING BRAKE LEVER TRAVEL (See page 33-2)
19. ADJUST PARKING BRAKE LEVER TRAVEL (See page 33-2)
20. CHECK EXHAUST LEAKAGE