


# FRONT DIFFERENTIAL OIL SEAL (U240E)

400N7-01


## REPLACEMENT

1. REMOVE FRONT WHEELS
2. REMOVE ENGINE UNDER COVER RH
3. REMOVE ENGINE UNDER COVER LH
4. DRAIN AUTOMATIC TRANSAXLE FLUID
  - (a) Remove the drain plug and gasket, and drain ATF.
  - (b) Install a new gasket and drain plug.  
Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)
5. REMOVE FRONT DRIVE SHAFT ASSY RH (See page 30-32)
6. REMOVE FRONT DRIVE SHAFT ASSY LH (See page 30-32)

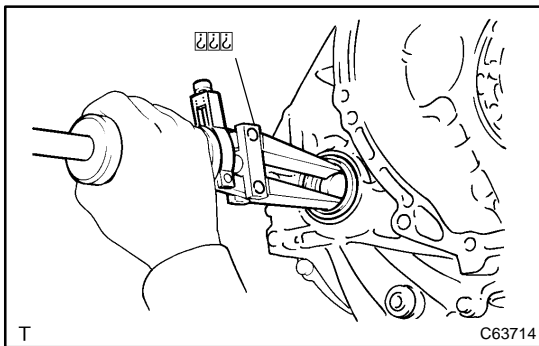


### 7. REMOVE TRANSAXLE HOUSING OIL SEAL(RH)

- (a) Using SST, pull out the oil seal.  
SST 09308-00010

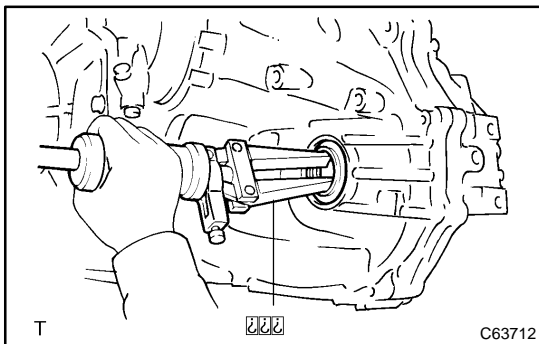


### 8. REMOVE DIFFERENTIAL SIDE BEARING RETAINER OIL SEAL(LH)

- (a) Using SST, pull out the oil seal.  
SST 09308-00010

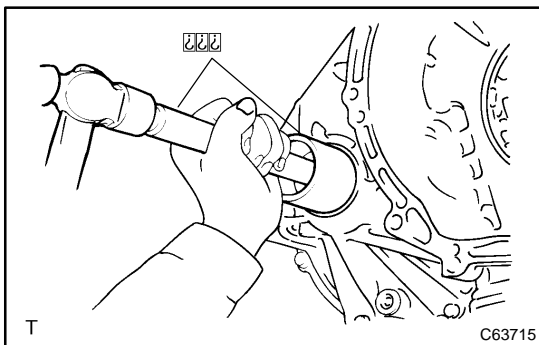

### 9. INSTALL TRANSAXLE HOUSING OIL SEAL(RH)

- (a) Using SST and a hammer, drive in a new oil seal.  
SST 09554-14010, 09950-70010 (09951-07200)  
**Oil seal drive in depth:**  
**0 ± 0.5 mm (0 ± 0.020 in.)**
- (b) Coat the lip of the oil seal with MP grease.

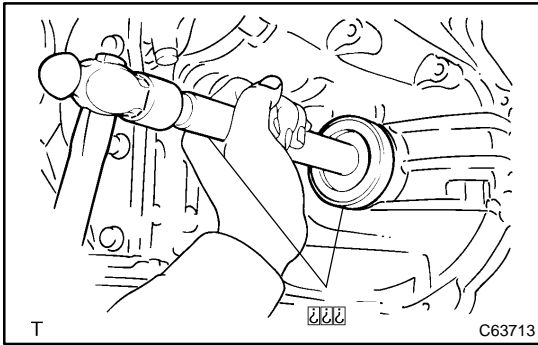

**10. INSTALL DIFFERENTIAL SIDE BEARING RETAINER OIL SEAL(LH)**

- (a) Using SST and a hammer, drive in a new oil seal.  
SST 09726-27012 (09726-02041), 09950-70010  
(09951-07200)

**Oil seal drive in depth:**

**2.7 ± 0.5 mm (0.106 ± 0.020 in.)**

- (b) Coat the lip of the oil seal with MP grease.

11. **INSTALL FRONT DRIVE SHAFT ASSY LH (See page 30-32)**
12. **INSTALL FRONT DRIVE SHAFT ASSY RH (See page 30-32)**
13. **INSTALL ENGINE UNDER COVER LH**
14. **INSTALL ENGINE UNDER COVER RH**
15. **INSTALL FRONT WHEELS**  
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
16. **ADD AUTOMATIC TRANSAXLE FLUID**
17. **INSPECT AUTOMATIC TRANSAXLE FLUID (See page 40-2)**
18. **INSPECT AND ADJUST FRONT WHEEL ALIGNMENT (See page 26-6)**
19. **CHECK ABS SPEED SENSOR SIGNAL (See page 05-316)**