

**PROBLEM SYMPTOMS TABLE**

Symptom	Suspect Area	See page
Driver' seat belt warning lamp does not light up	<ol style="list-style-type: none"> <li>1. fuse</li> <li>2. IG1 relay</li> <li>3. Combination meter</li> <li>4. Air bag sensor assembly center</li> <li>5. Front seat inner belt assembly LH</li> <li>6. Wire harness</li> </ol>	<p style="text-align: center;"> <a href="#">2</a>  <a href="#">2</a>  <b>71-18</b>  <b>60-39</b>  <b>61-3</b>  <a href="#">2</a> </p>
Passenger's seat belt warning lamp assy does not light up	<ol style="list-style-type: none"> <li>1. fuse</li> <li>2. IG1 relay</li> <li>3. Passenger's seat belt warning lamp assy</li> <li>4. Front seat inner belt assembly RH</li> <li>5. Wire harness</li> </ol>	<p style="text-align: center;"> <a href="#">2</a>  <a href="#">2</a>  <b>61-3</b>  <b>61-3</b>  <a href="#">2</a> </p>