
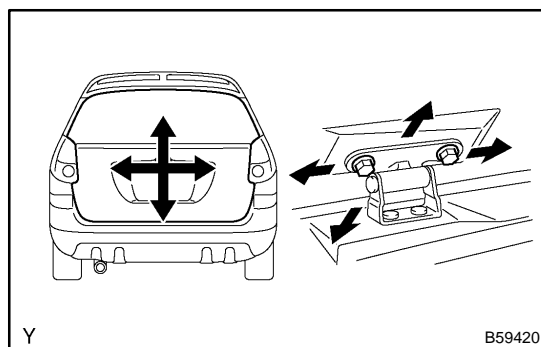


ADJUSTMENT

1. INSPECT BACK DOOR PANEL SUB-ASSY


- (a) Check that the clearance is within the standard value.

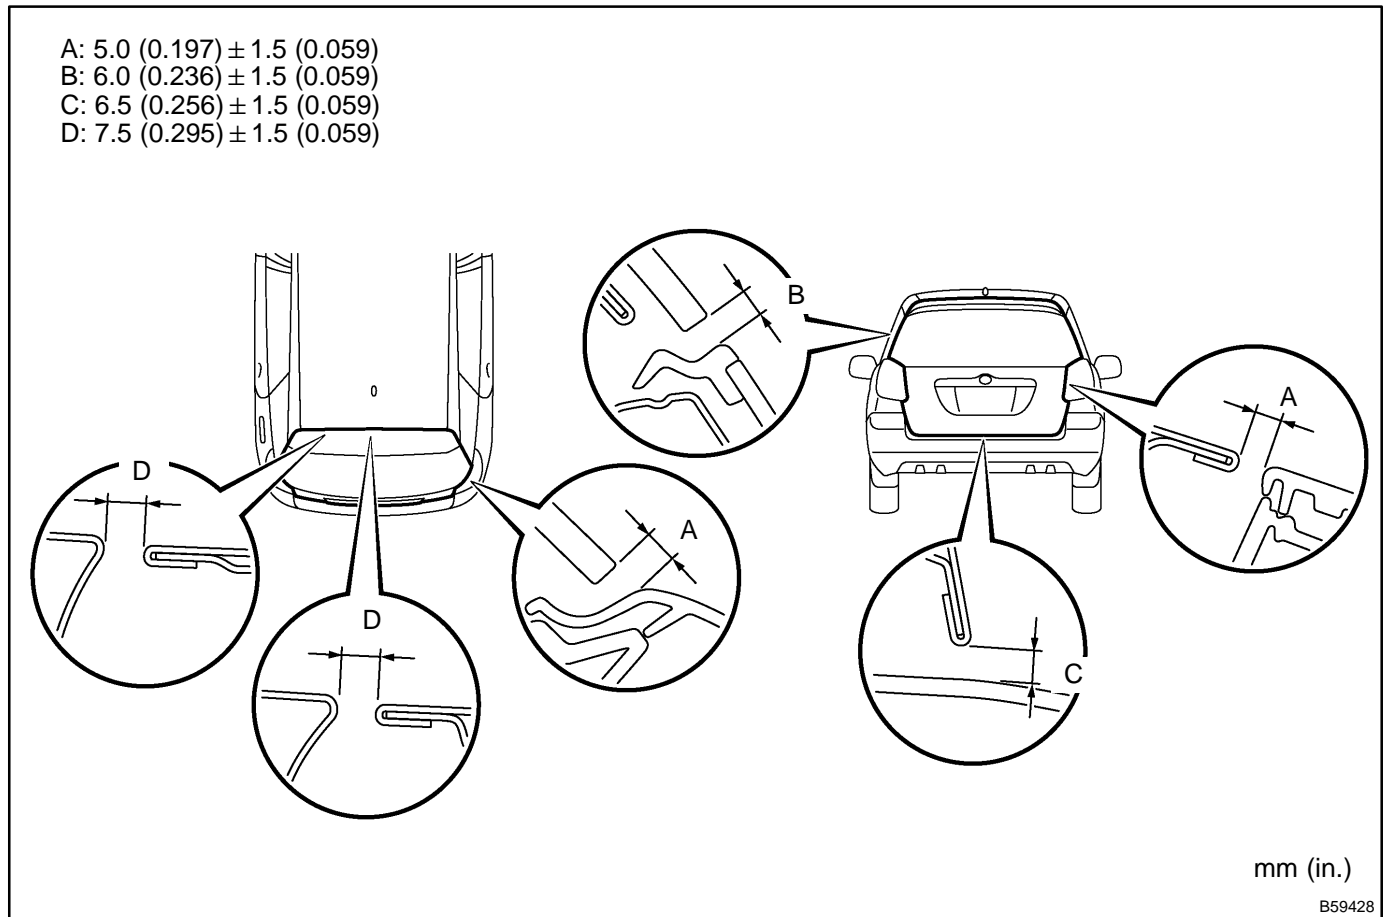

2. ADJUST BACK DOOR PANEL SUB-ASSY

- (a) Adjust the door in the left/right and the vertical direction.
 (1) Adjust the door by loosening the door side hinge bolts.


Torque: 19.5 N·m (199 kgf·cm, 14 ft·lbf)

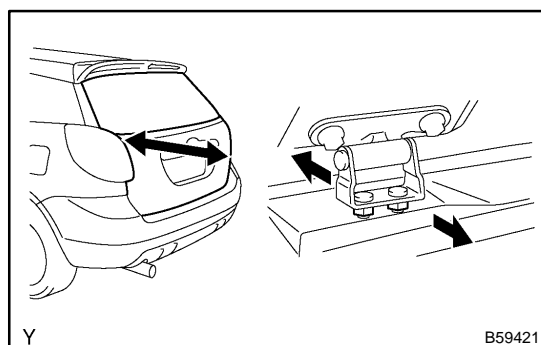

- (b) Adjust the door in the forward/rearward direction.
 (1) Adjust the door by loosening the body side hinge nuts.

Torque: 19.5 N·m (199 kgf·cm, 14 ft·lbf)

- (c) Adjust the back door lock striker.
 (1) Remove the rear floor finish plate (See page 76-12).

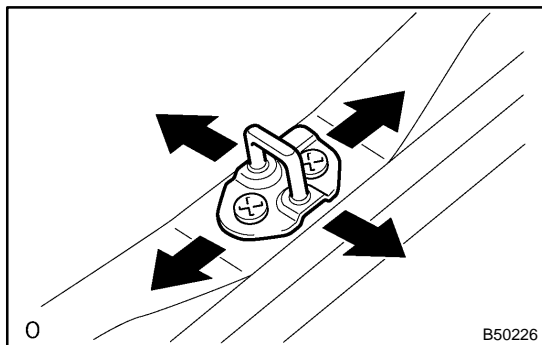

- (2) Check that the door fit and door linkage are adjusted correctly.
- (3) Adjust the striker by loosening the striker mounting screws.

Torque: 11.5 N·m (117 kgf·cm, 8.5 ft·lbf)

- (4) Using a plastic-faced hammer, tap the striker for adjustment.