



F RELAY LOCATIONS

[Engine Compartment]

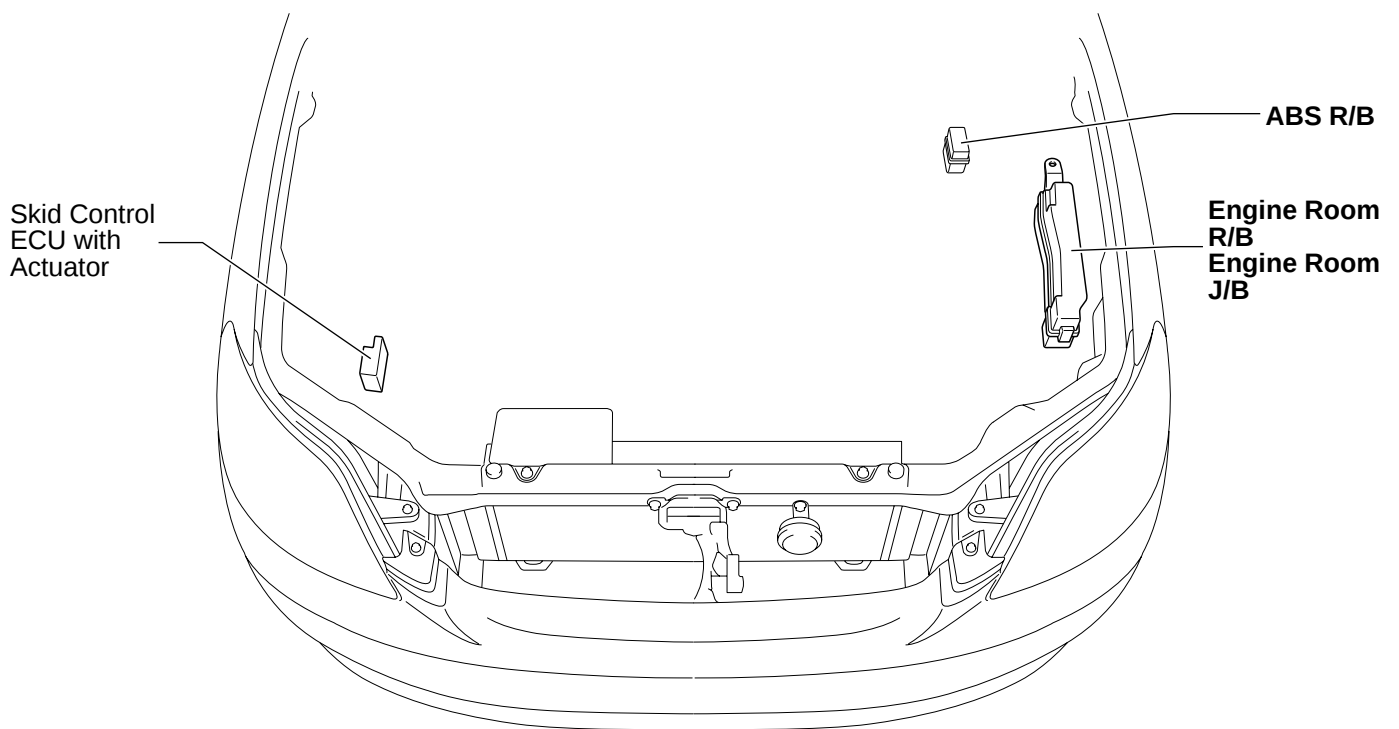


[Instrument Panel]

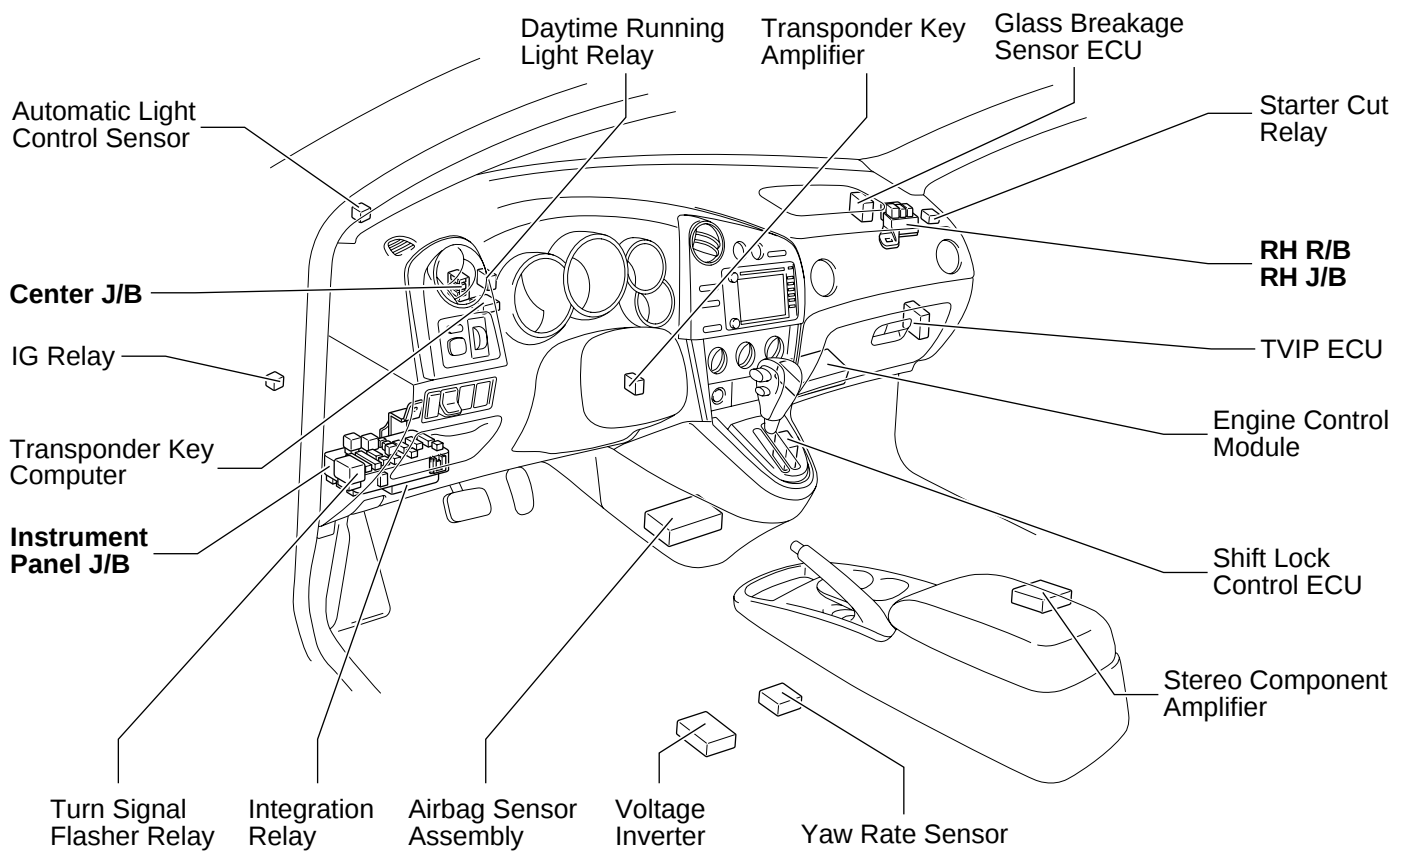

F RELAY LOCATIONS

[Body]

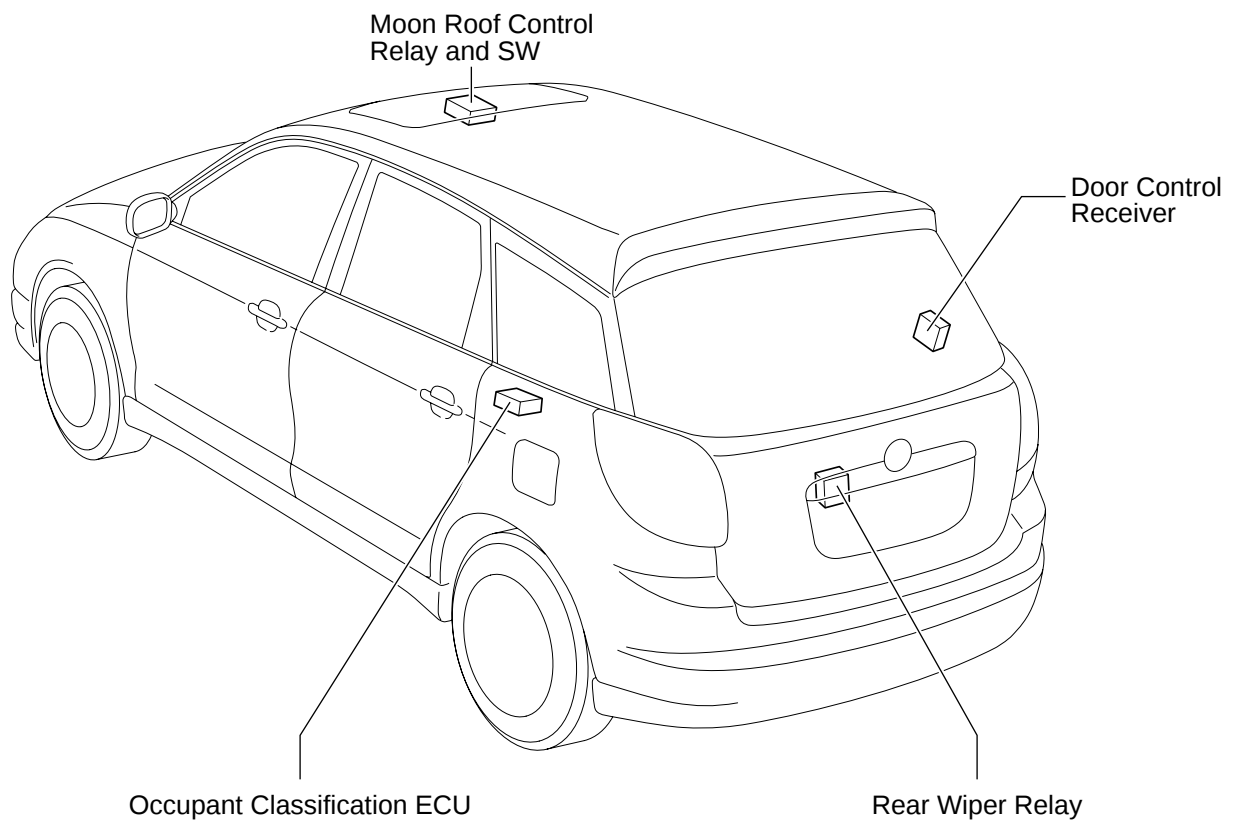


① : Engine Room R/B

○ : Engine Room J/B


Engine Compartment Left (See Page 20)


* 1:w/ VSC
 * 2:w/o VSC

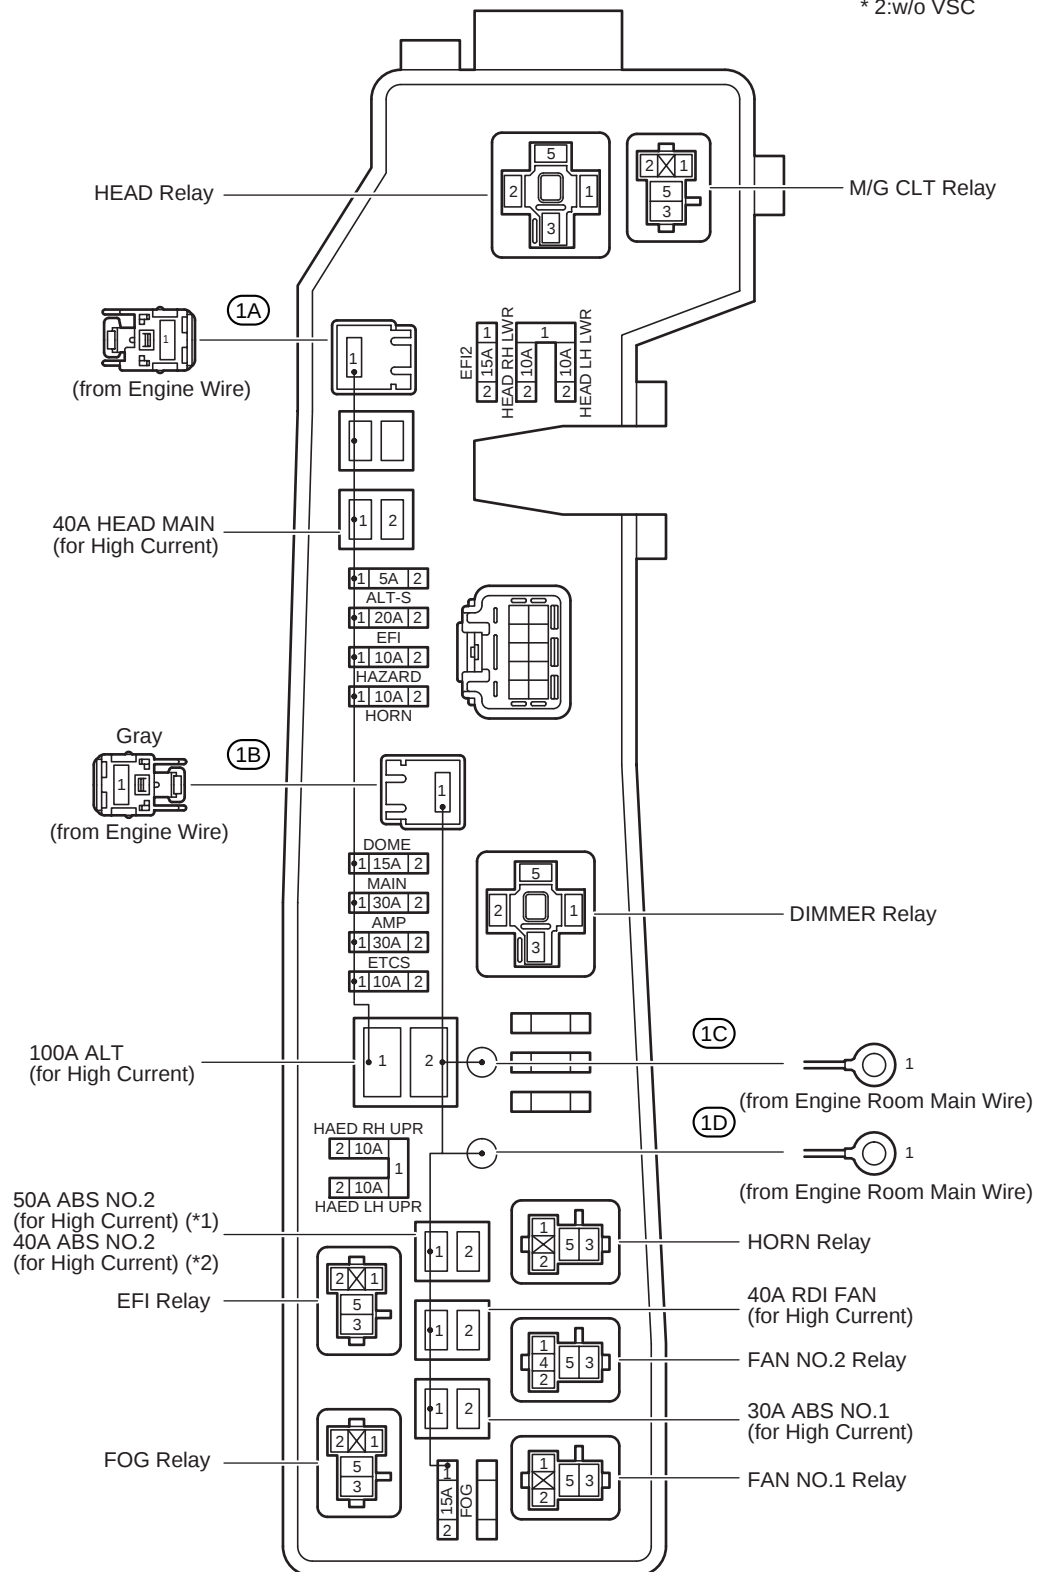

F RELAY LOCATIONS


 : Instrument Panel J/B	Lower Finish Panel (See Page 21)
--	----------------------------------

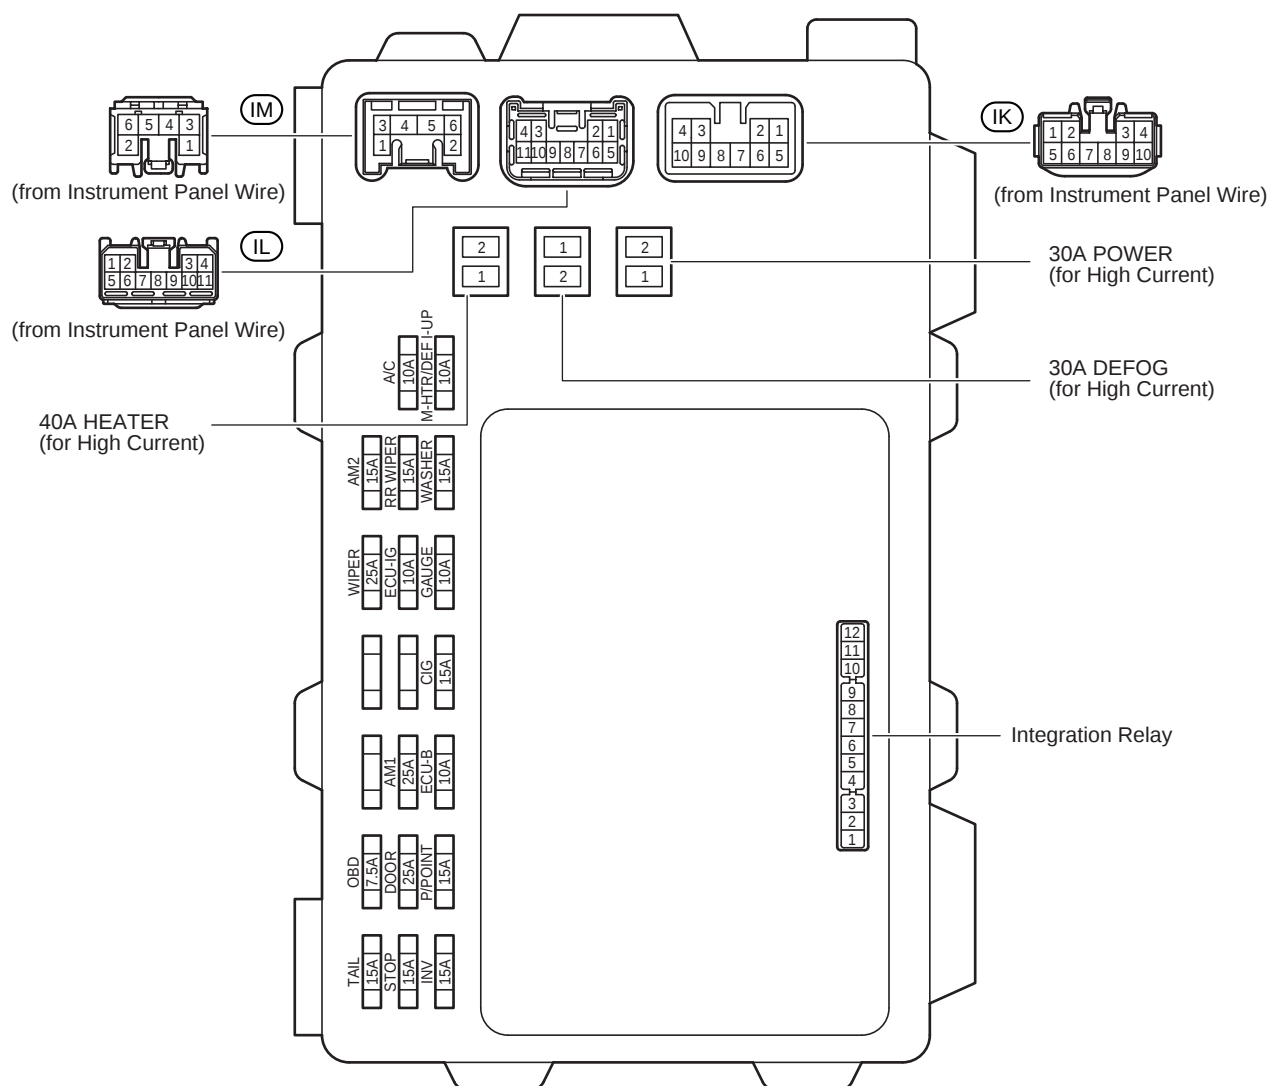

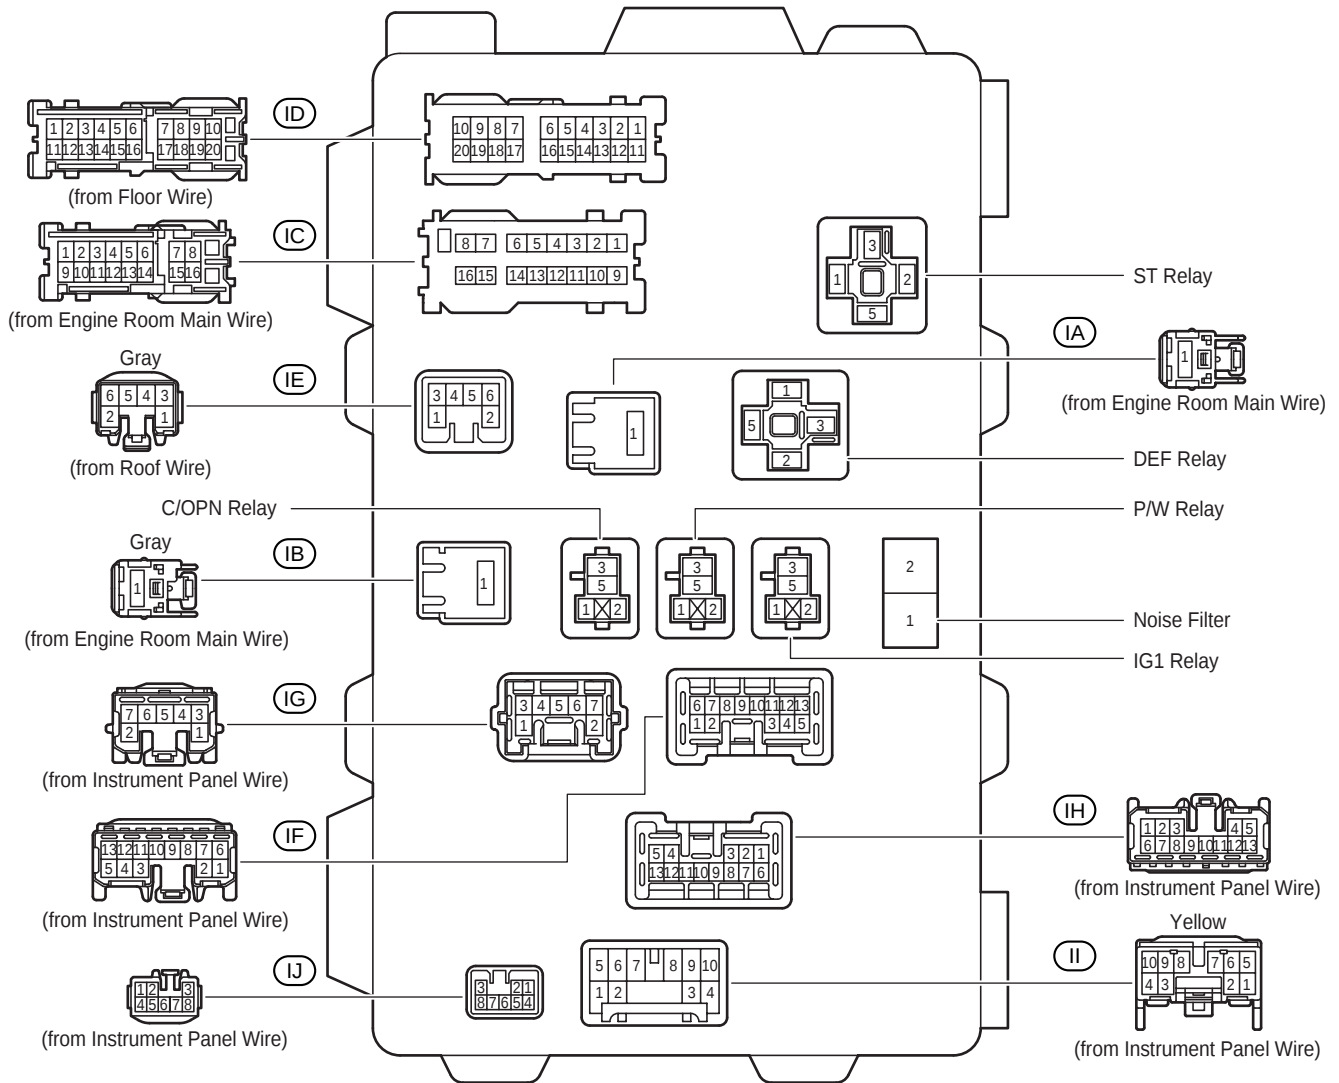


F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

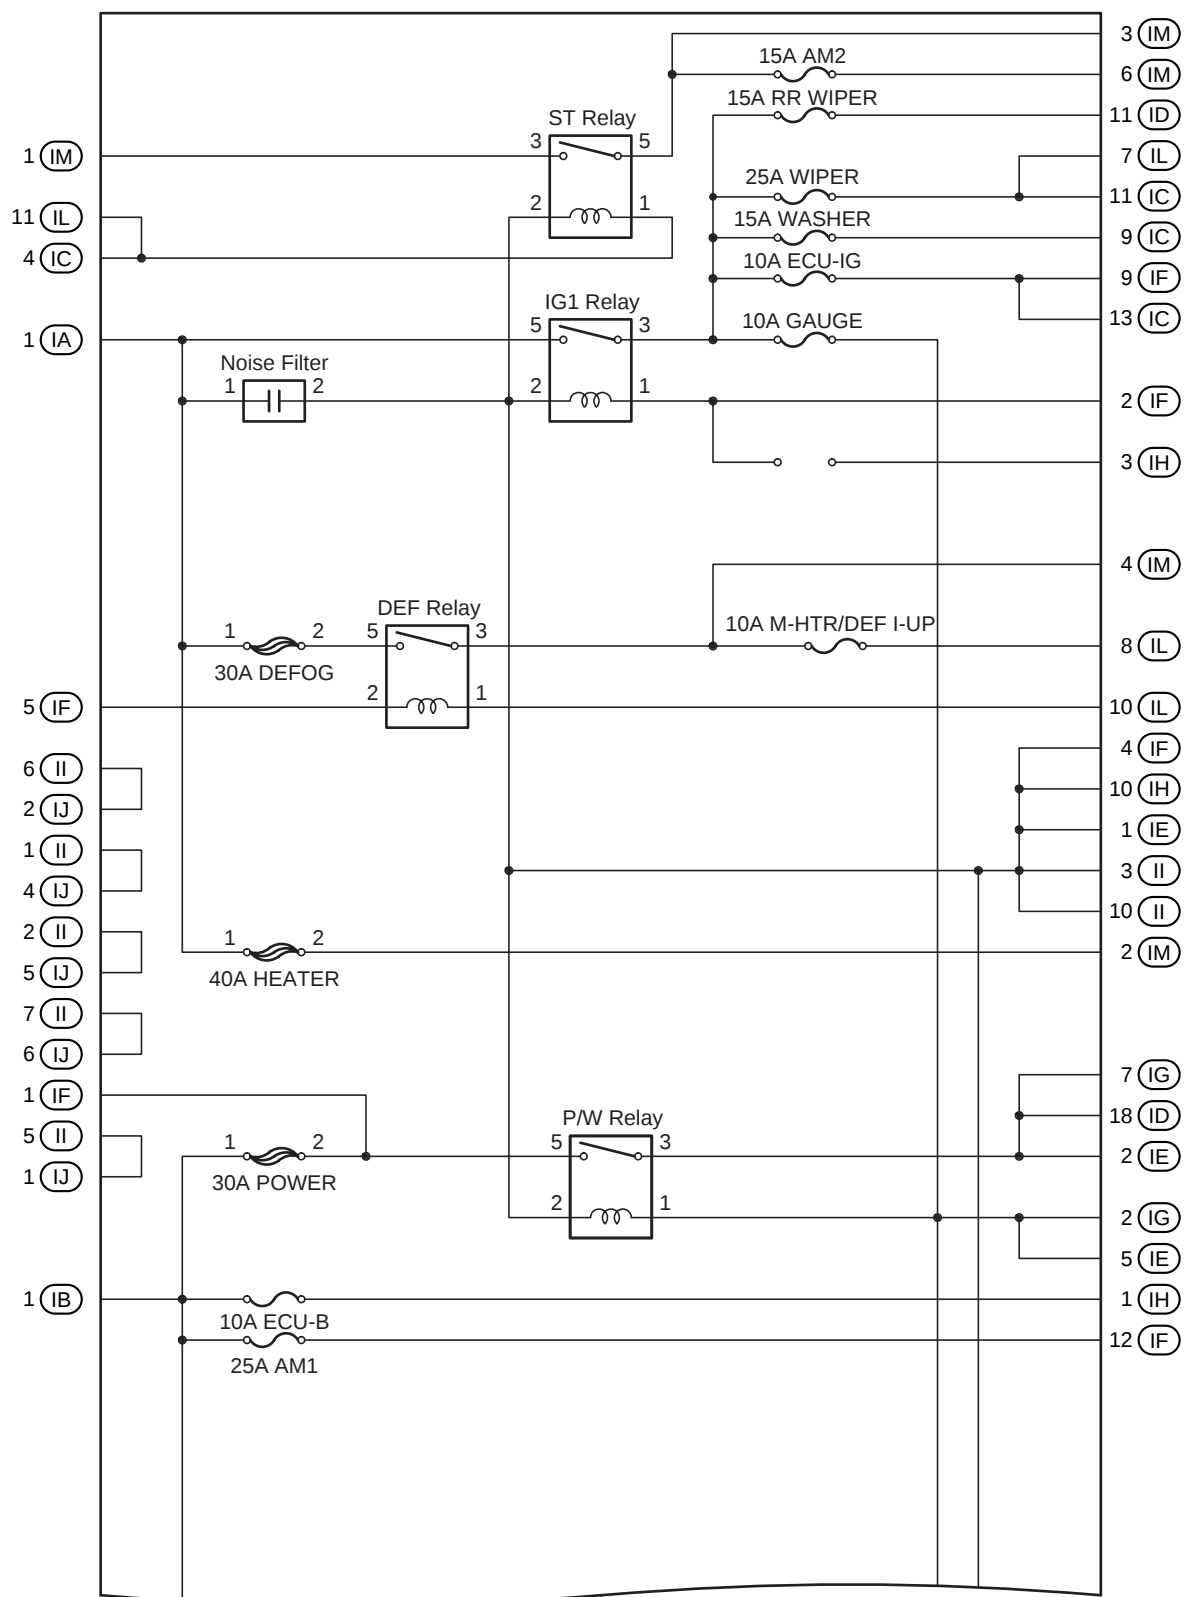


(Cont. Next Page)


(Cont'd)

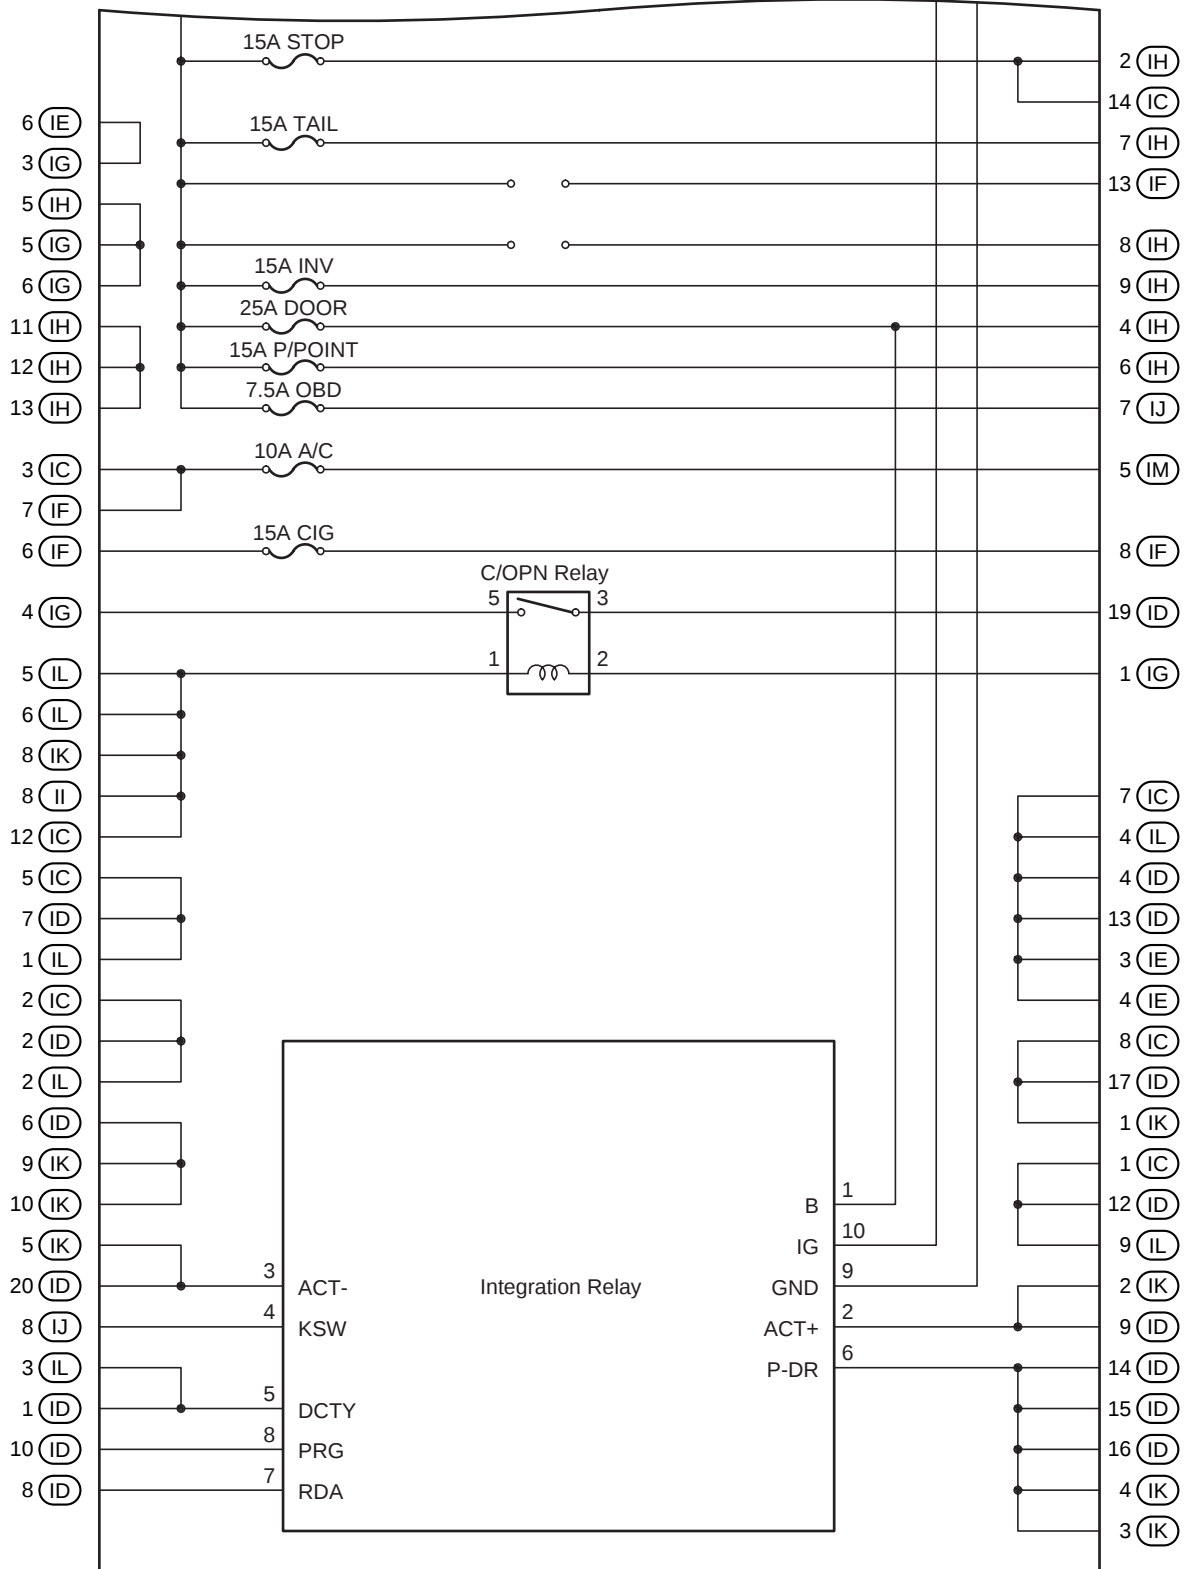

F RELAY LOCATIONS


③ : RH R/B	Right Side of the Instrument Panel Reinforcement (See Page 21)
○ : RH J/B	

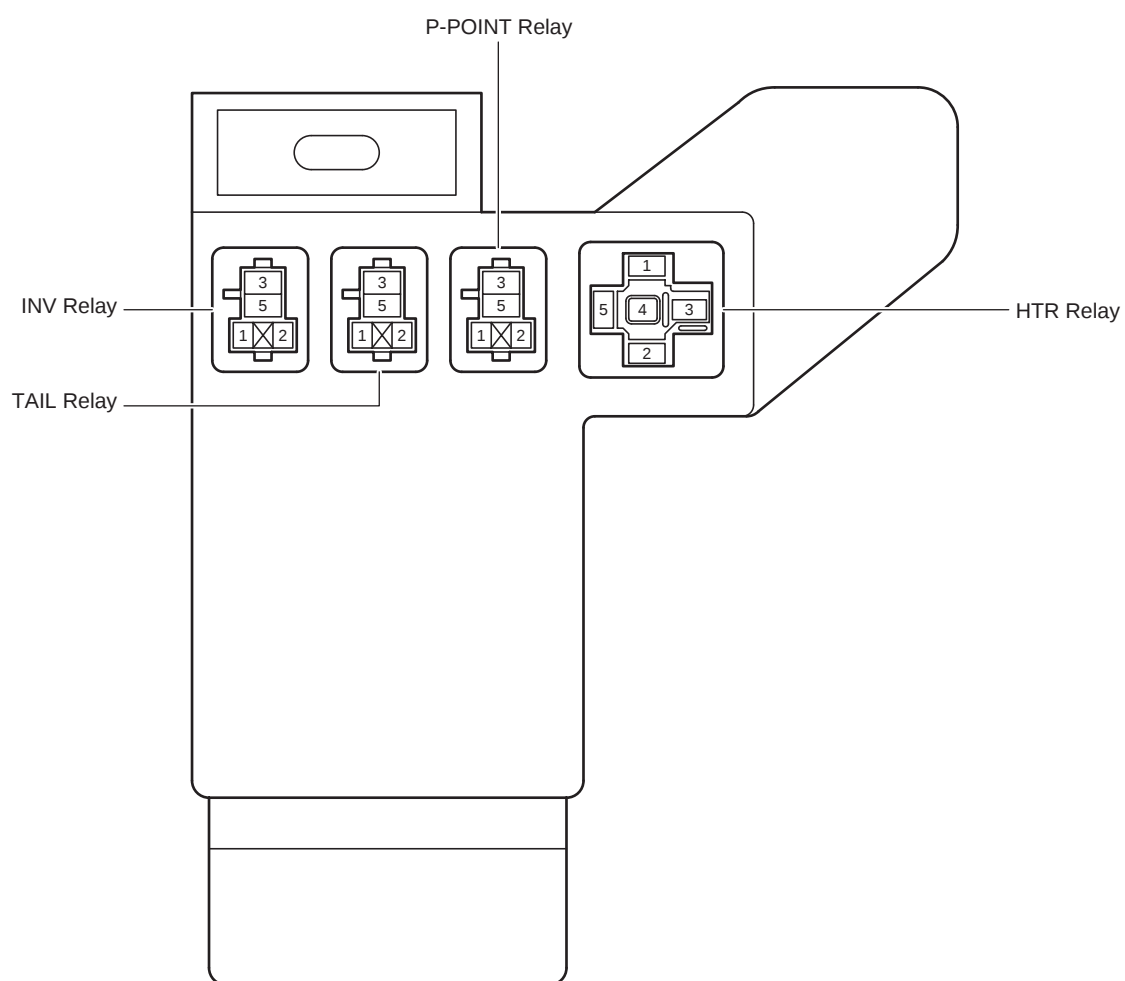

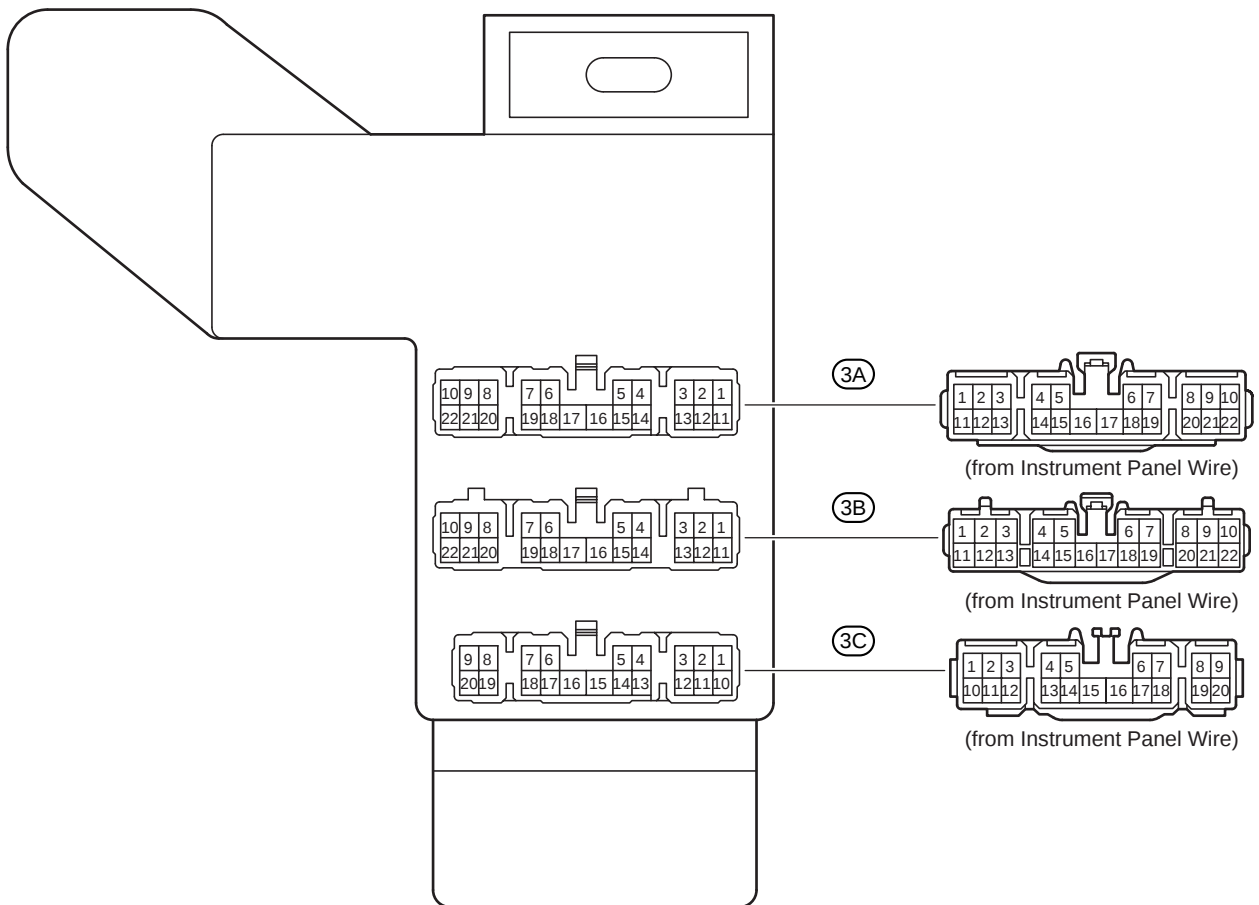


F RELAY LOCATIONS

[RH J/B Inner Circuit]

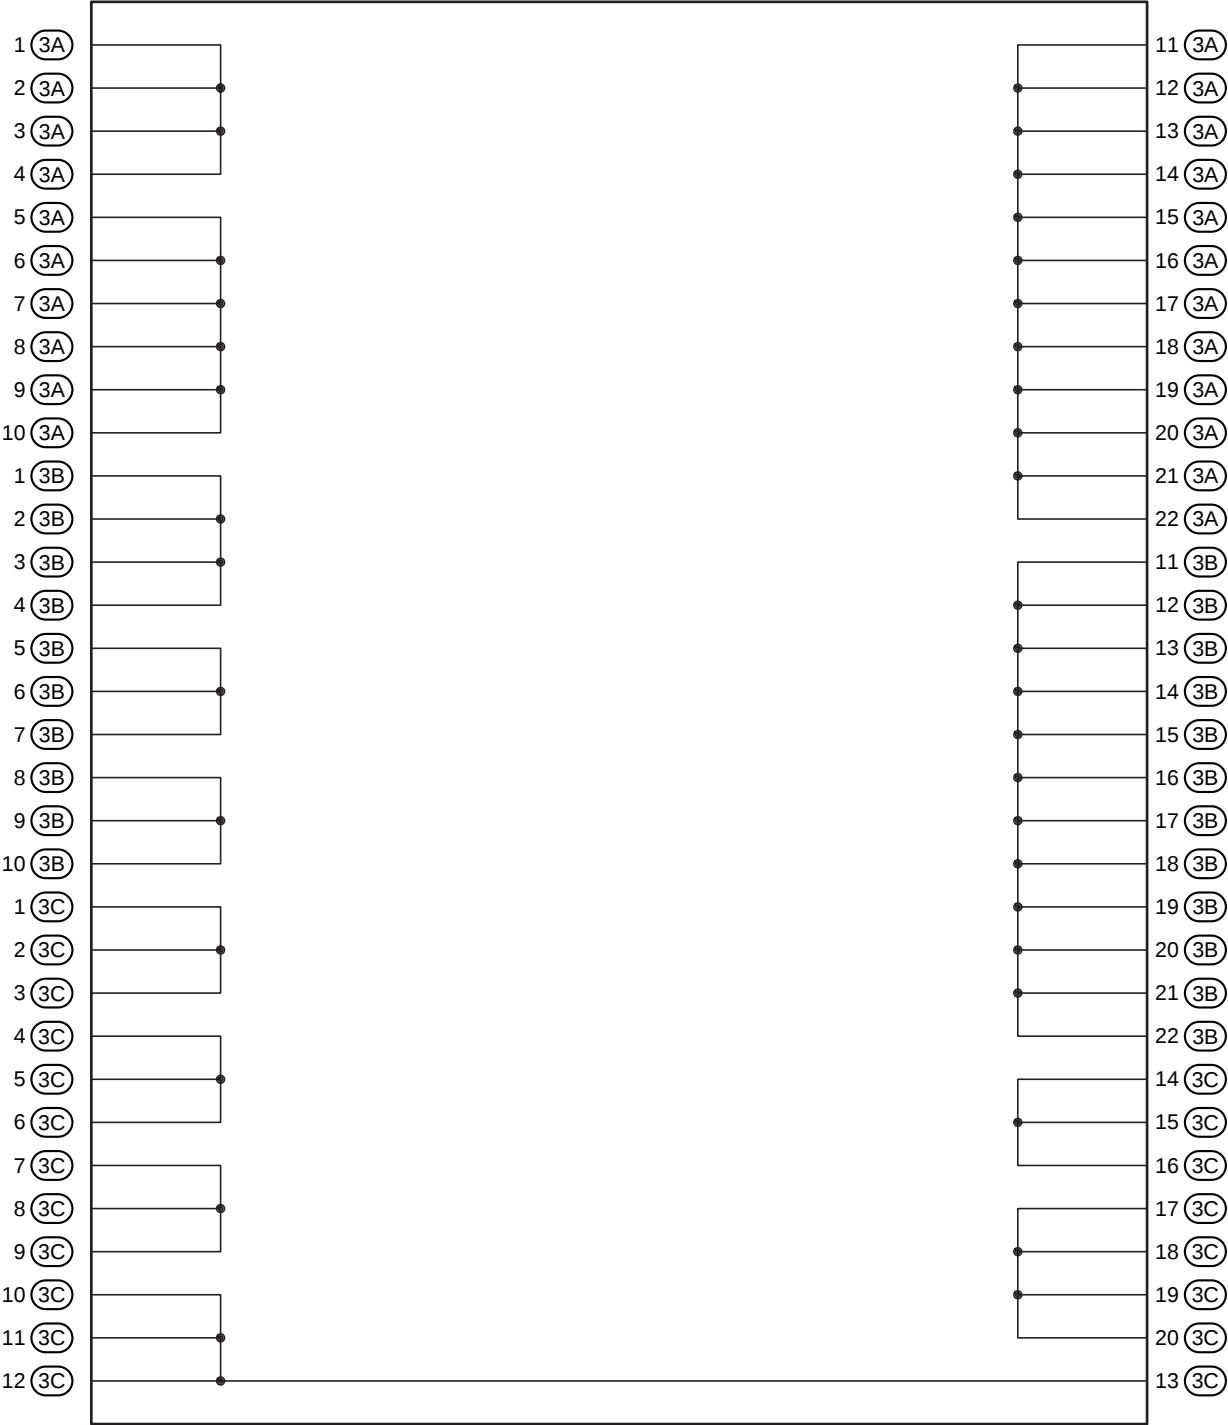

② : ABS R/B


Near the Front Left Suspension Tower (See Page 20)

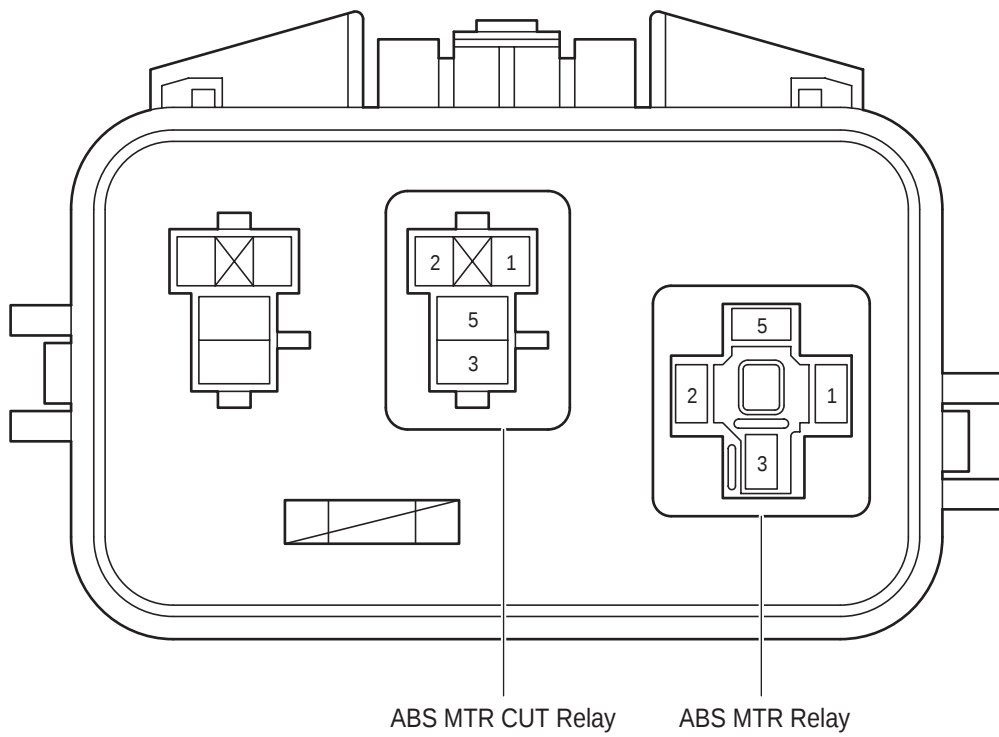

F RELAY LOCATIONS

 : Center J/B

Behind the Combination Meter (See Page 21)

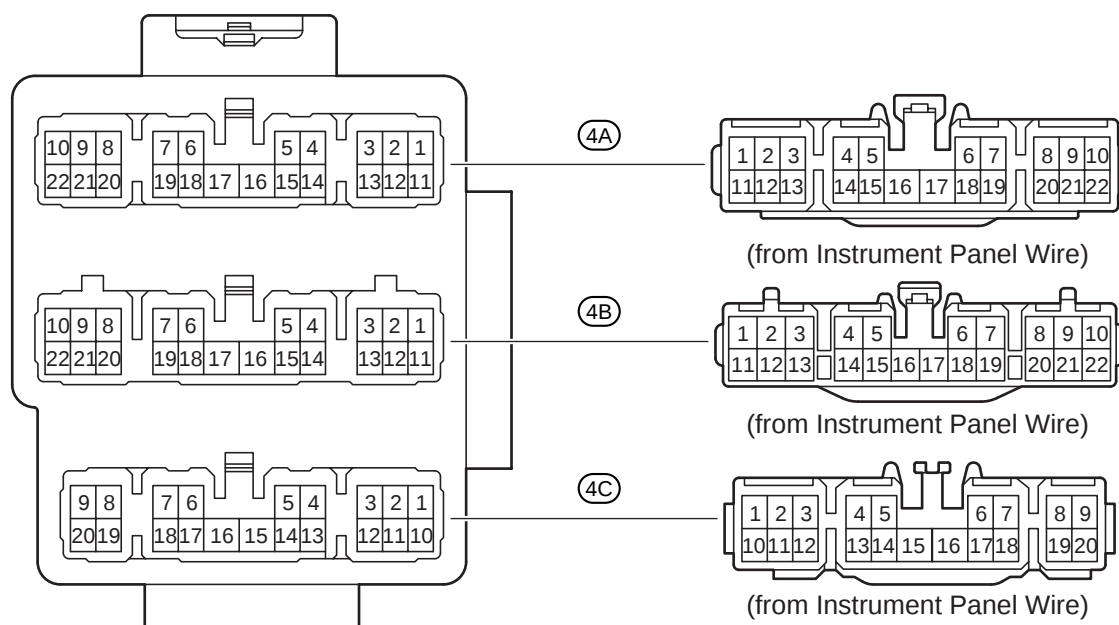

[Center J/B Inner Circuit]

