


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

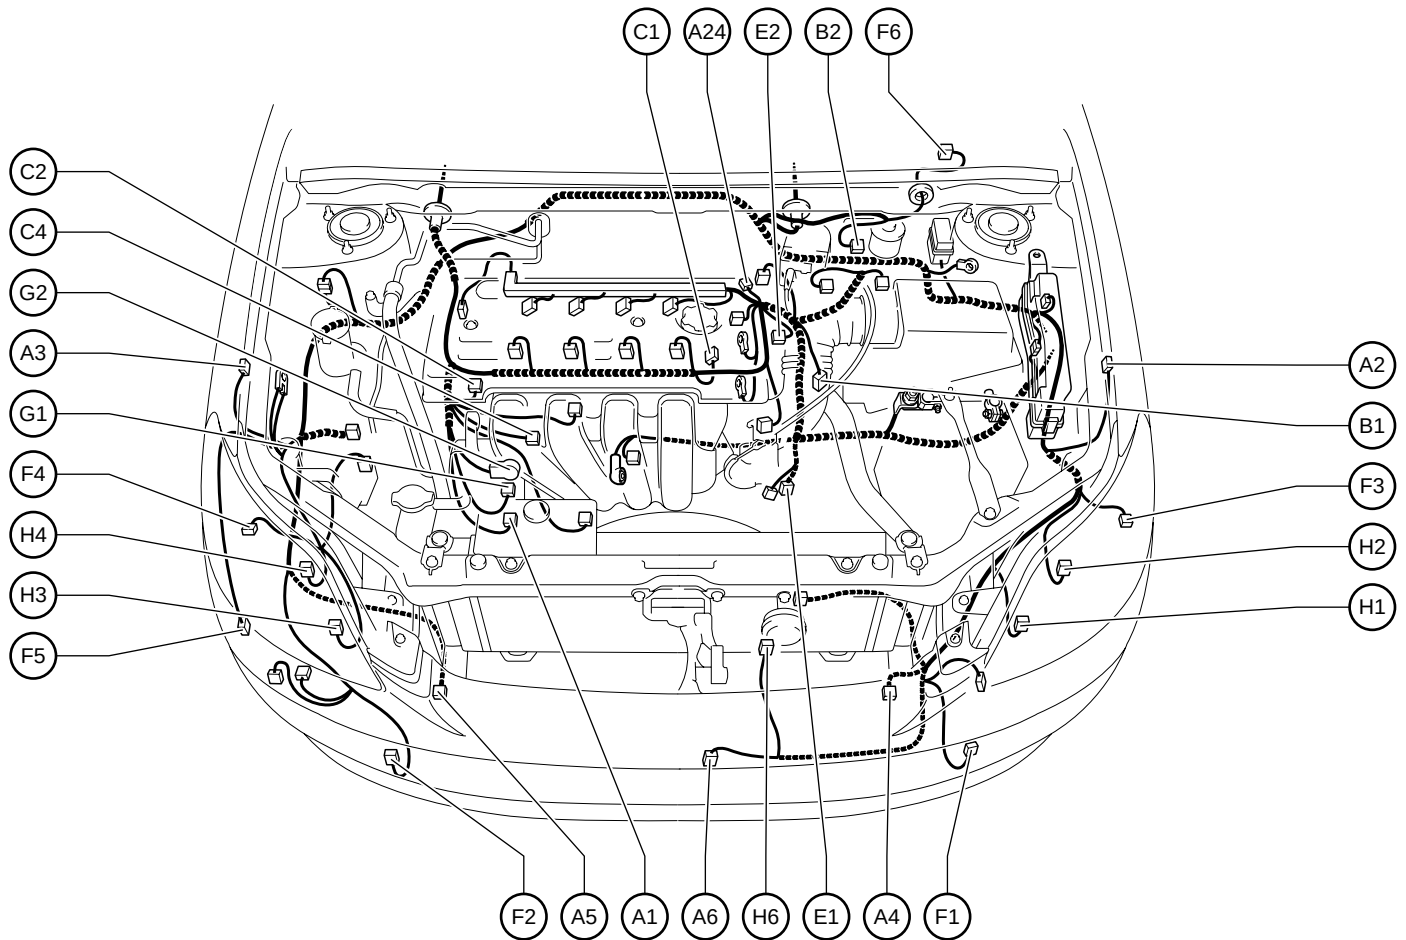

A 1 A/C Magnetic Clutch
 A 2 ABS Speed Sensor Front LH
 A 3 ABS Speed Sensor Front RH
 A 4 Airbag Sensor Front LH
 A 5 Airbag Sensor Front RH
 A 6 Ambient Temp. Sensor
 A24 Air Fuel Ratio Sensor (Bank 1 Sensor 1)

B 1 Back-Up Light SW
 B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
 C 2 Camshaft Timing Oil Control Valve (VVT)
 C 4 Crankshaft Position Sensor


E 1 Electronically Controlled Transmission Solenoid
 E 2 Engine Coolant Temp. Sensor

F 1 Front Fog Light LH
 F 2 Front Fog Light RH
 F 3 Front Parking Light LH
 Front Turn Signal Light LH
 F 4 Front Parking Light RH
 Front Turn Signal Light RH
 F 5 Front Washer Motor
 F 6 Front Wiper Motor

G 1 Generator
 G 2 Generator

H 1 Headlight LH (High)
 H 2 Headlight LH (Low)
 H 3 Headlight RH (High)
 H 4 Headlight RH (Low)
 H 6 Horn

Position of Parts in Engine Compartment

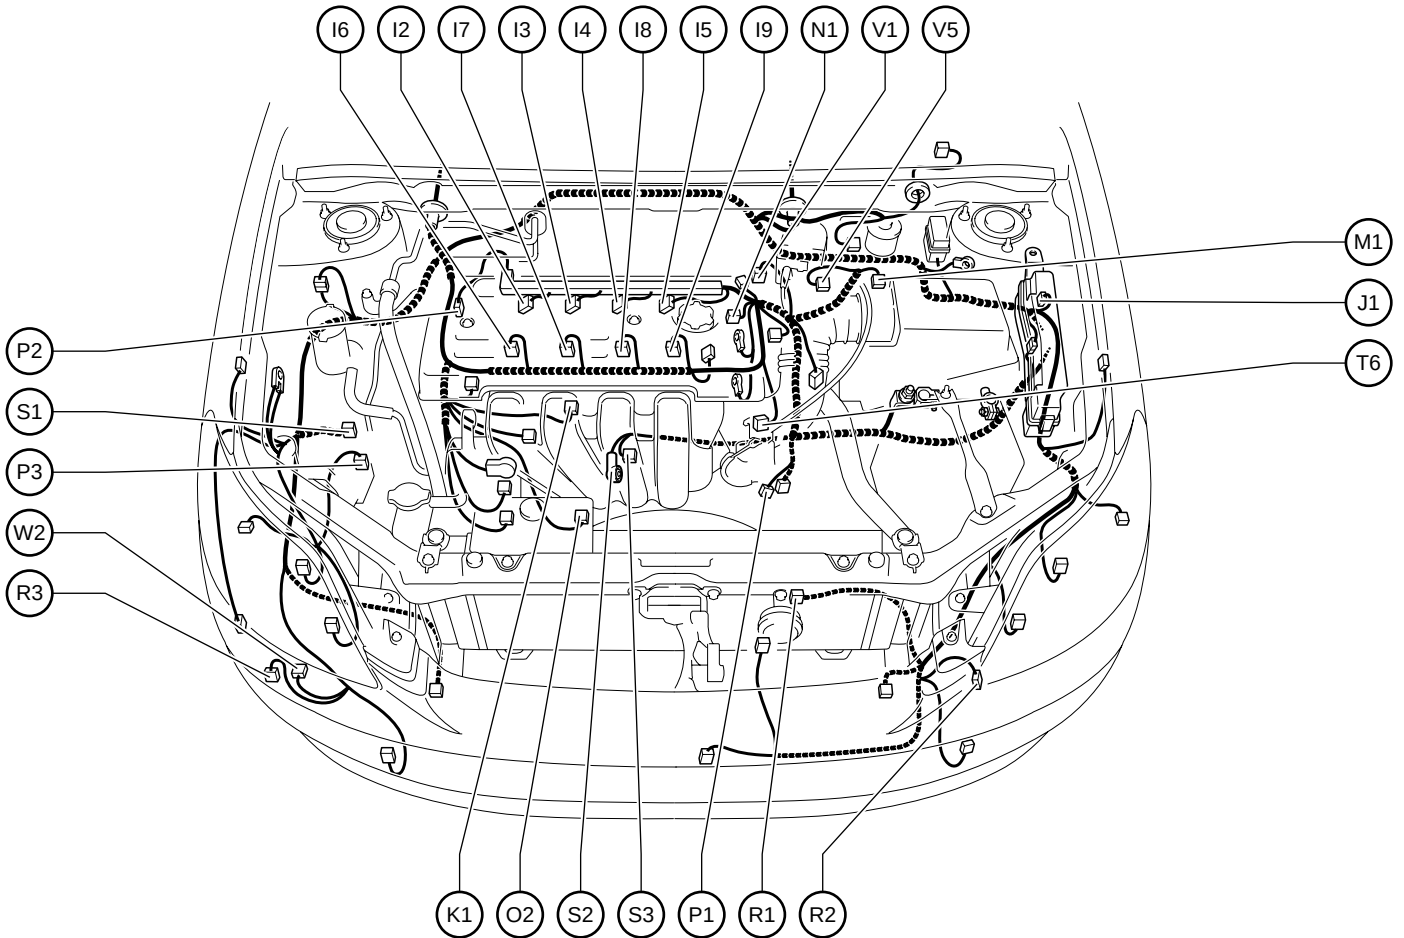

- I 2 Ignition Coil and Igniter No.1
- I 3 Ignition Coil and Igniter No.2
- I 4 Ignition Coil and Igniter No.3
- I 5 Ignition Coil and Igniter No.4
- I 6 Injector No.1
- I 7 Injector No.2
- I 8 Injector No.3
- I 9 Injector No.4

J 1 Junction Connector

K 1 Knock Sensor (Bank 1)

M 1 Mass Air Flow Meter

N 1 Noise Filter (Ignition)

O 2 Oil Pressure SW

- P 1 Park/Neutral Position SW
- P 2 Power Steering Oil Pressure SW
- P 3 Pressure SW

- R 1 Radiator Fan Motor
- R 2 Radiator Fan Resistor
- R 3 Rear Washer Motor

- S 1 Skid Control ECU with Actuator
- S 2 Starter
- S 3 Starter


T 6 Throttle Control Motor
Throttle Position Sensor

- V 1 Vehicle Speed Sensor (Combination Meter)
- V 5 VSV (Purge)

W 2 Washer Level Sensor


G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

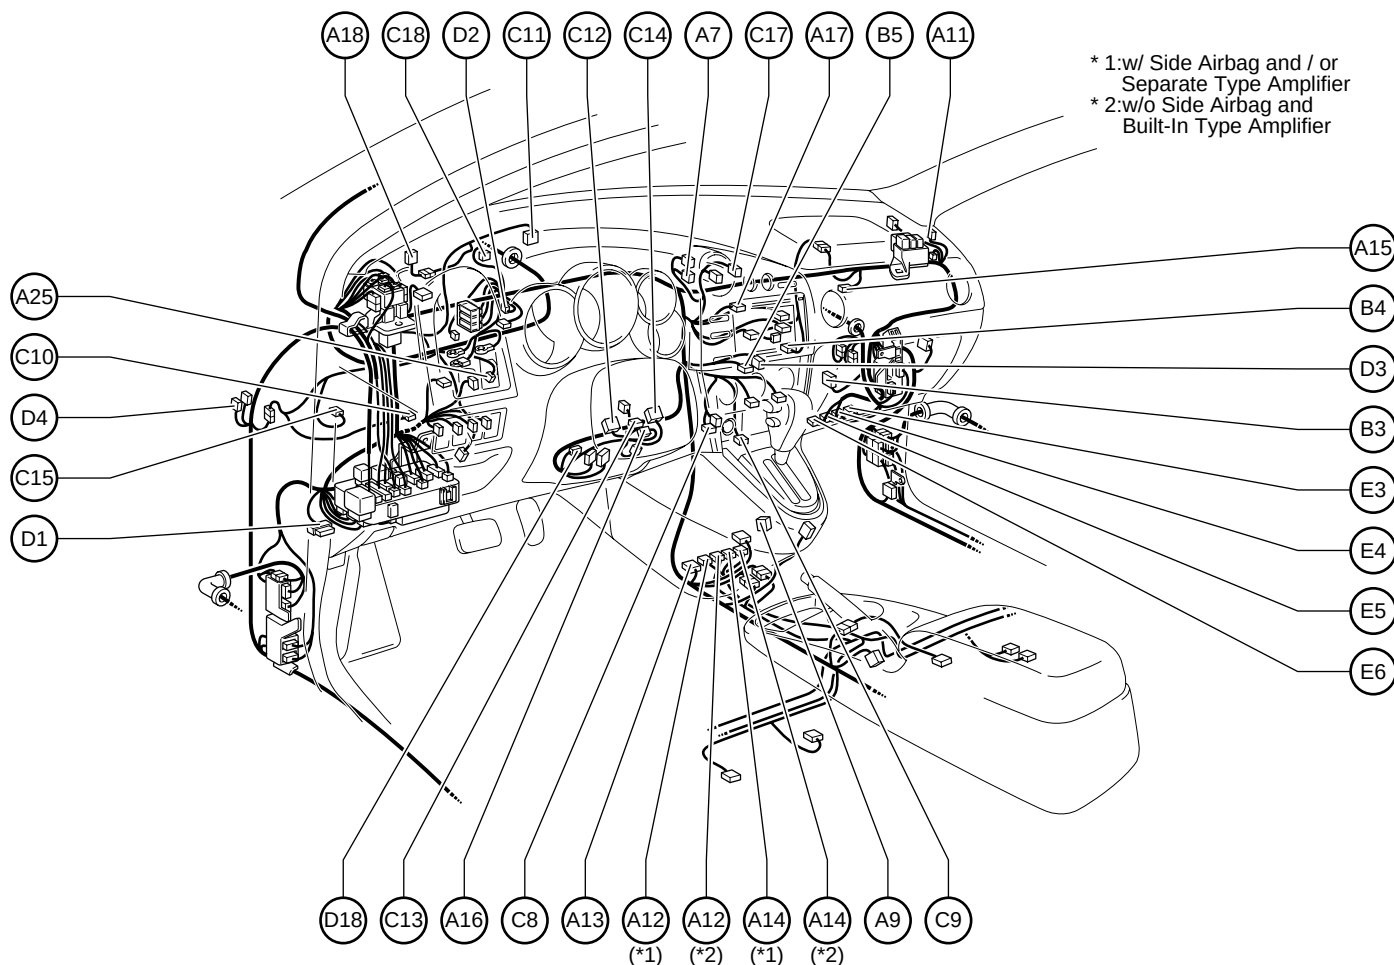

- | | |
|---|---|
| A 7 A/C SW
Air Inlet Control SW | C 8 Cigarette Lighter
Power Outlet (Front) |
| A 9 A/T Shift Lever Illumination
O/D Main SW | C 9 Cigarette Lighter Illumination |
| A 11 Air Inlet Control Servo Motor | C 10 Clutch Start SW |
| A 12 Airbag Sensor Assembly | C 11 Combination Meter |
| A 13 Airbag Sensor Assembly | C 12 Combination SW |
| A 14 Airbag Sensor Assembly | C 13 Combination SW |
| A 15 Airbag Squib (Front Passenger Airbag Assembly) | C 14 Combination SW |
| A 16 Airbag Squib (Steering Wheel Pad) | C 15 Cruise Control Clutch SW |
| A 17 Antenna Amplifier | C 17 Clock |
| A 18 Automatic Light Control Sensor | Front Passenger Seat Belt Warning Light |
| A 25 Accel Position Sensor | Option Connector
(Passenger Airbag ON-OFF Indicator Light) |
| | C 18 Combination Meter |
| B 3 Blower Motor | D 1 Data Link Connector 3 |
| B 4 Blower Resistor | D 2 Daytime Running Light Relay |
| B 5 Blower SW | D 3 Defroster Mode SW |
| | D 4 Diode (IG Relay) |
| | D 18 Diode (Rear Wiper) |
| | E 3 Engine Control Module |
| | E 4 Engine Control Module |
| | E 5 Engine Control Module |
| | E 6 Engine Control Module |

Position of Parts in Instrument Panel

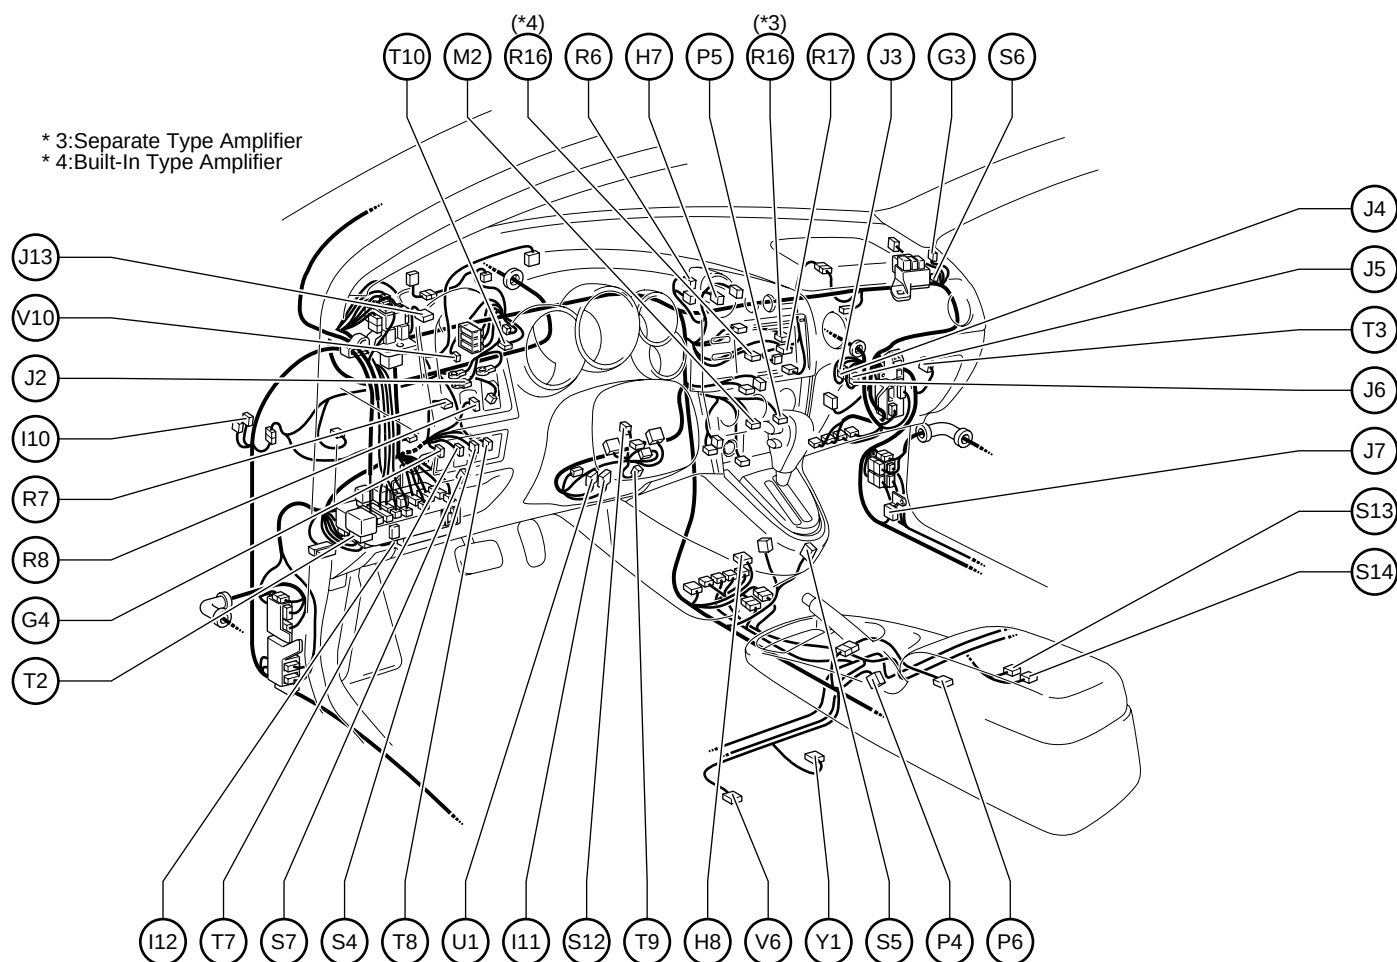

G 3 Glass Breakage Sensor ECU

G 4 Glass Hatch Opener SW

H 7 Hazard SW

H 8 Heated Oxygen Sensor (Bank 1 Sensor 2)

I 10 IG Relay

I 11 Ignition SW

I 12 Integration Relay

J 2 Junction Connector

J 3 Junction Connector

J 4 Junction Connector

J 5 Junction Connector

J 6 Junction Connector

J 7 Junction Connector

J 13 Junction Connector

M 2 Main SW

P 4 Parking Brake SW

P 5 Power Outlet (115V)

P 6 Power Outlet (Rear)

R 6 Rear Window Defogger SW

R 7 Remote Control Mirror SW

R 8 Rheostat

R16 Radio and Player

R17 Radio and Player

S 4 Security Indicator

S 5 Shift Lock Control ECU

S 6 Starter Cut Relay

S 7 Stop Light SW

S12 Steering Sensor

S13 Stereo Component Amplifier

S14 Stereo Component Amplifier

T 2 Turn Signal Flasher Relay

T 3 TVIP ECU

T 7 Tire Pressure Warning Reset SW

T 8 TRAC OFF SW

T 9 Transponder Key Amplifier

T10 Transponder Key Computer

U 1 Unlock Warning SW


V 6 Voltage Inverter

V10 VSC Warning Buzzer

Y 1 Yaw Rate Sensor

G ELECTRICAL WIRING ROUTING

Position of Parts in Body	
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	10
11	11
12	12
13	13
14	14
15	15
16	16
17	17
18	18
19	19
20	20
21	21
22	22
23	23
24	24
25	25
26	26
27	27
28	28
29	29
30	30
31	31
32	32
33	33
34	34
35	35
36	36
37	37
38	38
39	39
40	40
41	41
42	42
43	43
44	44
45	45
46	46
47	47
48	48
49	49
50	50
51	51
52	52
53	53
54	54
55	55
56	56
57	57
58	58
59	59
60	60
61	61
62	62
63	63
64	64
65	65
66	66
67	67
68	68
69	69
70	70
71	71
72	72
73	73
74	74
75	75
76	76
77	77
78	78
79	79
80	80
81	81
82	82
83	83
84	84
85	85
86	86
87	87
88	88
89	89
90	90
91	91
92	92
93	93
94	94
95	95
96	96
97	97
98	98
99	99
100	100

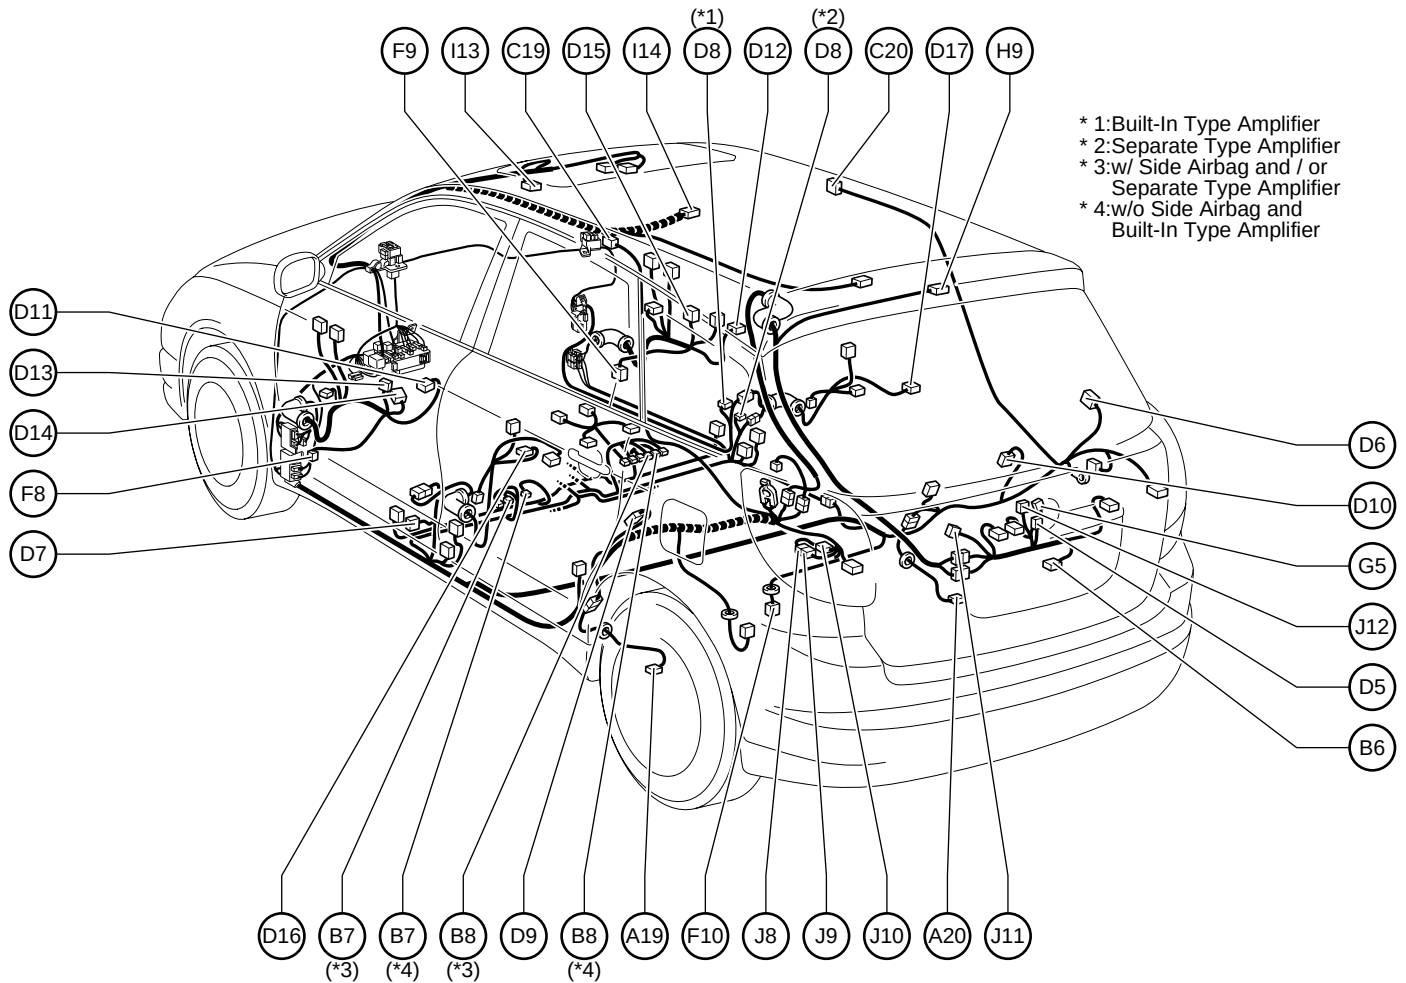

- A19 ABS Speed Sensor Rear LH
A20 ABS Speed Sensor Rear RH

- B 6 Back Door Courtesy SW
Back Door Lock Motor
- B 7 Buckle SW LH
Seat Position Sensor
- B 8 Buckle SW RH
Occupant Detection Sensor

- C19 Curtain Shield Airbag Squib LH
C20 Curtain Shield Airbag Squib RH

- D 5 Diode (Door Courtesy)
- D 6 Door Control Receiver
- D 7 Door Courtesy SW Front LH
- D 8 Door Courtesy SW Front RH
- D 9 Door Courtesy SW Rear LH
- D10 Door Courtesy SW Rear RH
- D11 Door Key Lock and Unlock SW Front LH
 - Door Lock Motor Front LH
 - Door Unlock Detection SW Front LH
- D12 Door Key Lock and Unlock SW Front RH
 - Door Lock Motor Front RH
 - Door Unlock Detection SW Front RH
- D13 Door Lock Control SW Front LH
- D14 Door Lock Control SW Front LH
 - Power Window Master SW

- | | |
|-----|----------------------------------|
| D15 | Door Lock Control SW Front RH |
| D16 | Door Lock Motor Rear LH |
| | Door Unlock Detection SW Rear LH |
| D17 | Door Lock Motor Rear RH |
| | Door Unlock Detection SW Rear RH |

- F 8 Front Door Speaker LH
F 9 Front Door Speaker RH
F10 Fuel Pump
Fuel Sender


- G 5 Glass Hatch Courtesy SW
Glass Hatch Opener Motor

- ## H 9 High Mounted Stop Light

- I 13 Inner Mirror
Personal Light
I 14 Interior Light

- J 8 Junction Connector
J 9 Junction Connector
J 10 Junction Connector
J 11 Junction Connector
J 12 Junction SW

Position of Parts in Body

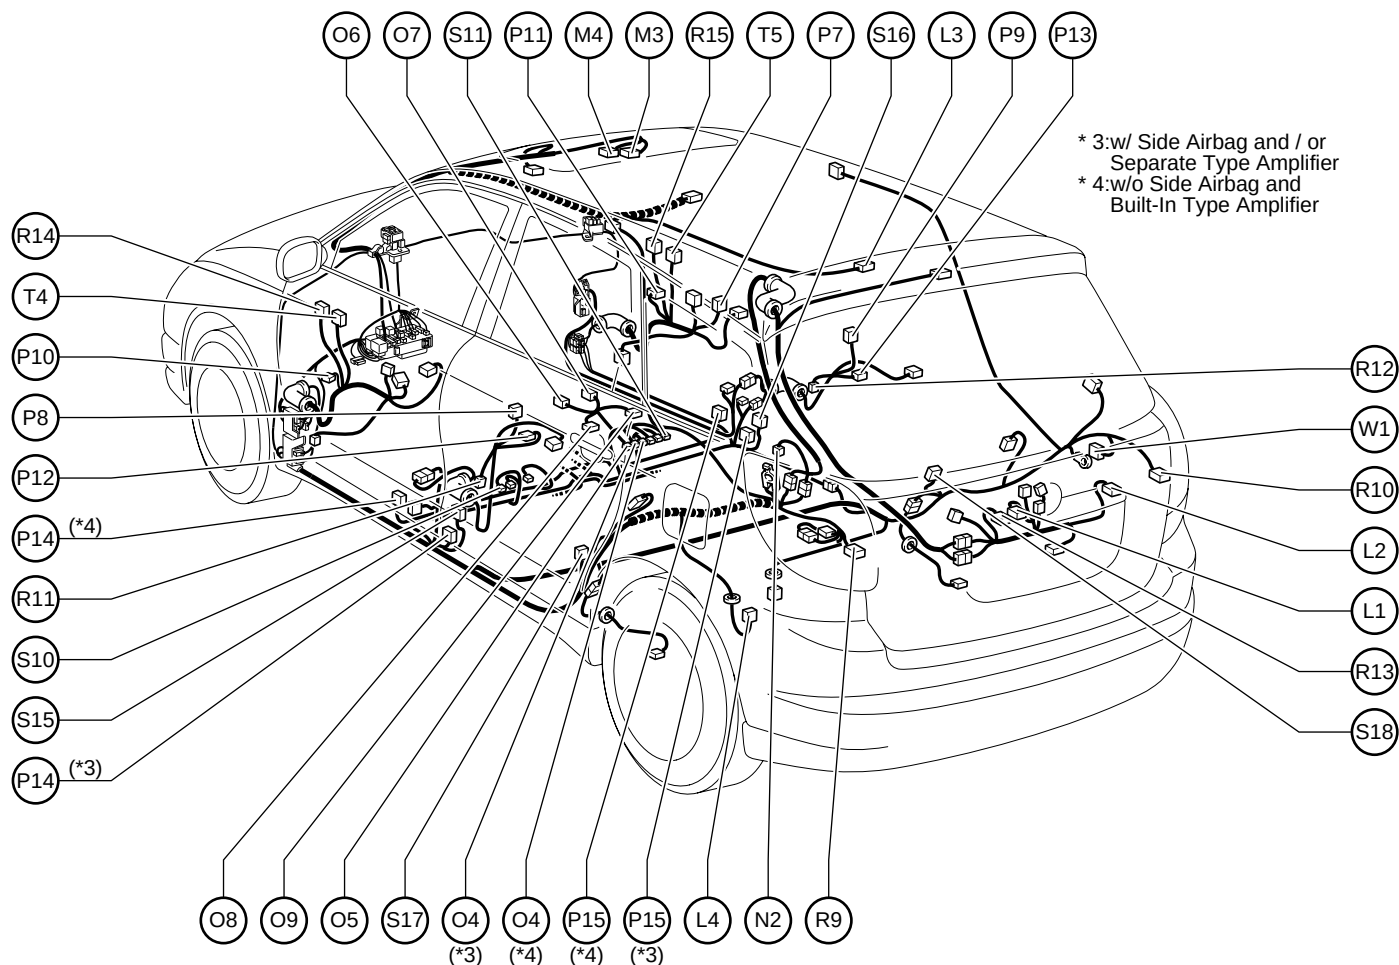

L 1 License Plate Light LH
 L 2 License Plate Light RH
 L 3 Luggage Compartment Light
 L 4 Canister Pump Module

M 3 Moon Roof Control Relay and SW
 Personal Light
 M 4 Moon Roof Motor and Limit SW

N 2 Noise Filter (Rear Window Defogger)

O 4 Occupant Classification ECU
 O 5 Occupant Classification ECU
 O 6 Occupant Classification Sensor Front LH
 O 7 Occupant Classification Sensor Front RH
 O 8 Occupant Classification Sensor Rear LH
 O 9 Occupant Classification Sensor Rear RH

P 7 Power Window Control SW Front RH
 P 8 Power Window Control SW Rear LH
 P 9 Power Window Control SW Rear RH
 P10 Power Window Motor Front LH
 P11 Power Window Motor Front RH
 P12 Power Window Motor Rear LH
 P13 Power Window Motor Rear RH
 P14 Pretensioner LH
 P15 Pretensioner RH

R 9 Rear Combination Light LH
 R10 Rear Combination Light RH
 R11 Rear Door Speaker LH
 R12 Rear Door Speaker RH
 R13 Rear Wiper Relay
 R14 Remote Control Mirror LH
 R15 Remote Control Mirror RH

S10 Side Airbag Squib LH
 S11 Side Airbag Squib RH
 S15 Side Airbag Sensor Front LH
 S16 Side Airbag Sensor Front RH
 S17 Side Airbag Sensor Rear LH
 S18 Side Airbag Sensor Rear RH


T 4 Tweeter LH
 T 5 Tweeter RH

W 1 Woofer

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

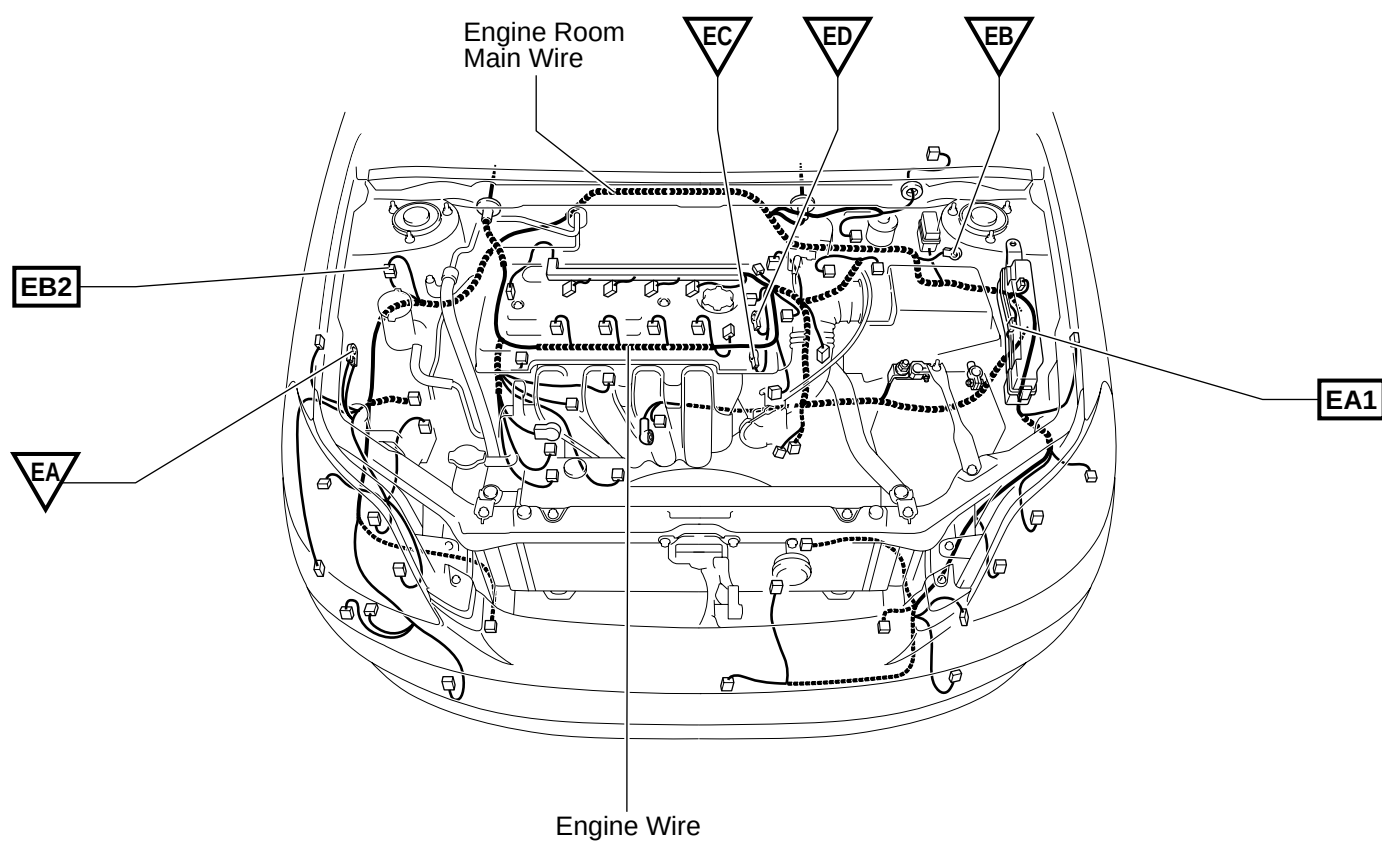


G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

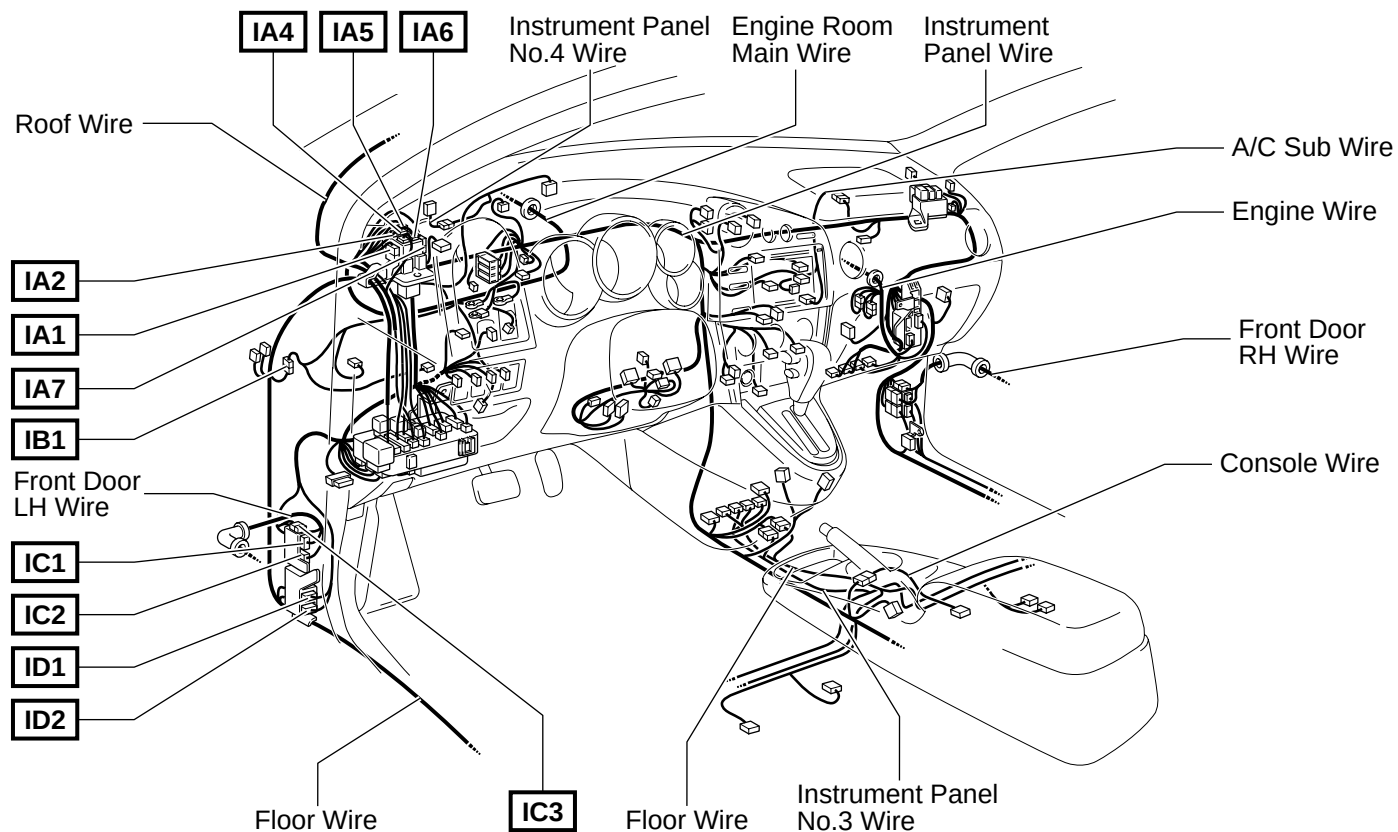

▽ : Location of Ground Points

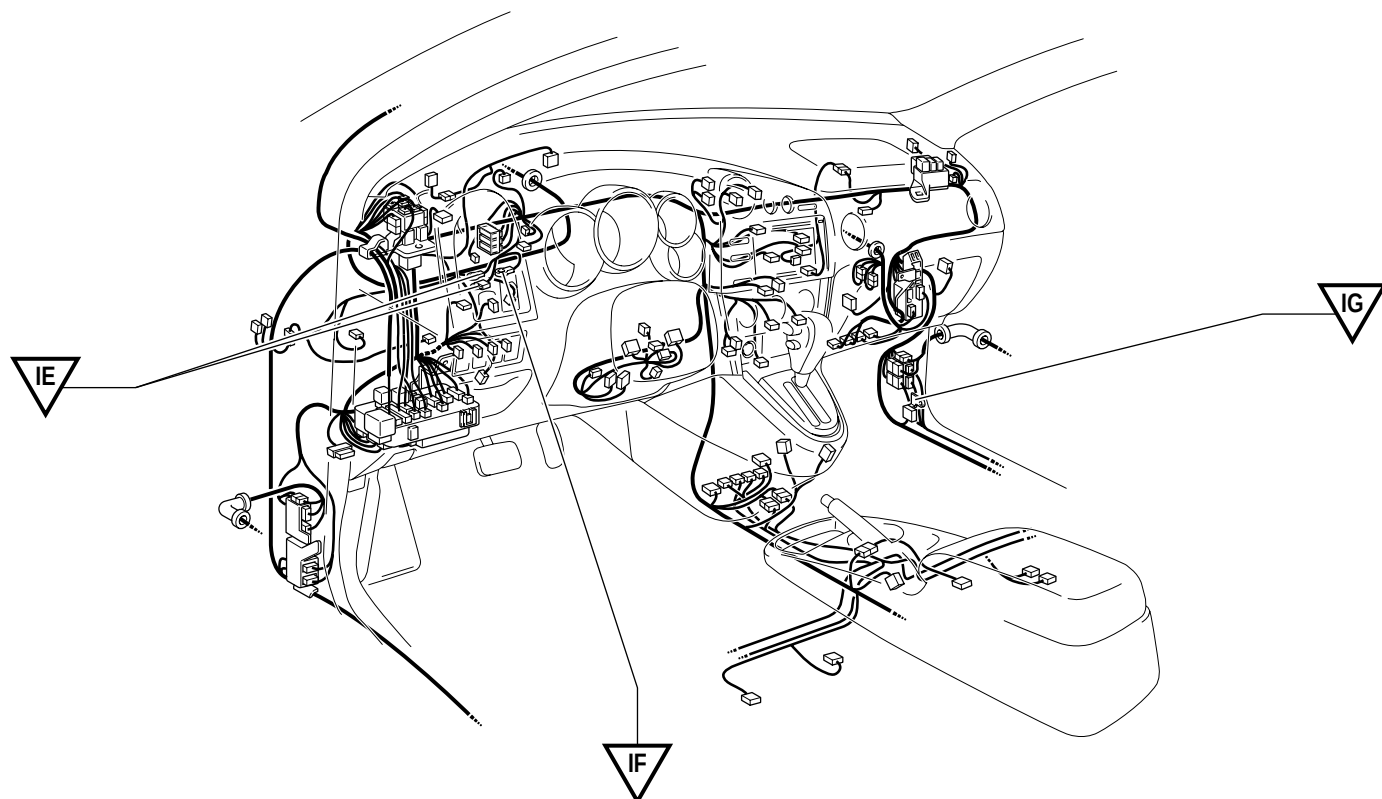

: Location of Connector Joining Wire Harness and Wire Harness

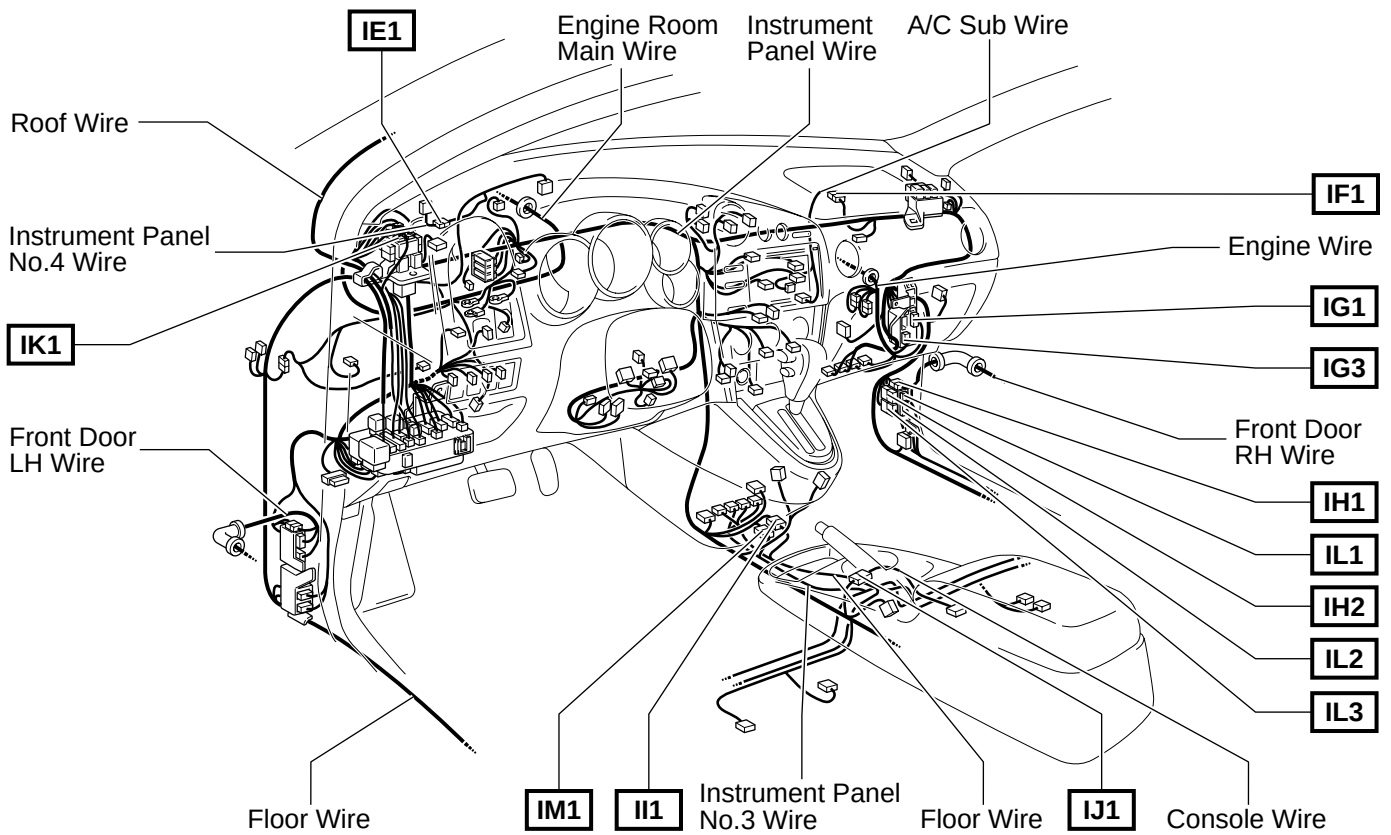

G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

