

### : Parts Location

Code		See Page	Code		See Page	Code		See Page
C10		36	J5	В	37	S2	Α	35
E3	А	36	J6	Α	37	S3	В	35
l11		37	J7		37	S6		37
J2		37	P1		35	T3		37

#### : Relay Blocks

	Code	See Page	Relay Blocks (Relay Block Location)
I	1	23	Engine Room R/B (Engine Compartment Left)

# : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)	
IF	- 25		
IH		Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)	
IL	24		
IM			
1A	23	Engine Wire and Engine Room J/B (Engine Compartment Left)	

### : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2		
IA4	42	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IA5		
IG1	43	Engine Wire and Instrument Panel Wire (Blower Unit RH)
IG3	40	Linguise ville and institution it arise ville (blower blittiti)

## : Ground Points

Code	See Page	Ground Points Location	
IE	42	Behind Combination Meter	
IG	42	Right Kick Panel	