


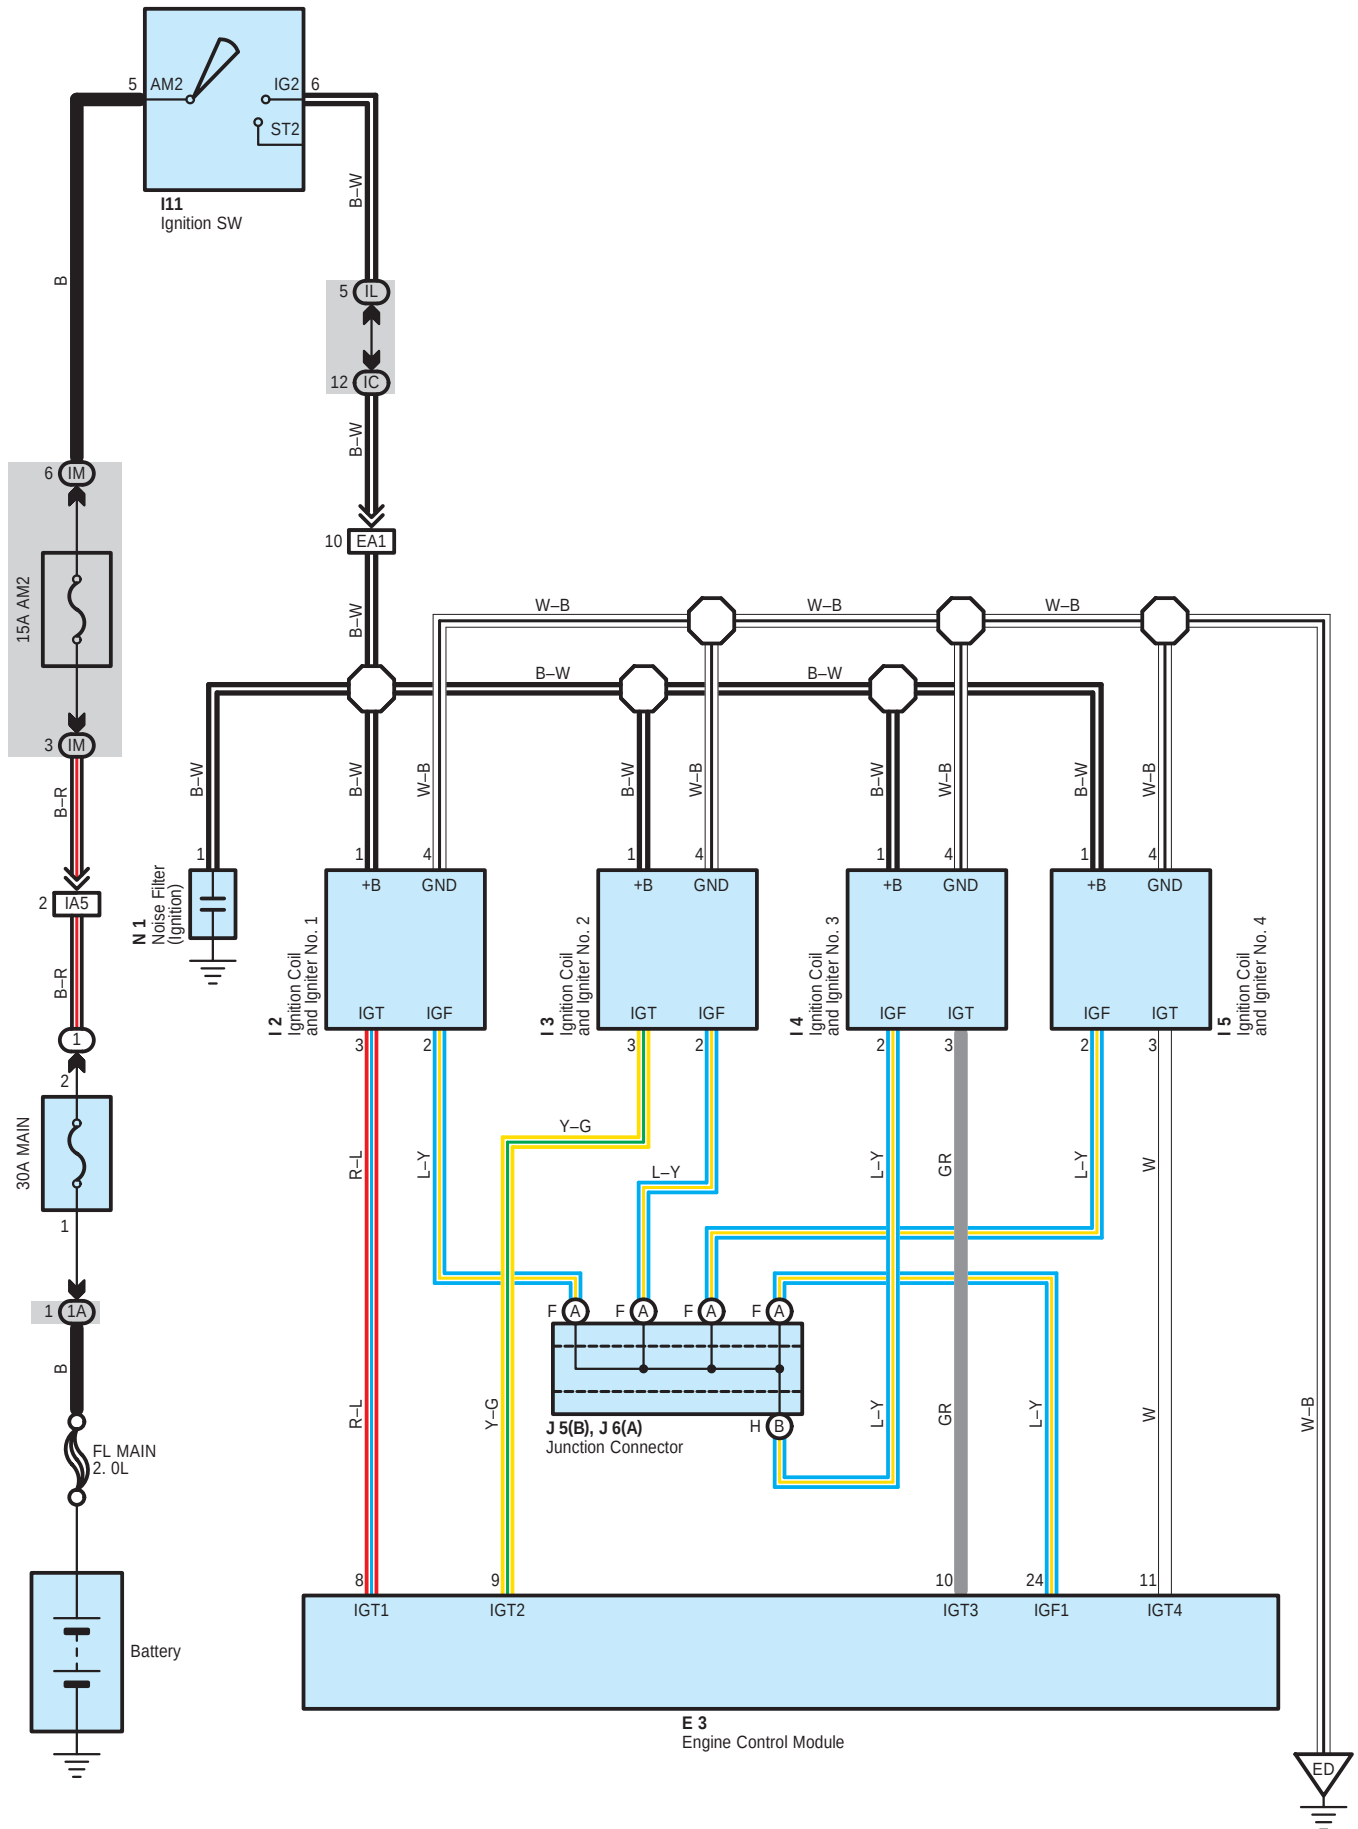

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
E3	36	I4	35	J5	B 37
I2	35	I5	35	J6	A 37
I3	35	I11	37	N1	35

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IL	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IM		
1A	23	Engine Wire and Engine Room J/B (Engine Compartment Left)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	40	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
IA5	42	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)

 : Ground Points

Code	See Page	Ground Points Location
ED	40	Left Side of the Cylinder Head