



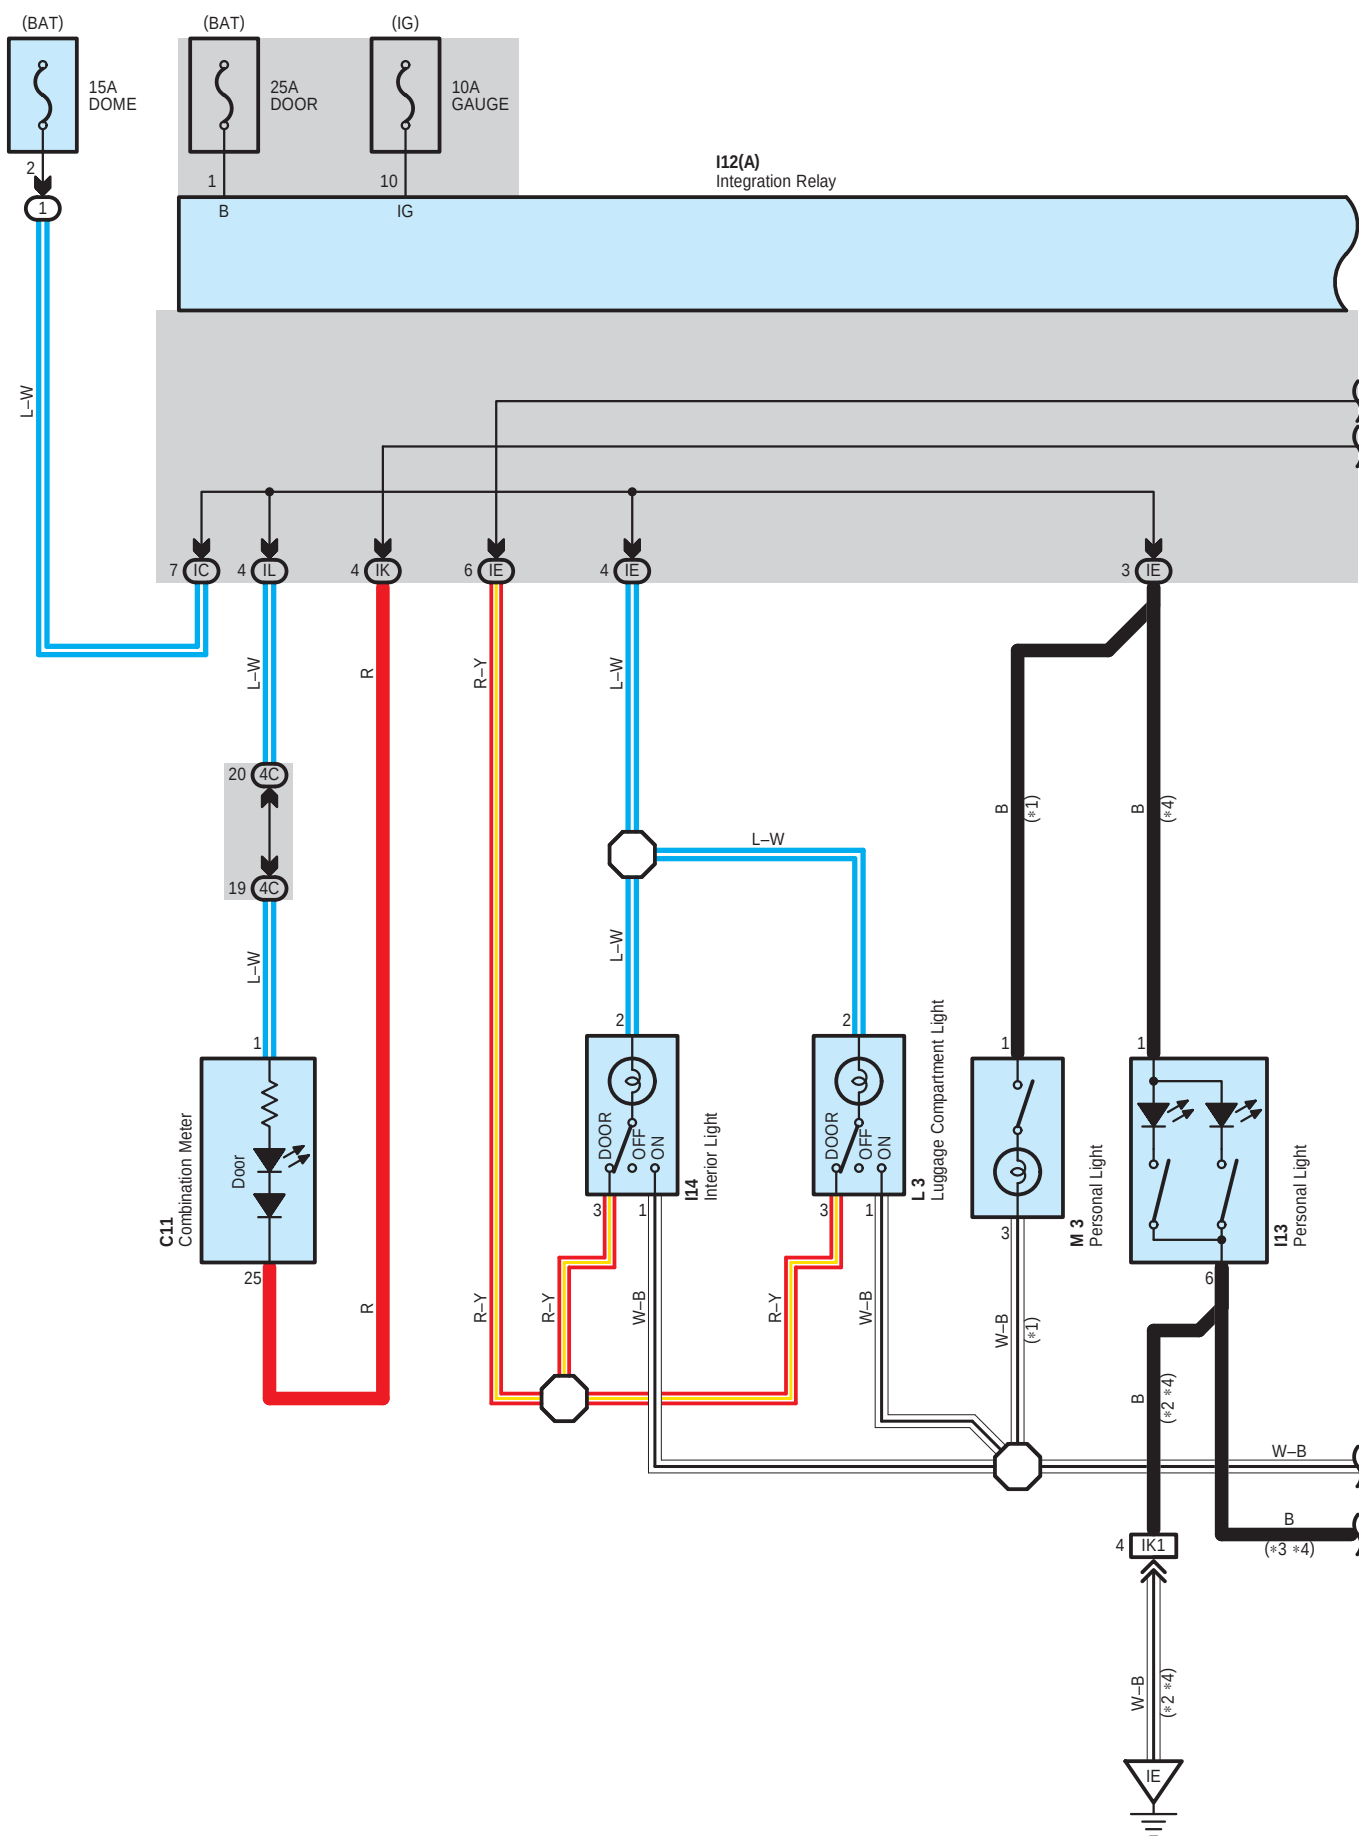


- * 1 : w/ Moon Roof
- * 2 : w/ Automatic Glare-Resistant EC Mirror
- * 3 : w/o Automatic Glare-Resistant EC Mirror
- * 4 : w/o Moon Roof

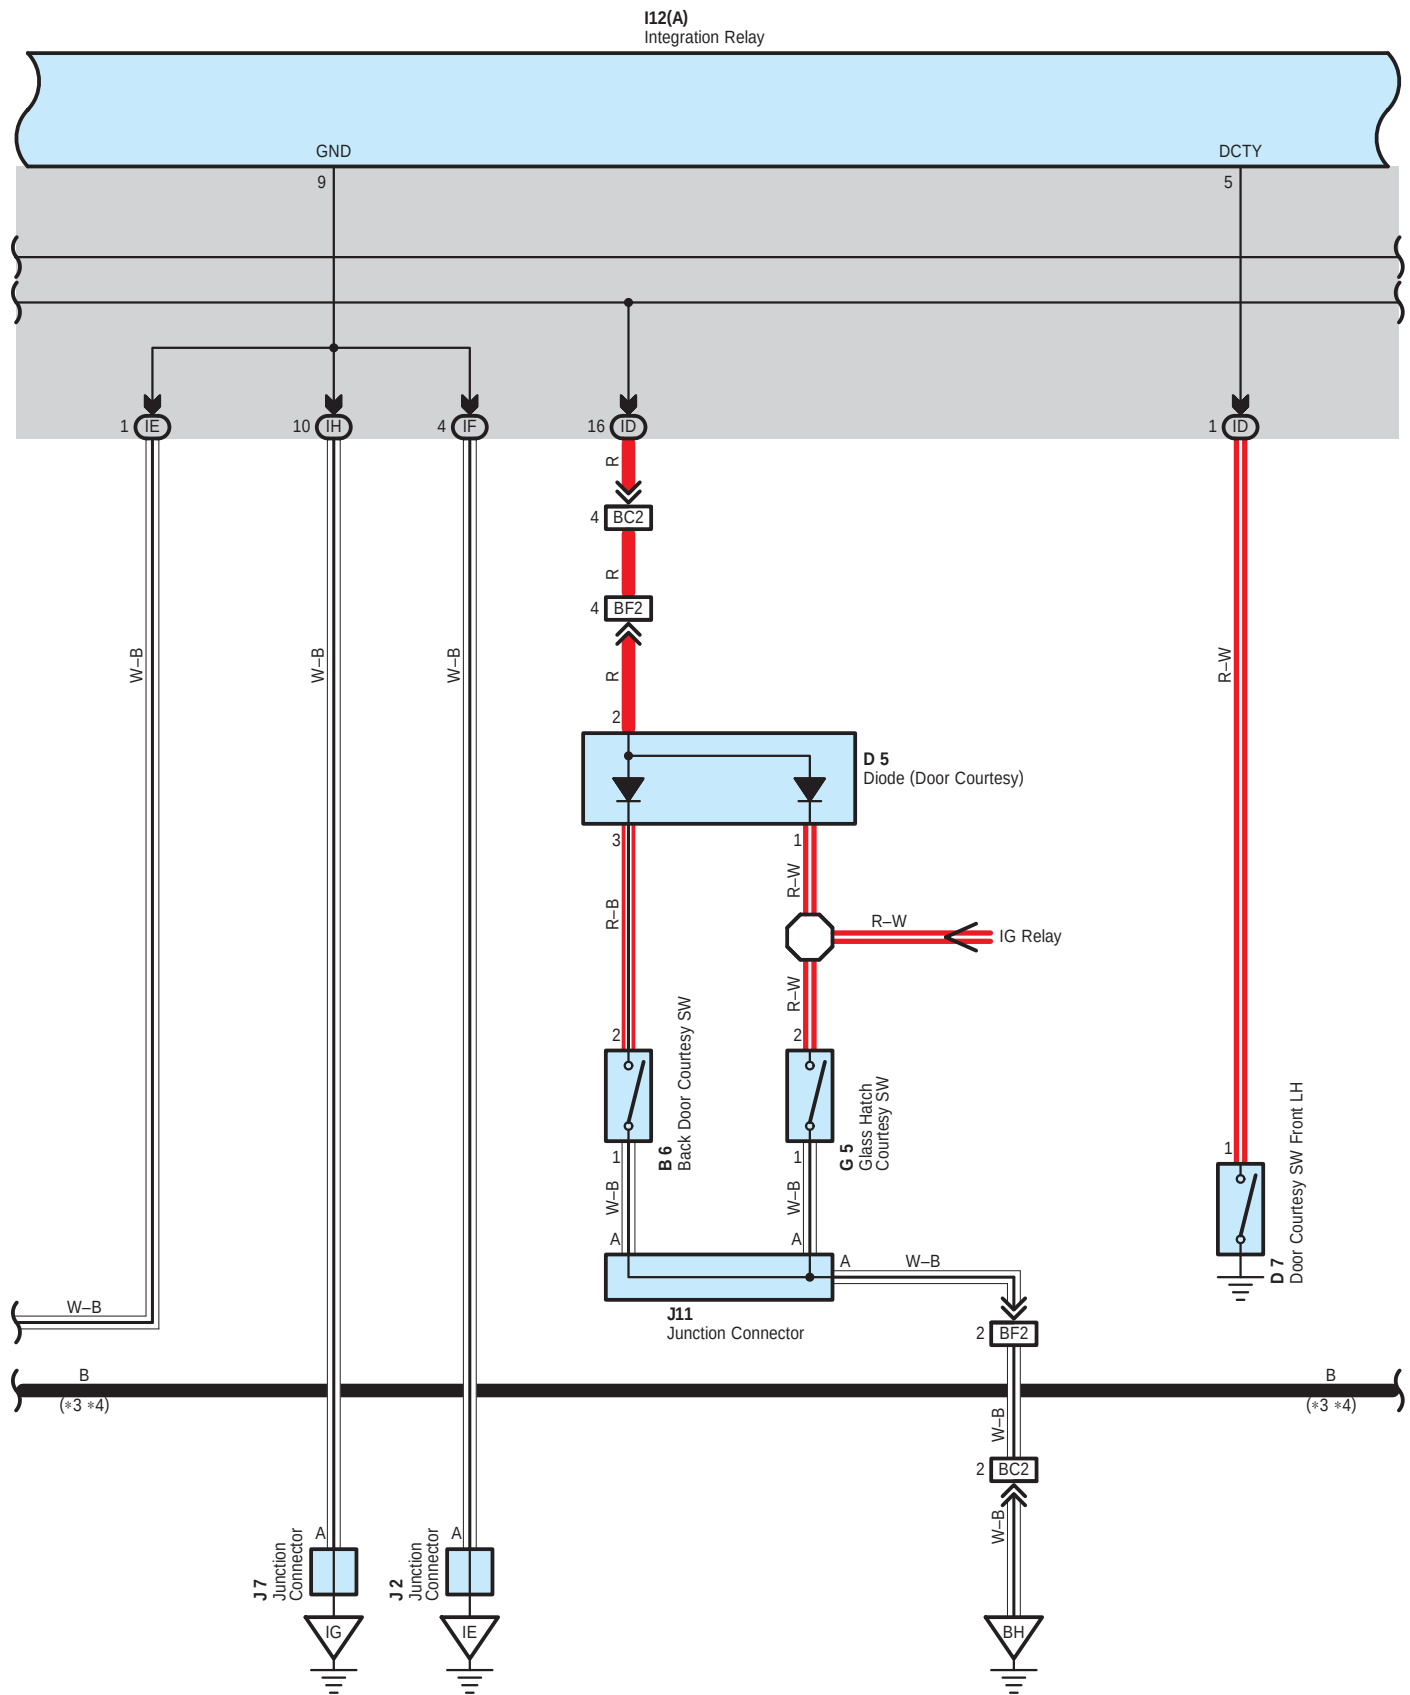

Interior Light

- * 3 : w/o Automatic Glare-Resistant EC Mirror
- * 4 : w/o Moon Roof
- * 5 : w/o Door Lock Control
- * 6 : w/ Door Lock Control
- * 7 : Separate Type Amplifier
- * 8 : Built-in Type Amplifier

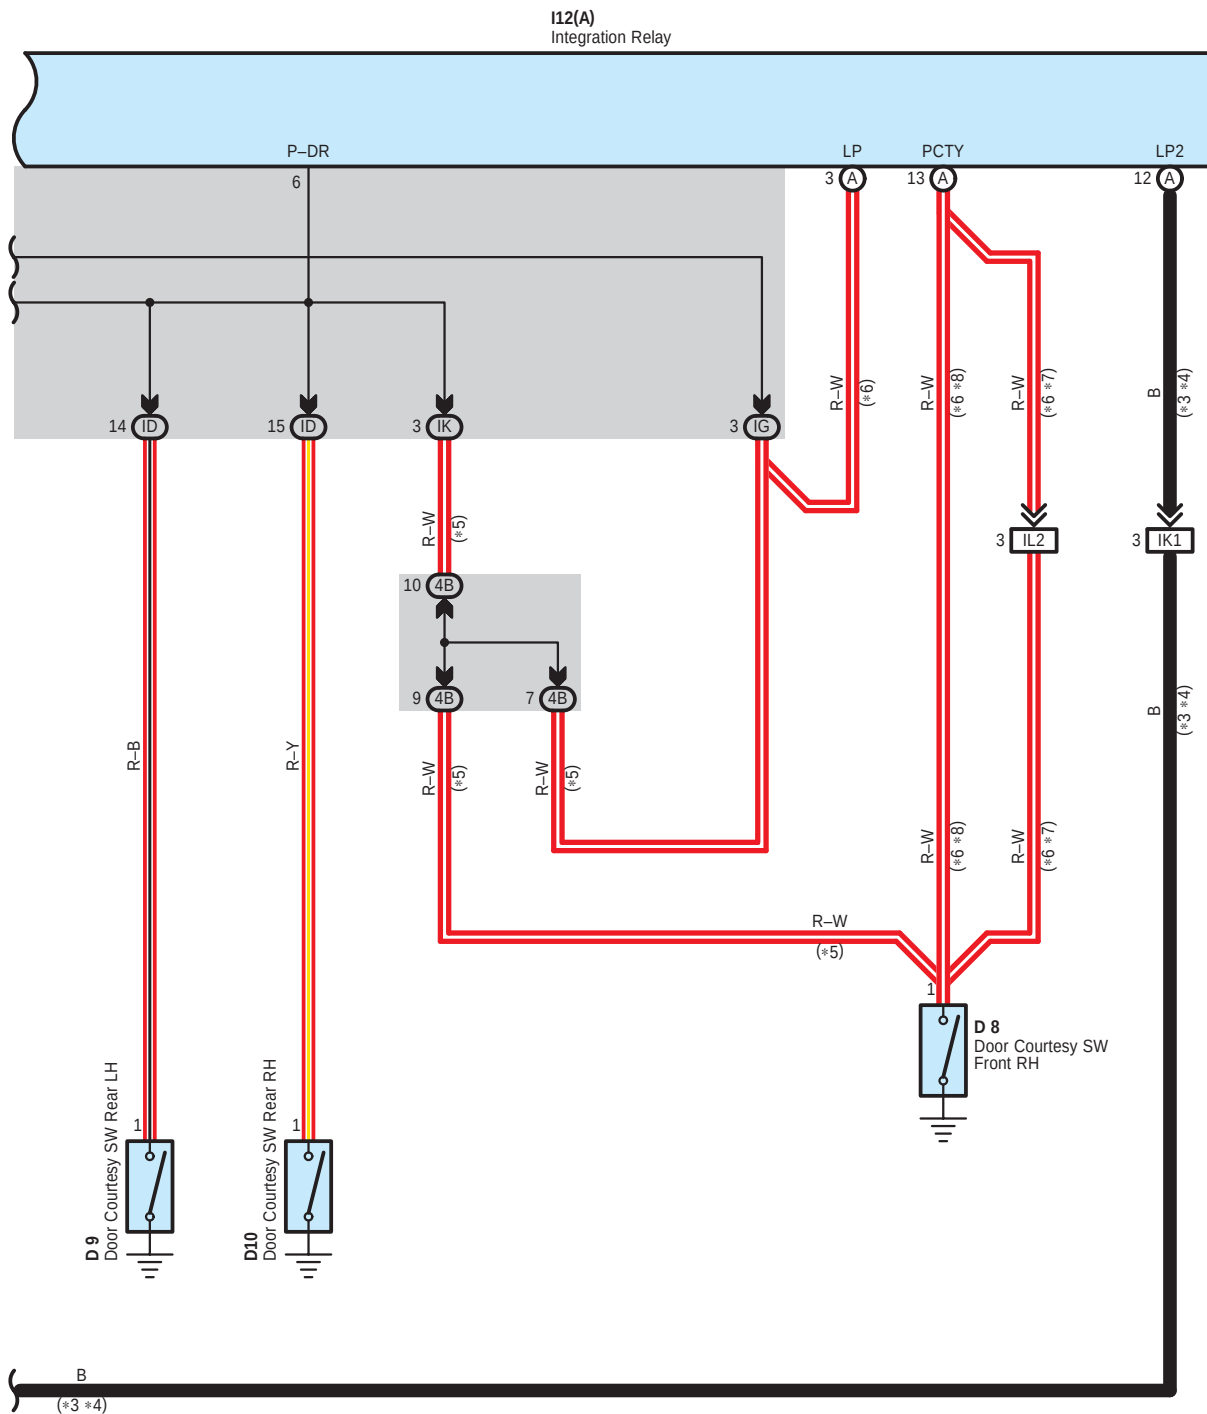

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
B6	38	D10	38	J7	37
C11	36	G5	38	J11	38
D5	38	I12	A 37	L3	39
D7	38	I13	38	M3	39
D8	38	I14	38		
D9	38	J2	37		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IE	25	Roof Wire and Instrument Panel J/B (Lower Finish Panel)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IG		
IH		
IK		
IL	24	
4B	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
4C		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IK1	43	Roof Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IL2	43	Floor Wire and Instrument Panel Wire (Right Kick Panel)
BC2	44	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
BF2	44	Back Door No.1 Wire and Back Door No.2 Wire (Back Panel LH)

 : Ground Points

Code	See Page	Ground Points Location
IE	42	Behind Combination Meter
IG	42	Right Kick Panel
BH	44	Left Quarter Panel