


Stop Light

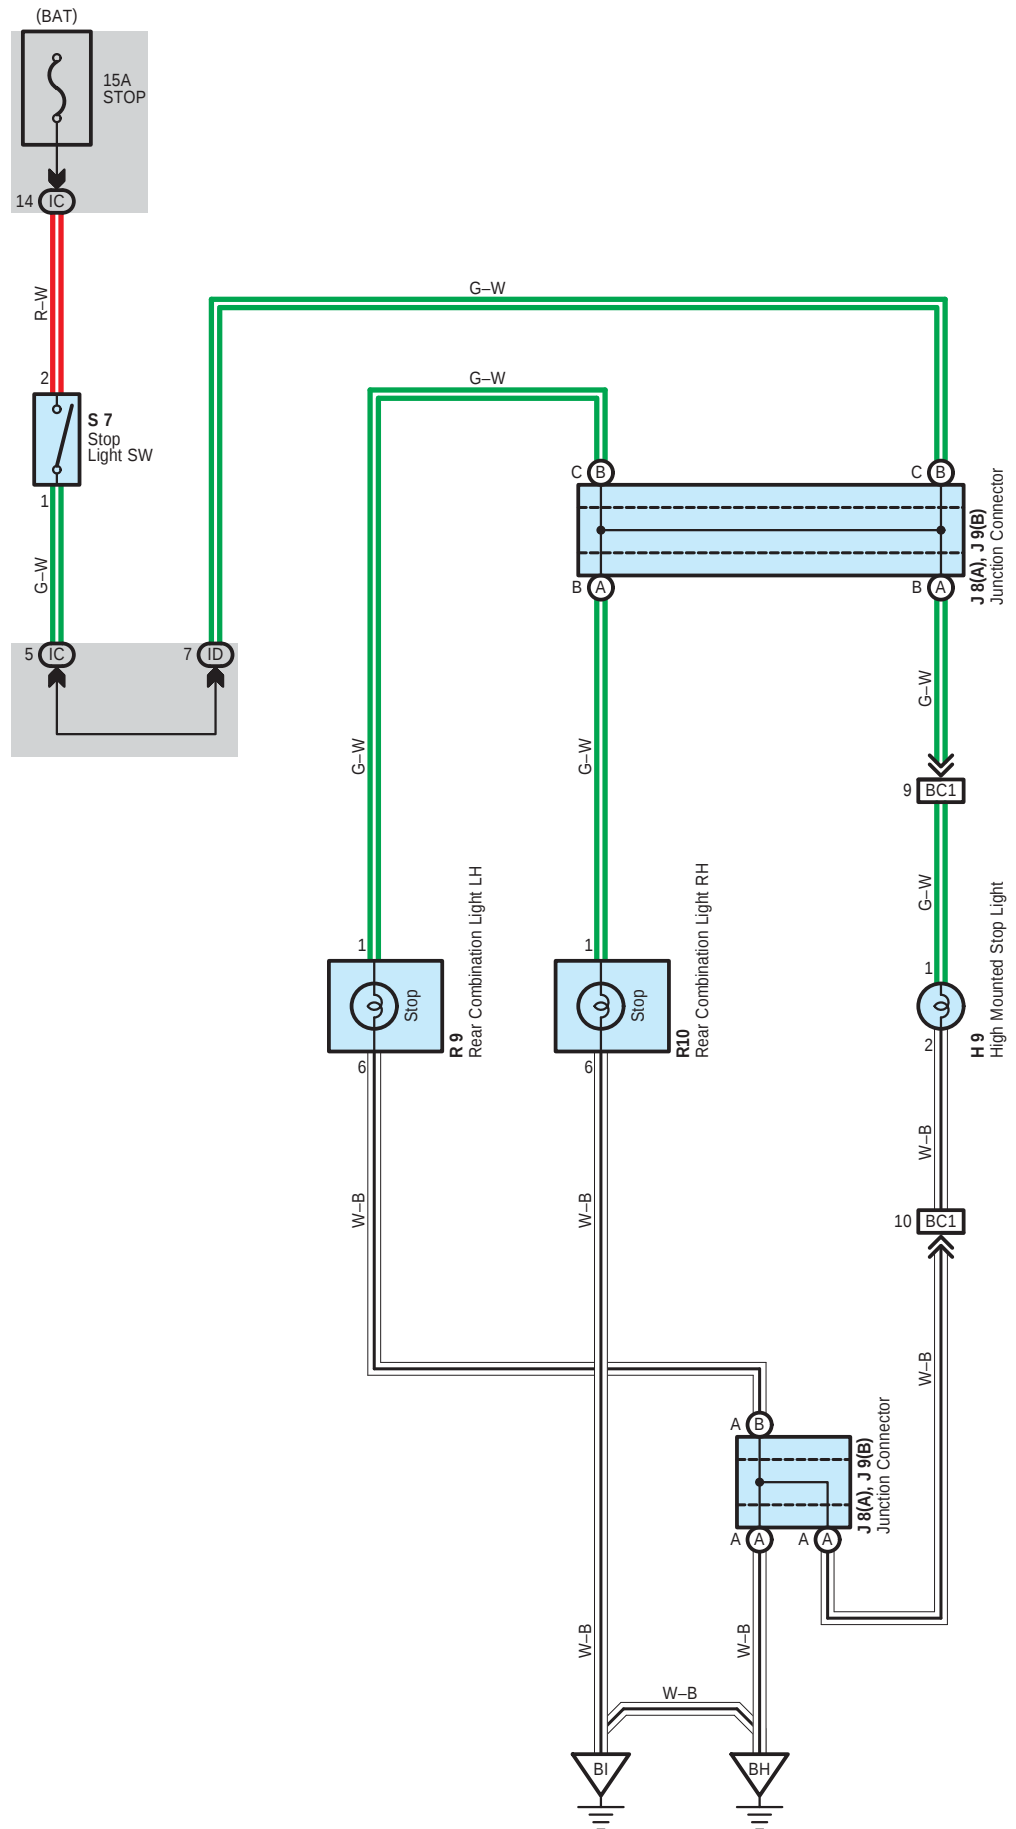

 : Parts Location

Code		See Page		Code		See Page		Code		See Page	
H9		38		J9	B	38		R10		39	
J8	A	38		R9		39		S7		37	

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BC1	44	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)

 : Ground Points

Code	See Page	Ground Points Location
BH	44	Left Quarter Panel
BI	44	Right Quarter Panel