

: Parts Location

Code		See Page	Code		See Page	Code	See Page
E	31	34	J9	В	38	R9	39
J3		37	J10		38	R10	39
J8	Α	38	Р	1	35		

0

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)	
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)	
IG	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)	
IK	24		
3B	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)	

: Connector Joining Wire Harness and Wire Harness

	Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)	
Ī	IG3	43	Engine Wire and Instrument Panel Wire (Blower Unit RH)	

∇

: Ground Points

Code	See Page	Ground Points Location
BH	44	Left Quarter Panel
BI	44	Right Quarter Panel