

) : Parts Location

Code	See Page	Code	See Page	Code	See Page
C13	36	H6	34	T3	37

: Relay Blocks

	Code	See Page	Relay Blocks (Relay Block Location)
Ī	1	23	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
4A	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA4	42	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)