
\* 1 : w/o Cigarette Lighter

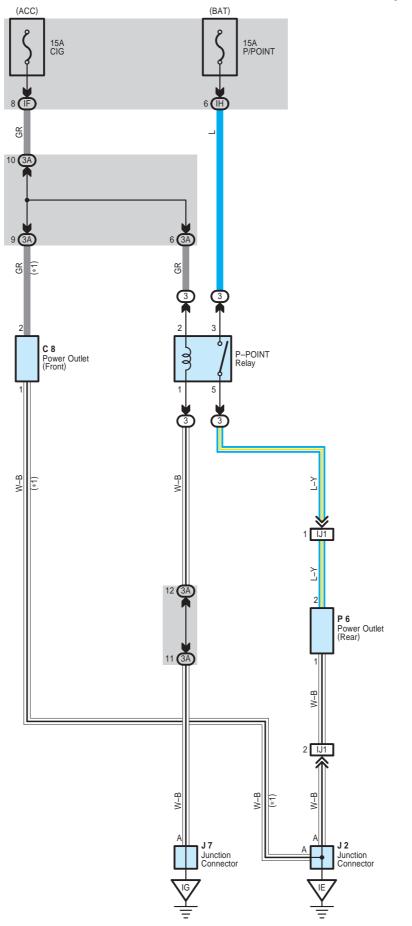

## : Parts Location

Code	See Page	Code	See Page	Code	See Page
C8	36	J7	37		
J2	37	P6	37		

## : Relay Blocks

	Code	See Page	Relay Blocks (Relay Block Location)
ſ	3	28	RH R/B (Right Side of the Instrument Panel Reinforcement)

## : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IF	- 25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IH		
3A	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)

## : Connector Joining Wire Harness and Wire Harness

	Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
I	IJ1	43	Console Wire and Instrument Panel Wire (Front Side of the Parking Brake Lever)

# 7 : Ground Points

Code	See Page	Ground Points Location
IE	42	Behind Combination Meter
IG	42	Right Kick Panel