

: Parts Location

Code		See Page	Code		See Page	Code		See Page
C11		36	G2	В	34	J3	Α	37
G1	А	34	I1	1	37	J4	В	37

: Relay Blocks

С	Code	See Page	Relay Blocks (Relay Block Location)	
	1	23	Engine Room R/B (Engine Compartment Left)	

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IG	25	
IK	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IL		
IM		
1A	- 23	Engine Wire and Engine Room J/B (Engine Compartment Left)
1B		Engine ville and Engine Room 3/B (Engine Compartment Left)
3B	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	40	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
IA5	42	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IG3	43	Engine Wire and Instrument Panel Wire (Blower Unit RH)