


* 1 : w/ Door Lock Control
* 2 : w/o Door Lock Control

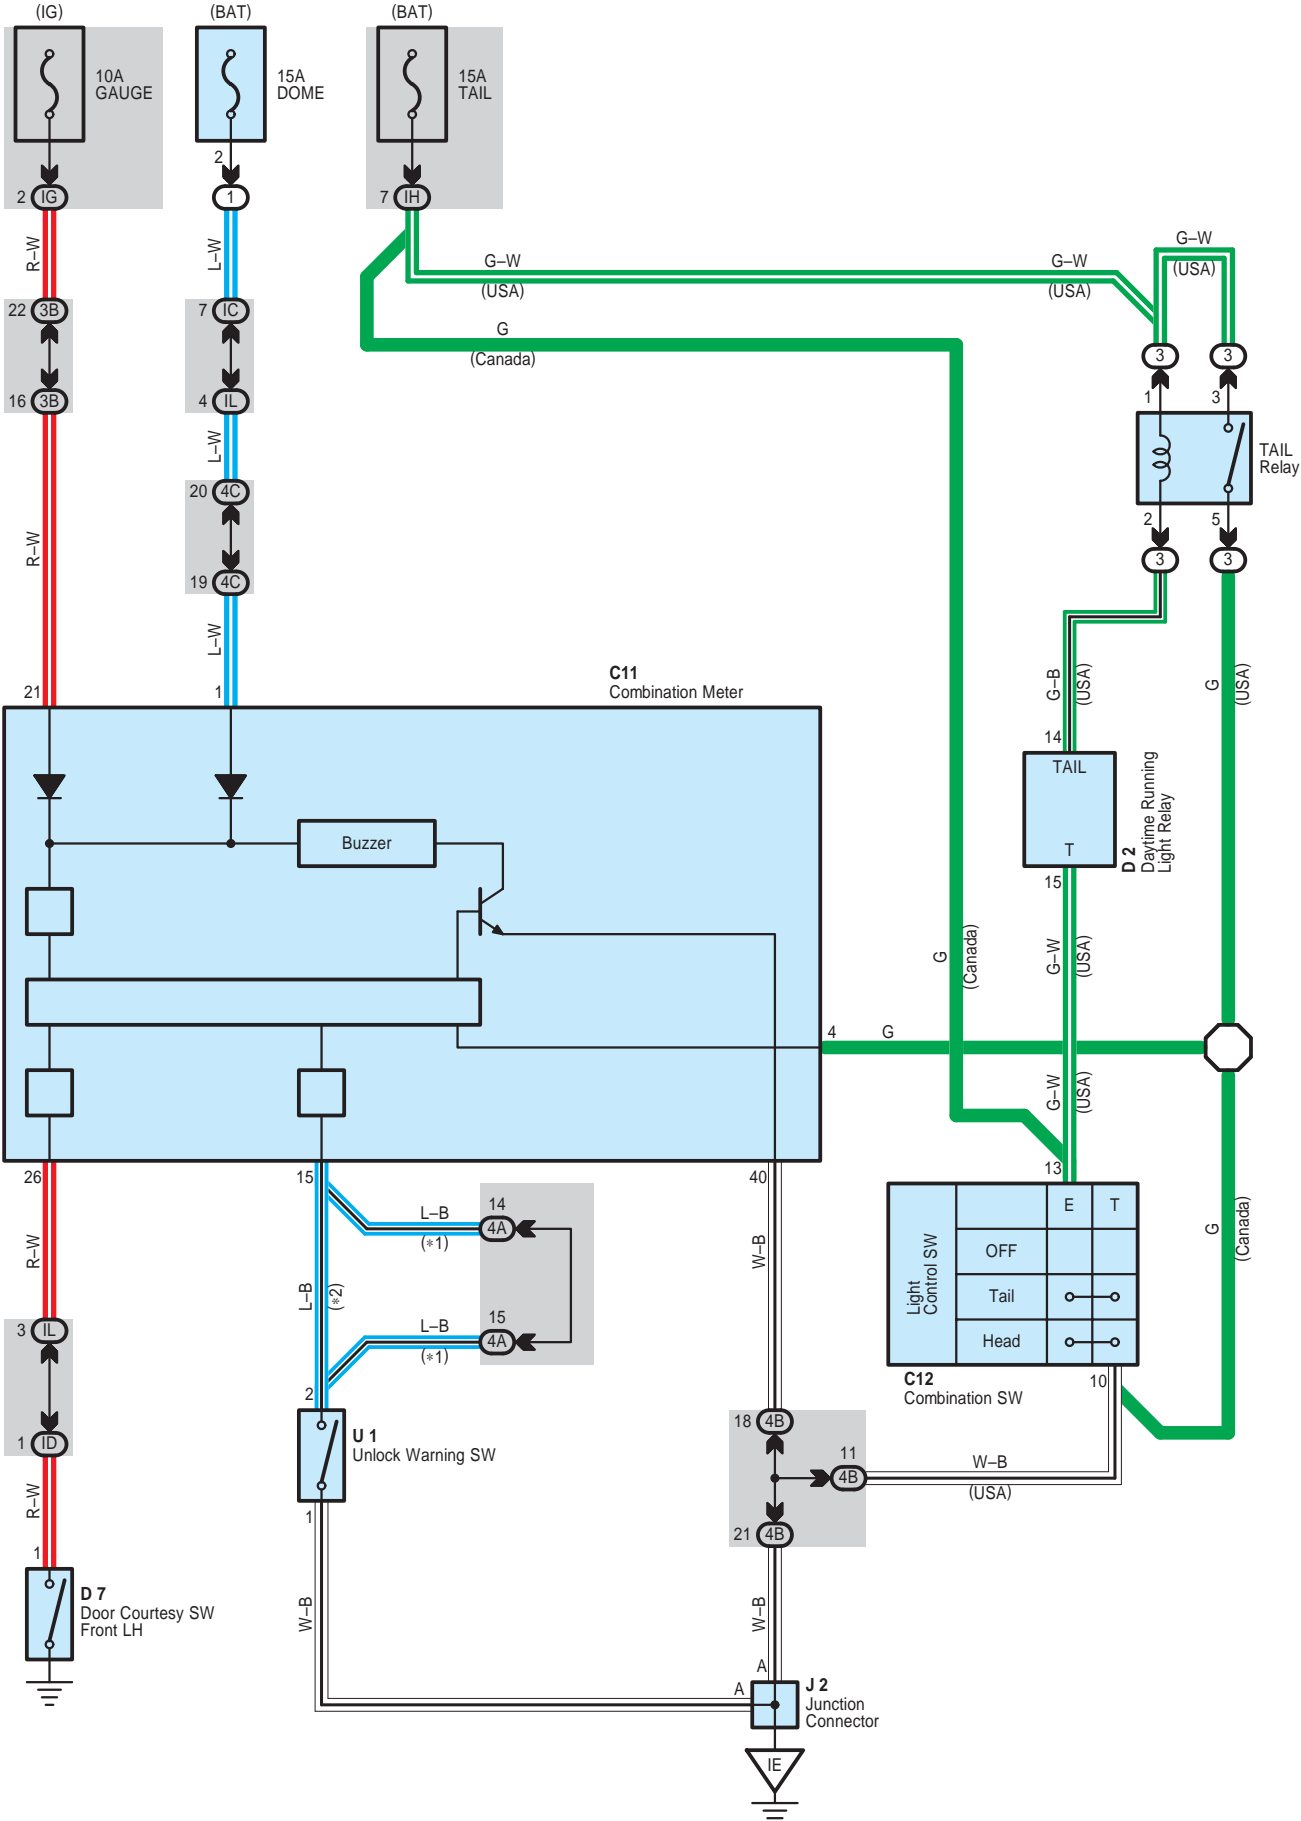

System Outline

The current is applied at all times to TERMINAL 1 of the combination meter through the DOME fuse.

When the ignition SW is turned to ON position, the current flows to TERMINAL 21 of the combination meter through the GAUGE fuse. When the light control SW is turned to Tail or Head position, current is applied to TERMINAL 4 of the combination meter through the TAIL fuse via the TAIL relay (USA) or light control SW (Canada).

1. Light Reminder System

When the light control SW is in Tail or Head position, the ignition SW turned to OFF from ON position, and the driver's door opened (Door courtesy SW on), the current flows to TERMINAL 21 of the combination meter stops. As a result, the combination meter is activated and current flows from TERMINAL 1 of the combination meter to TERMINAL 40 to GROUND, the buzzer in the combination meter goes on to remind the light is lighting up.

2. Key Reminder System

When the driver door is opened with the ignition SW off and ignition key remaining in the key cylinder (Unlock warning SW on), a signal is input from the unlock warning SW to TERMINAL 15 of the combination meter, and from the door courtesy SW front LH to TERMINAL 26 of the combination meter. As a result, the buzzer in the combination meter goes on and warns the driver that the key is remaining in the key cylinder.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C11	36	D2	36	J2	37
C12	36	D7	38	U1	37

□ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)
3	28	RH R/B (Right Side of the Instrument Panel Reinforcement)

□ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IG	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IH		
IL		
3B	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
4A	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
4B		
4C		

▽ : Ground Points

Code	See Page	Ground Points Location
IE	42	Behind Combination Meter