


Rear Window Defogger

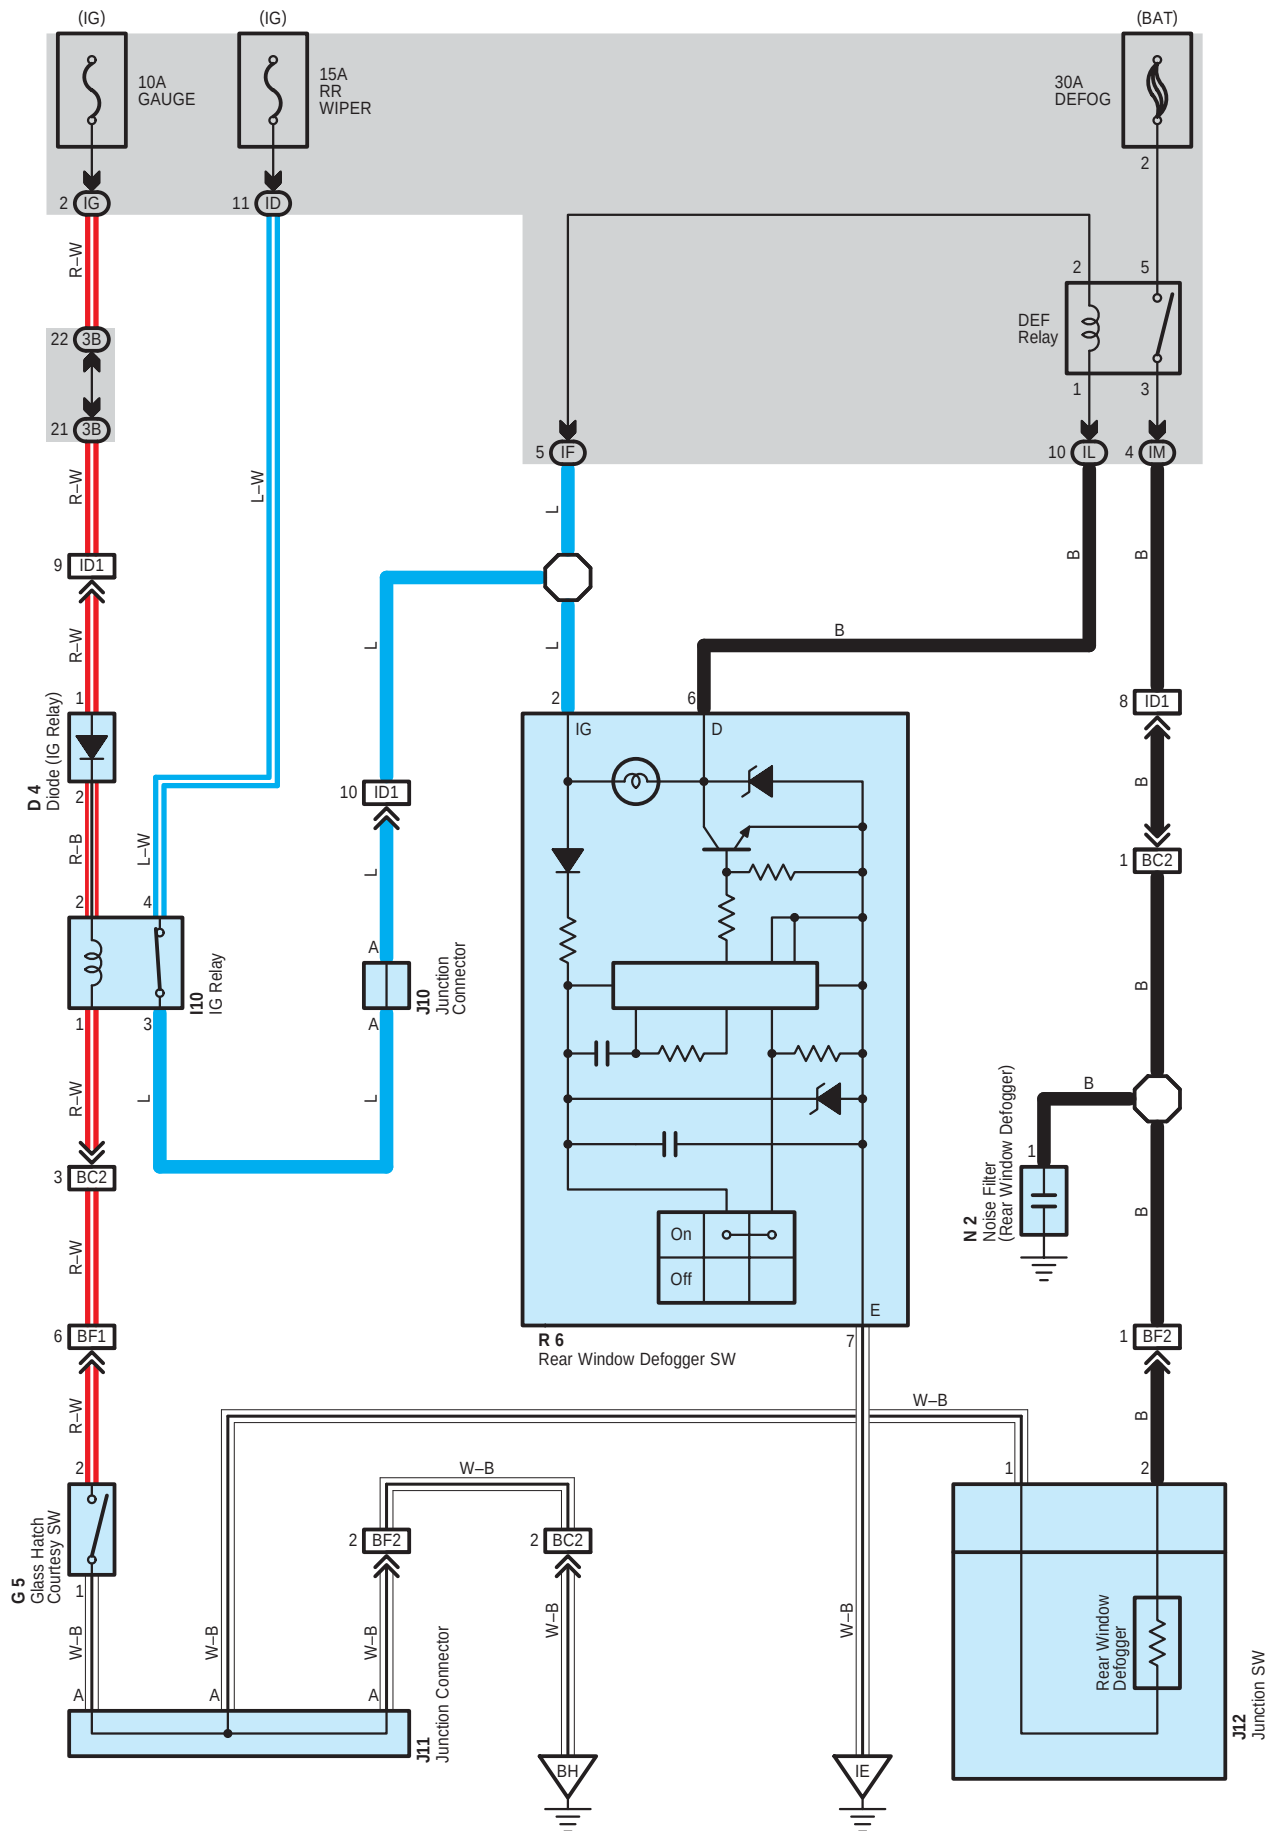

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
D4	36	J10	38	N2	39
G5	38	J11	38	R6	37
I10	37	J12	38		

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IG		
IL	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IM		
3B	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	42	Instrument Panel Wire and Floor Wire (Left Kick Panel)
BC2	44	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
BF1	44	Back Door No.1 Wire and Back Door No.2 Wire (Back Panel LH)
BF2		

 : Ground Points

Code	See Page	Ground Points Location
IE	42	Behind Combination Meter
BH	44	Left Quarter Panel