



# Audio System for Separate Type Amplifier

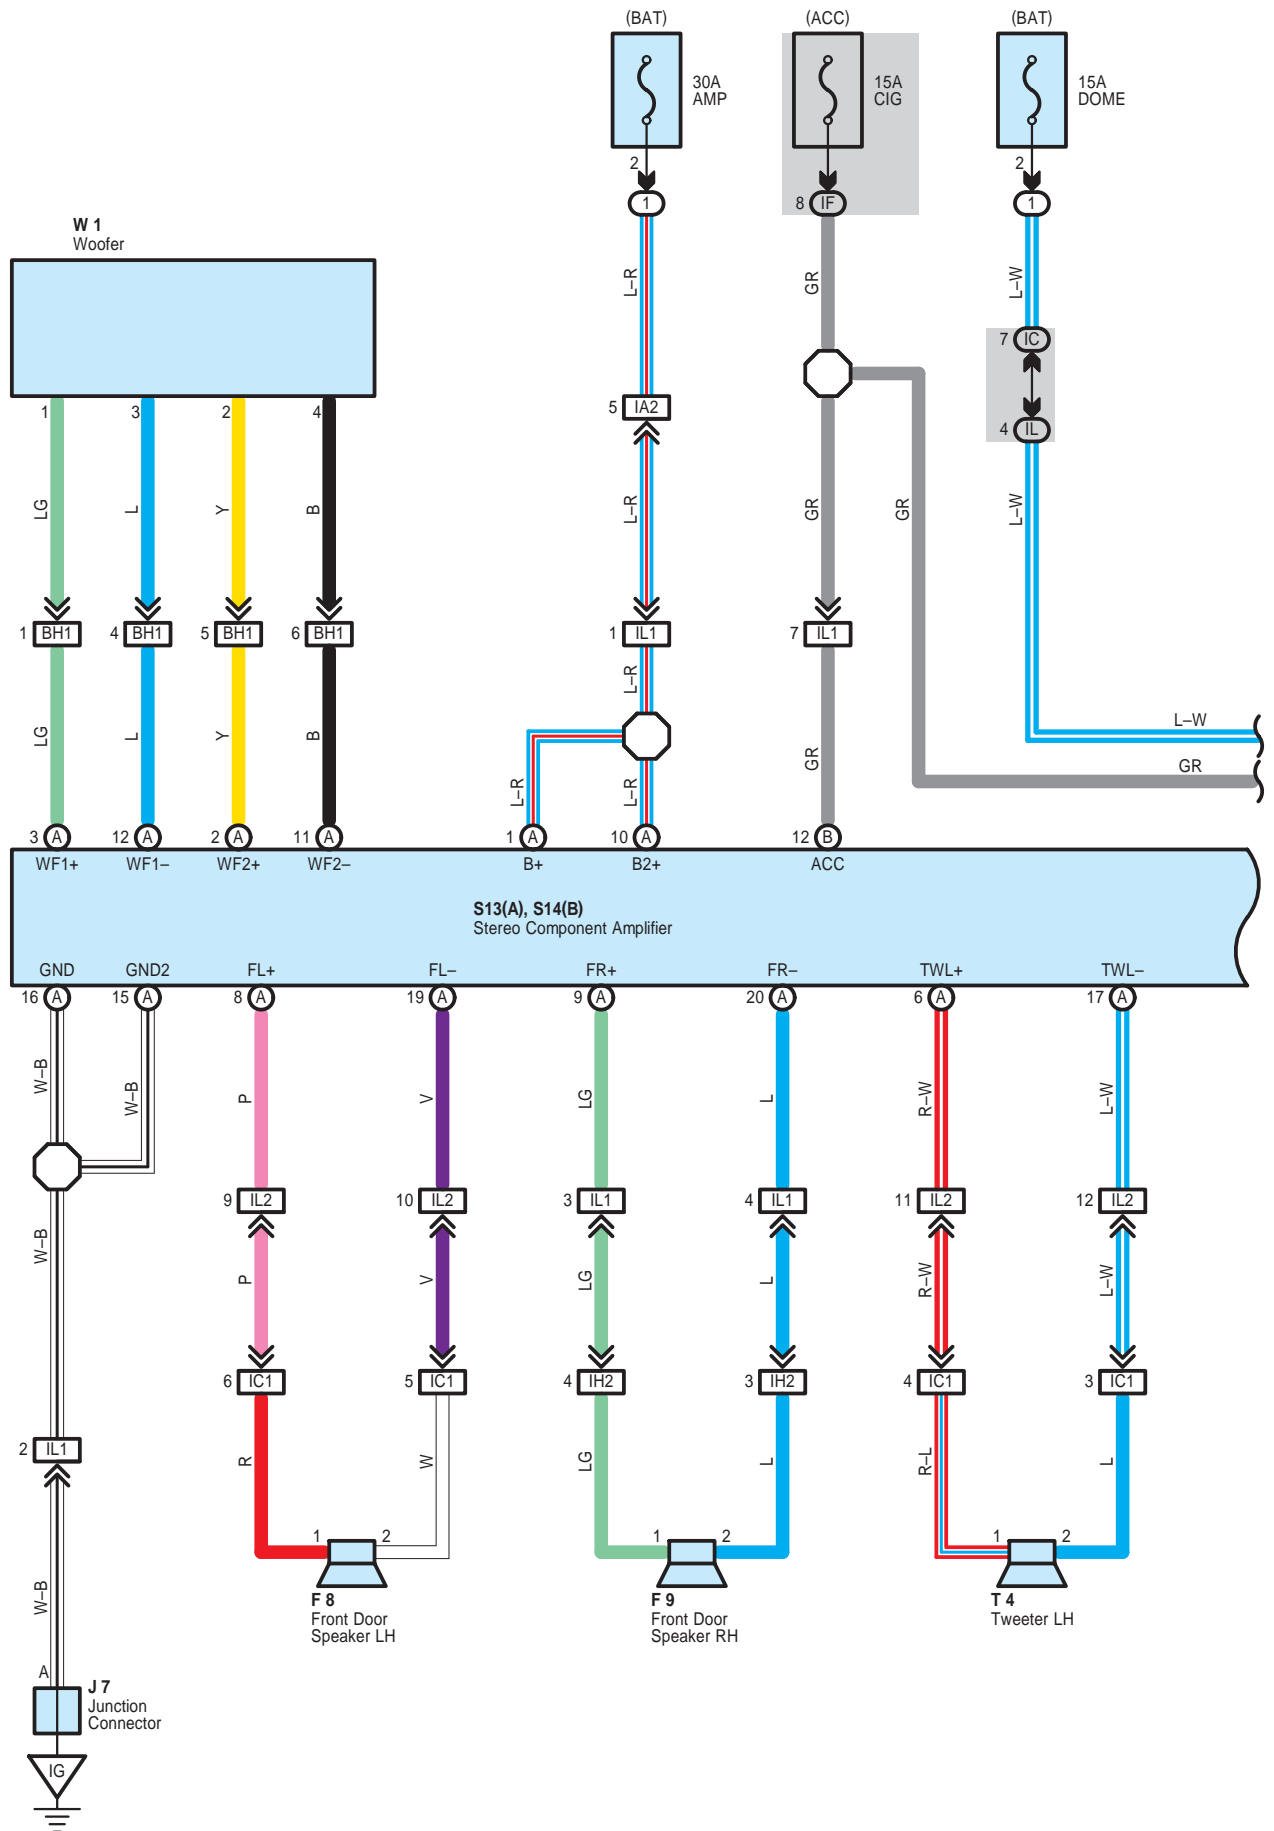

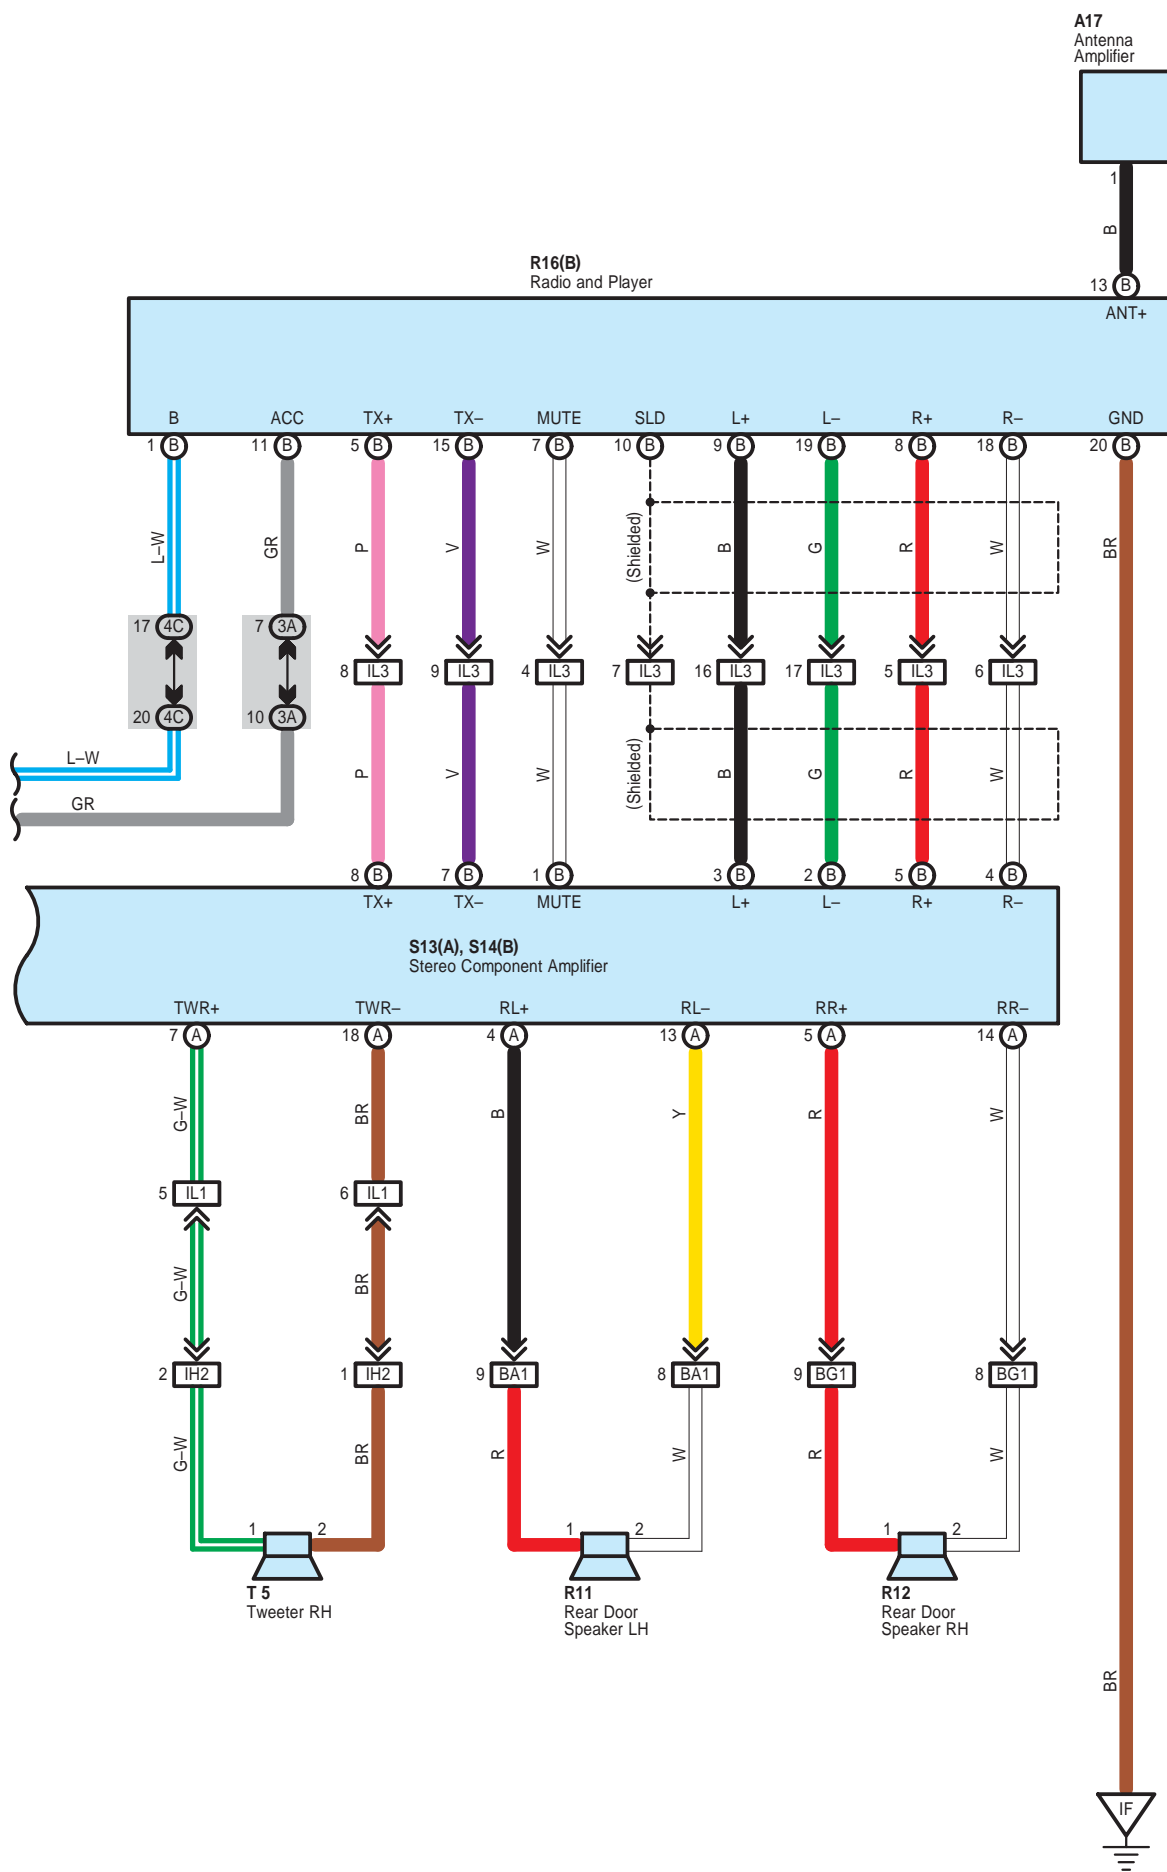

## Audio System for Separate Type Amplifier

### : Parts Location

Code	See Page	Code	See Page	Code	See Page
A17	36	R11	39	S14	B 37
F8	38	R12	39	T4	39
F9	38	R16	B 37	T5	39
J7	37	S13	A 37	W1	39

### : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

### : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IL	24	
3A	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
4C	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

### : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	42	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IC1	42	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IH2	43	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL1	43	Floor Wire and Instrument Panel Wire (Right Kick Panel)
IL2		
IL3		
BA1	44	Rear Door LH Wire and Floor Wire (Left Center Pillar)
BG1	44	Rear Door RH Wire and Floor Wire (Right Center Pillar)
BH1	44	Floor Wire and Floor Wire (Under the Right Center Pillar)

### : Ground Points

Code	See Page	Ground Points Location
IF	42	Behind Combination Meter
IG	42	Right Kick Panel

