




Combination Meter

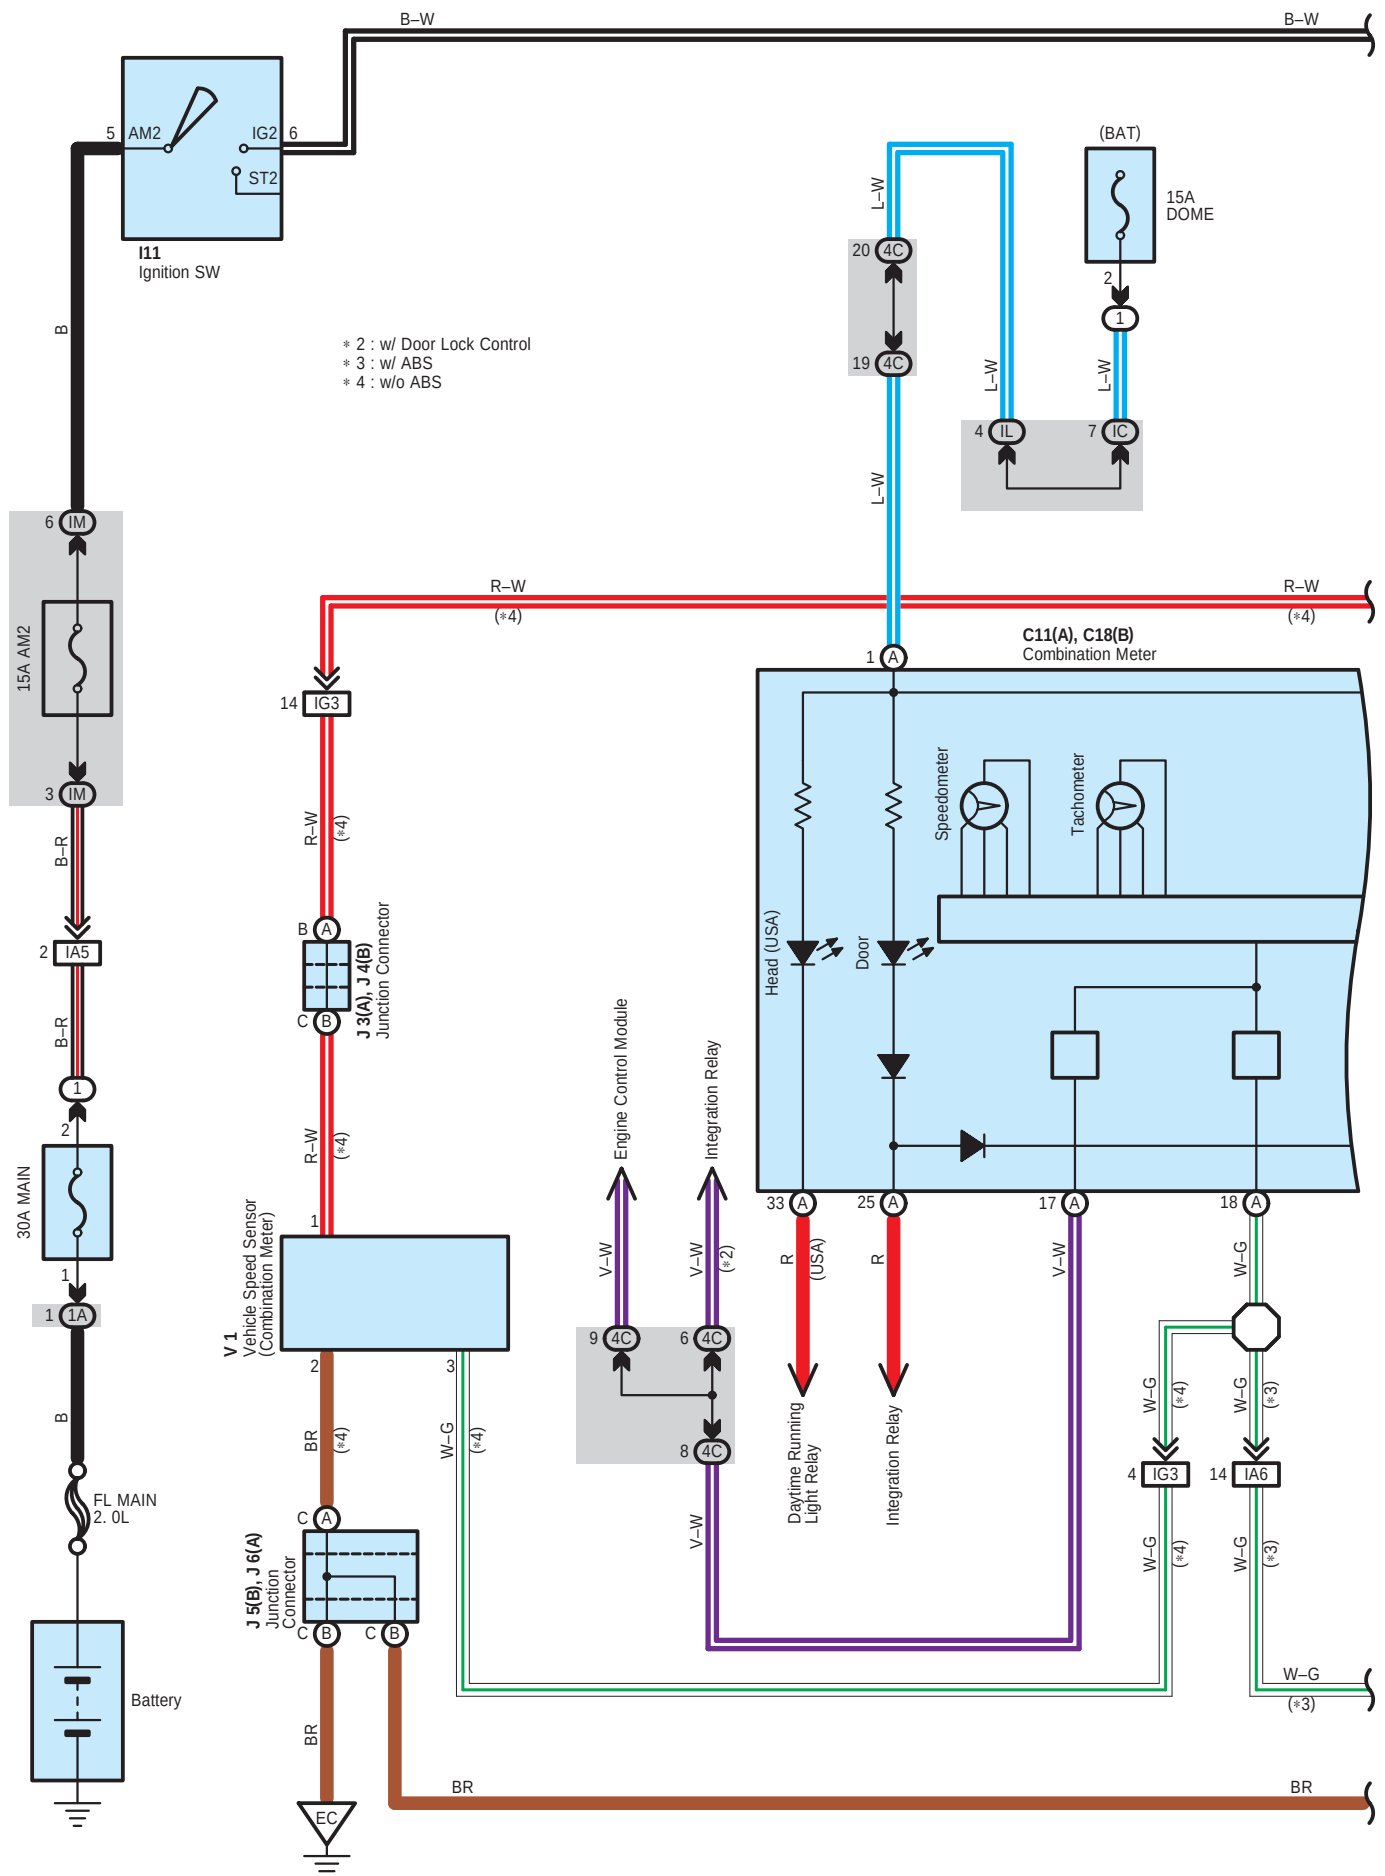

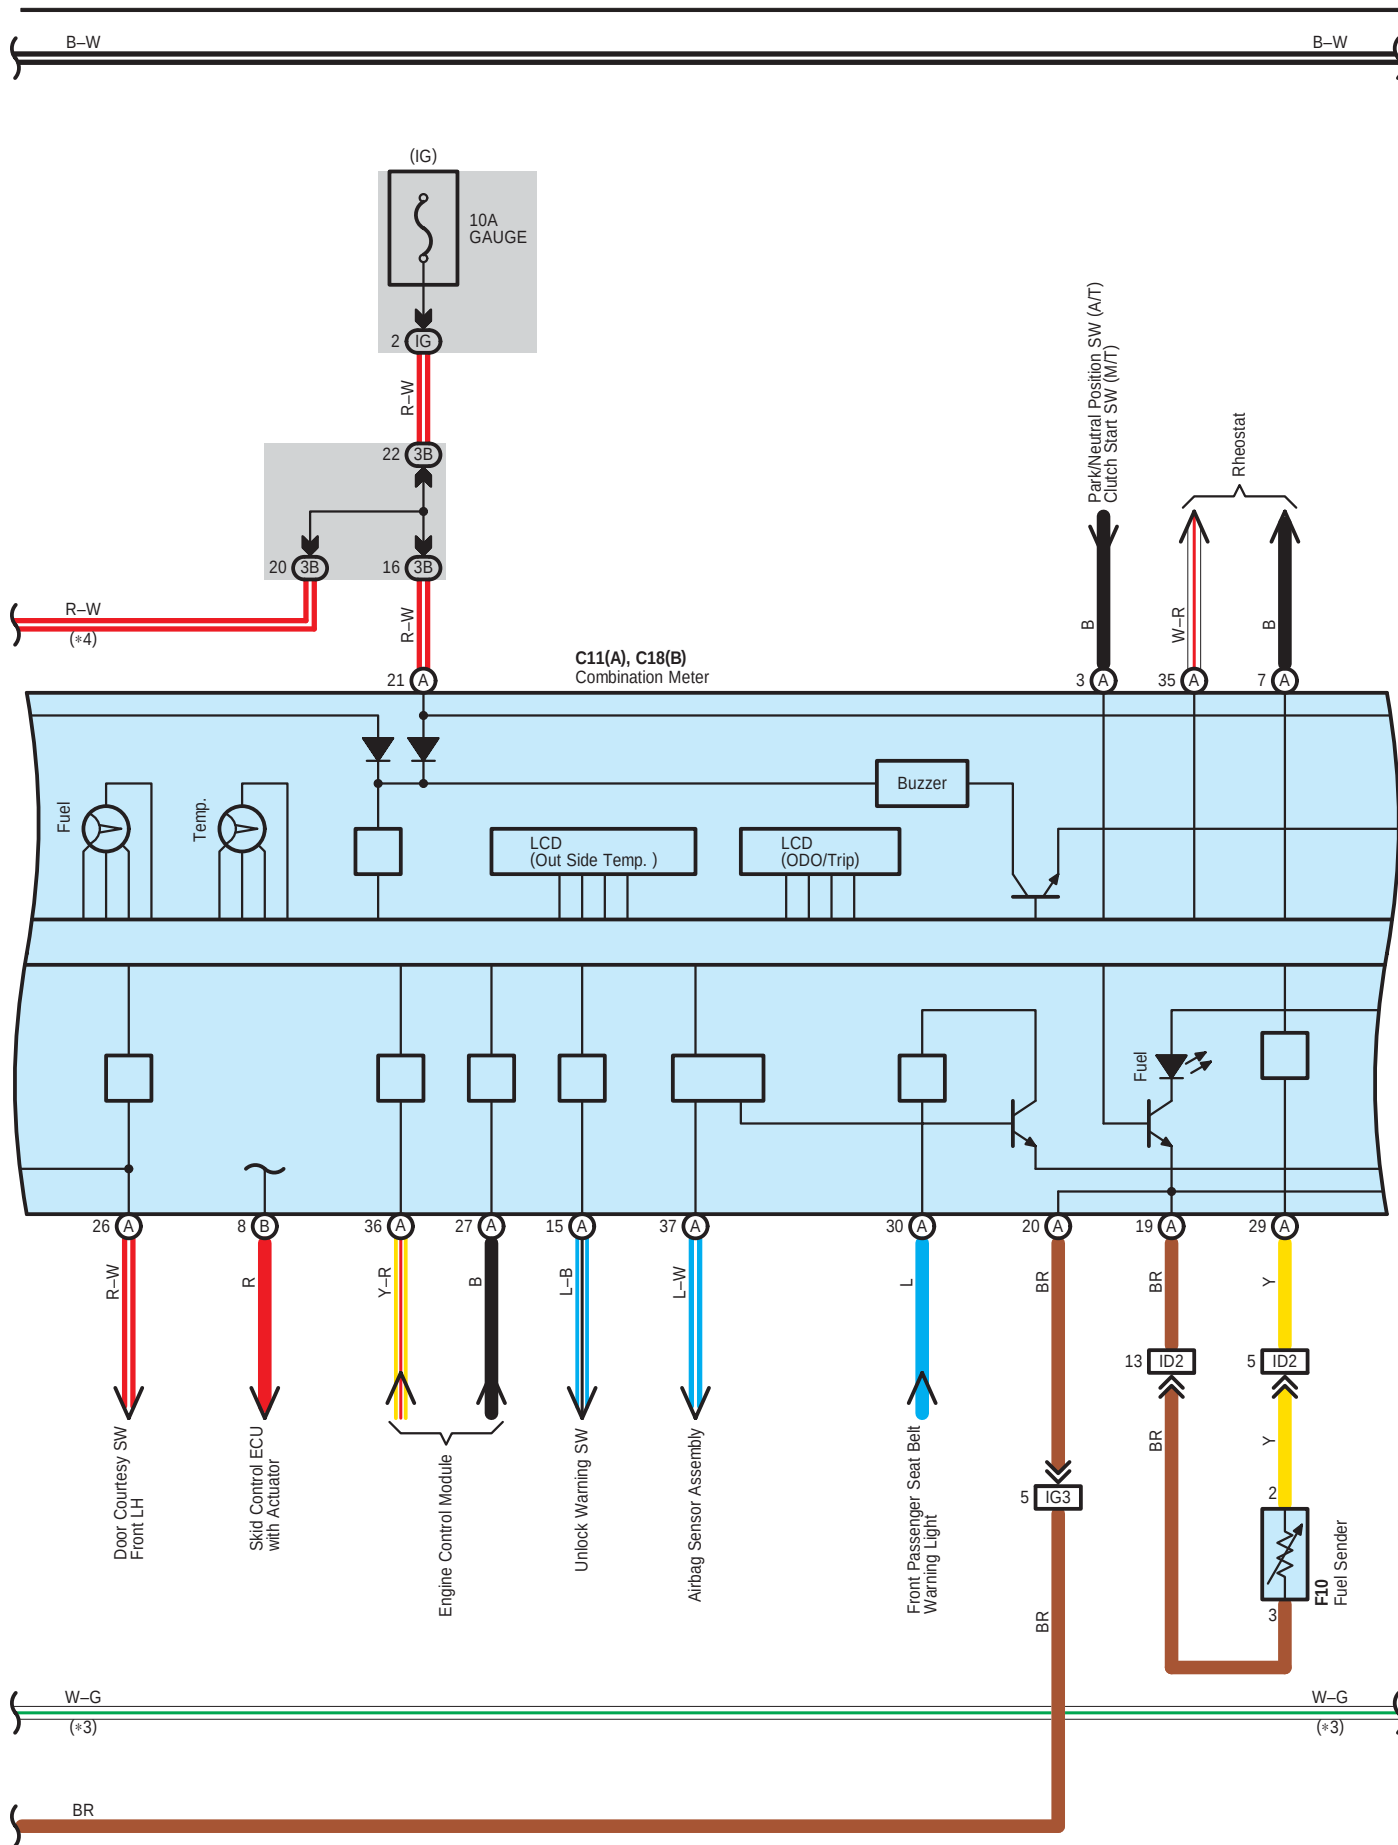


Combination Meter

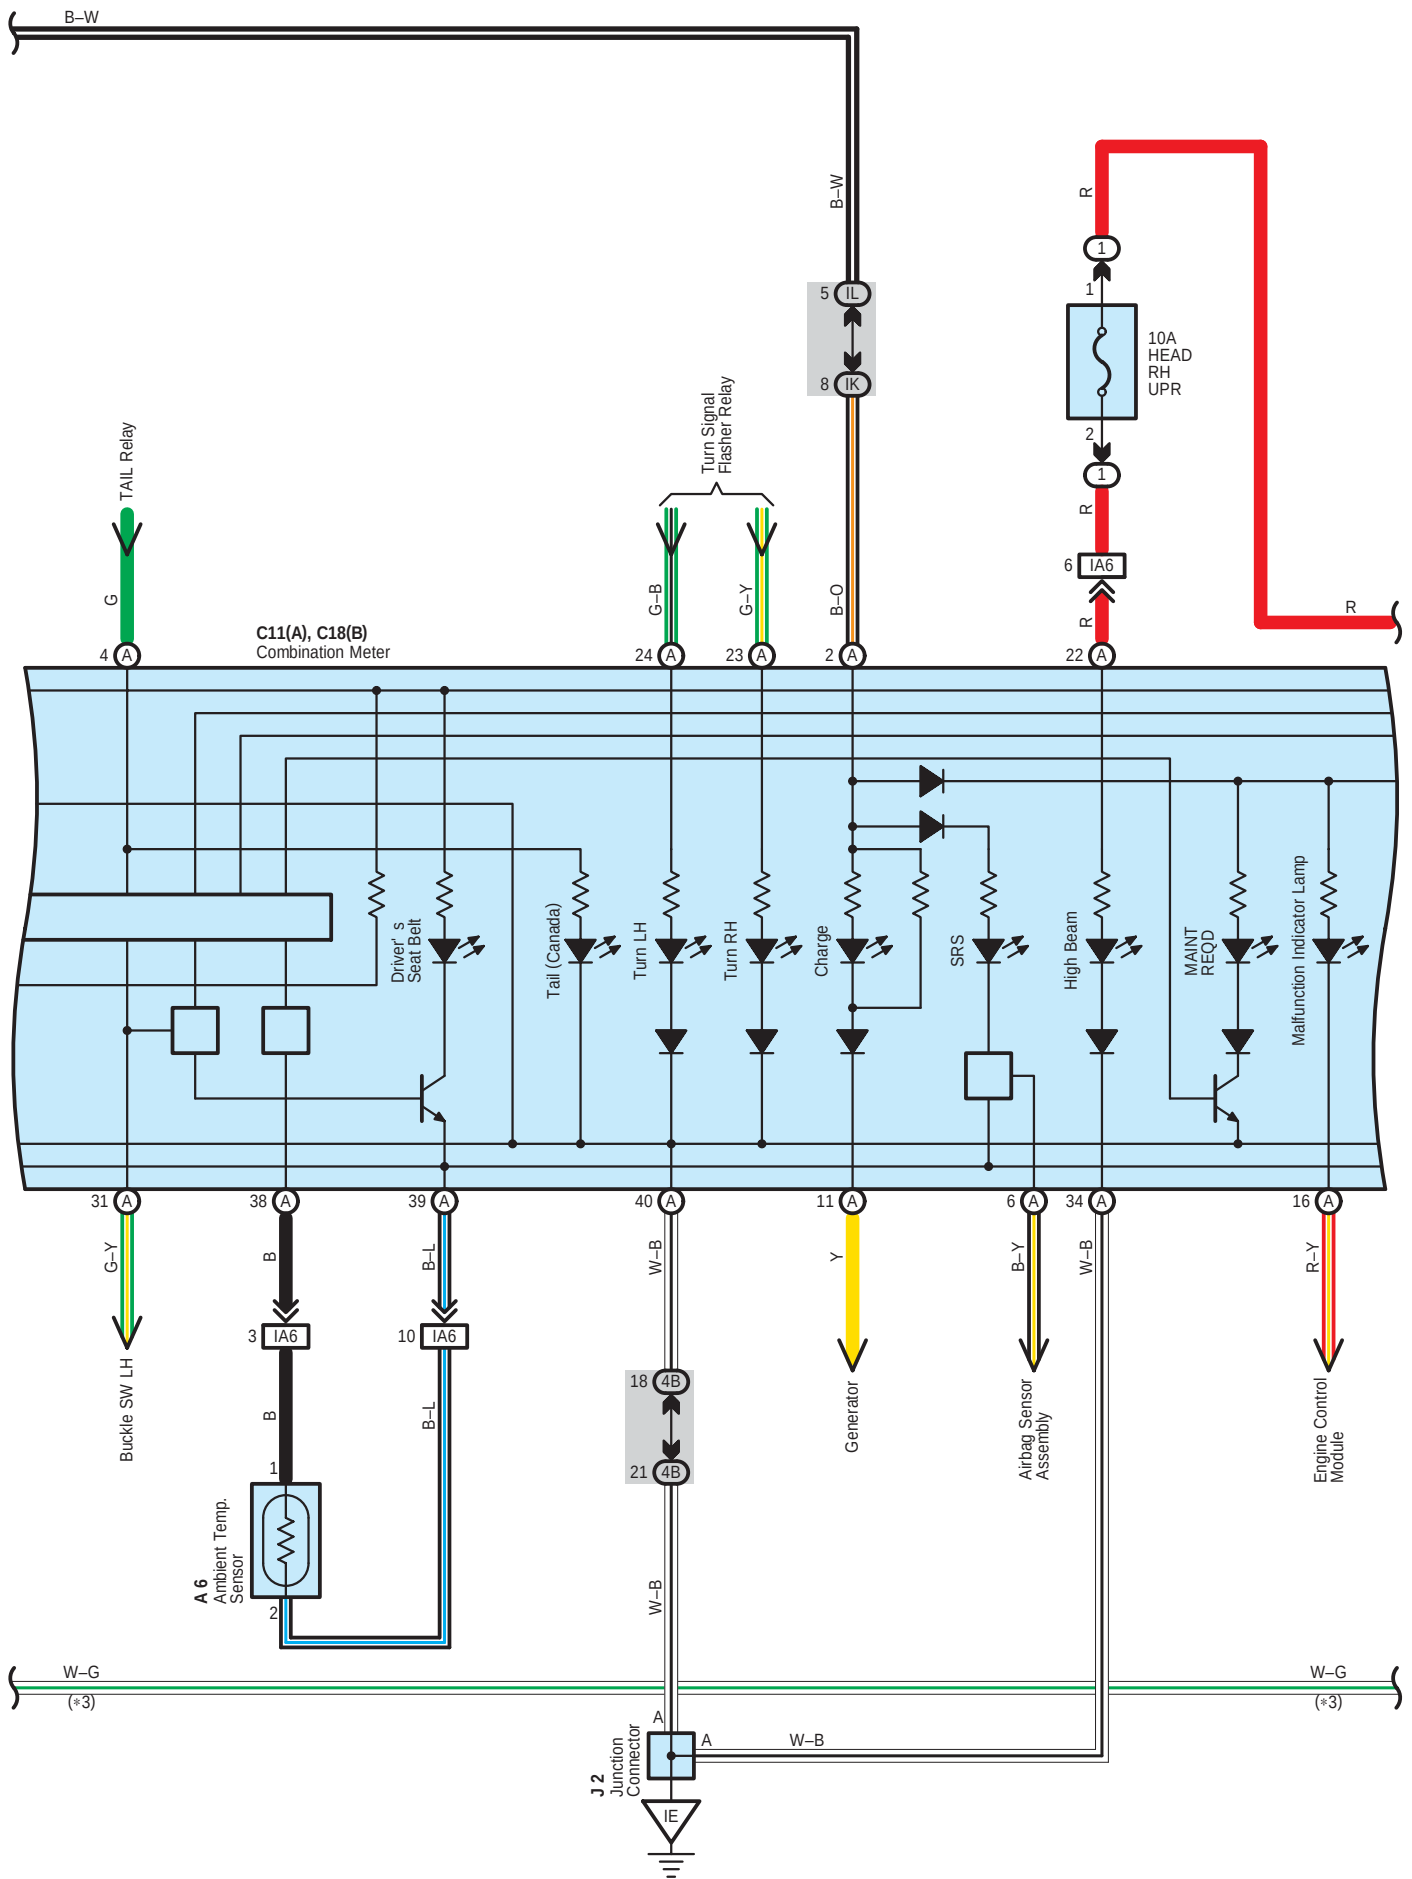

Combination Meter

* 3 : w/ ABS
* 4 : w/o ABS

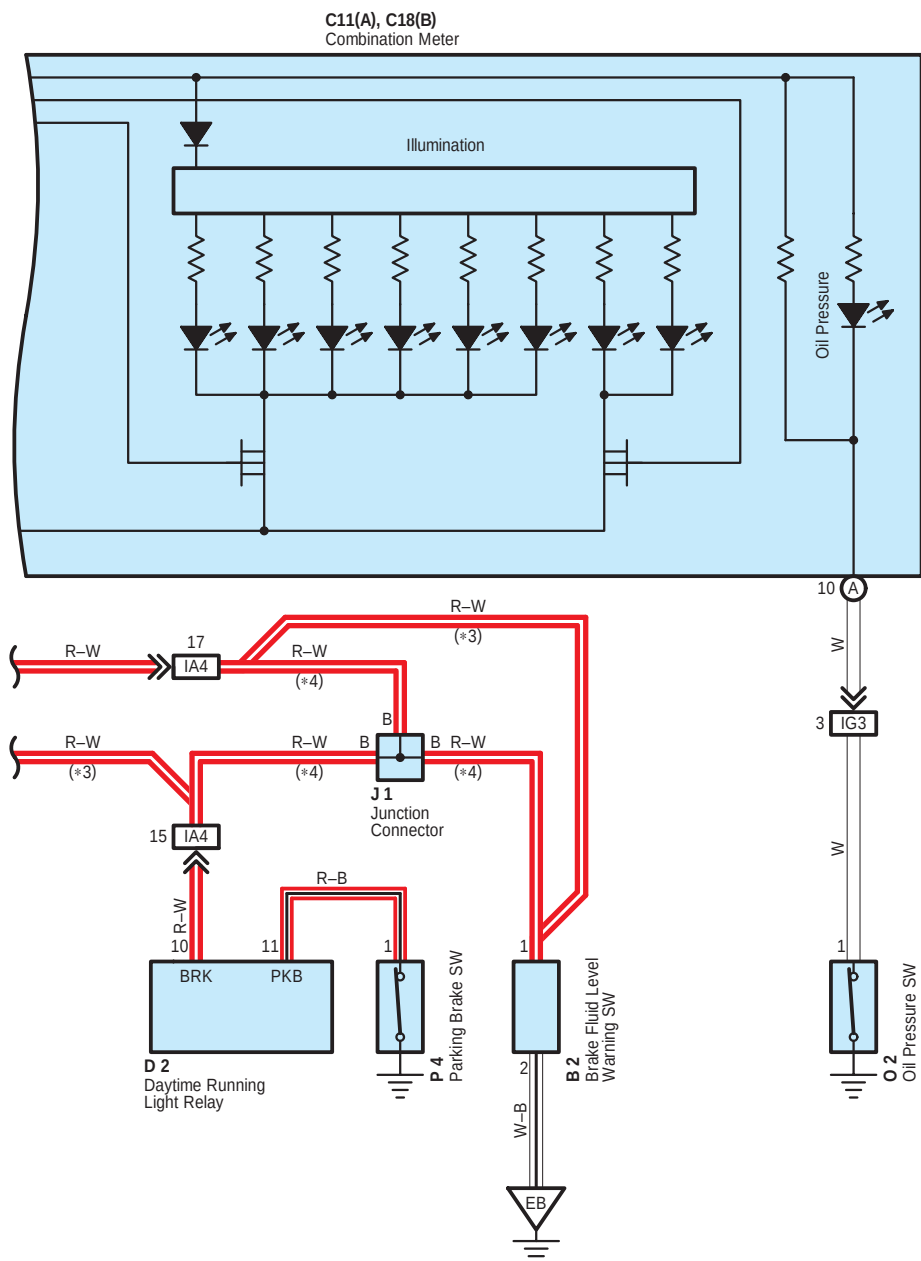

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
A6	34	J1	35	P4	37
B2	34	J2	37	S1	A 35
C11	36	J3	37		B 35
C18	36	J4	37	V1	35
D2	36	J5	37	W2	35
F10	38	J6	37		
I11	37	O2	35		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IG	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IK	24	
IL		
IM		
1A	23	Engine Wire and Engine Room J/B (Engine Compartment Left)
3B	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
4B	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
4C		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA4	42	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IA5		
IA6		
ID2	42	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IG3	43	Engine Wire and Instrument Panel Wire (Blower Unit RH)

 : Ground Points

Code	See Page	Ground Points Location
EA	40	Front Right Fender
EB	40	Front Left Suspension Tower
EC	40	Left Side of the Cylinder Head
IE	42	Behind Combination Meter