



Engine Immobiliser System

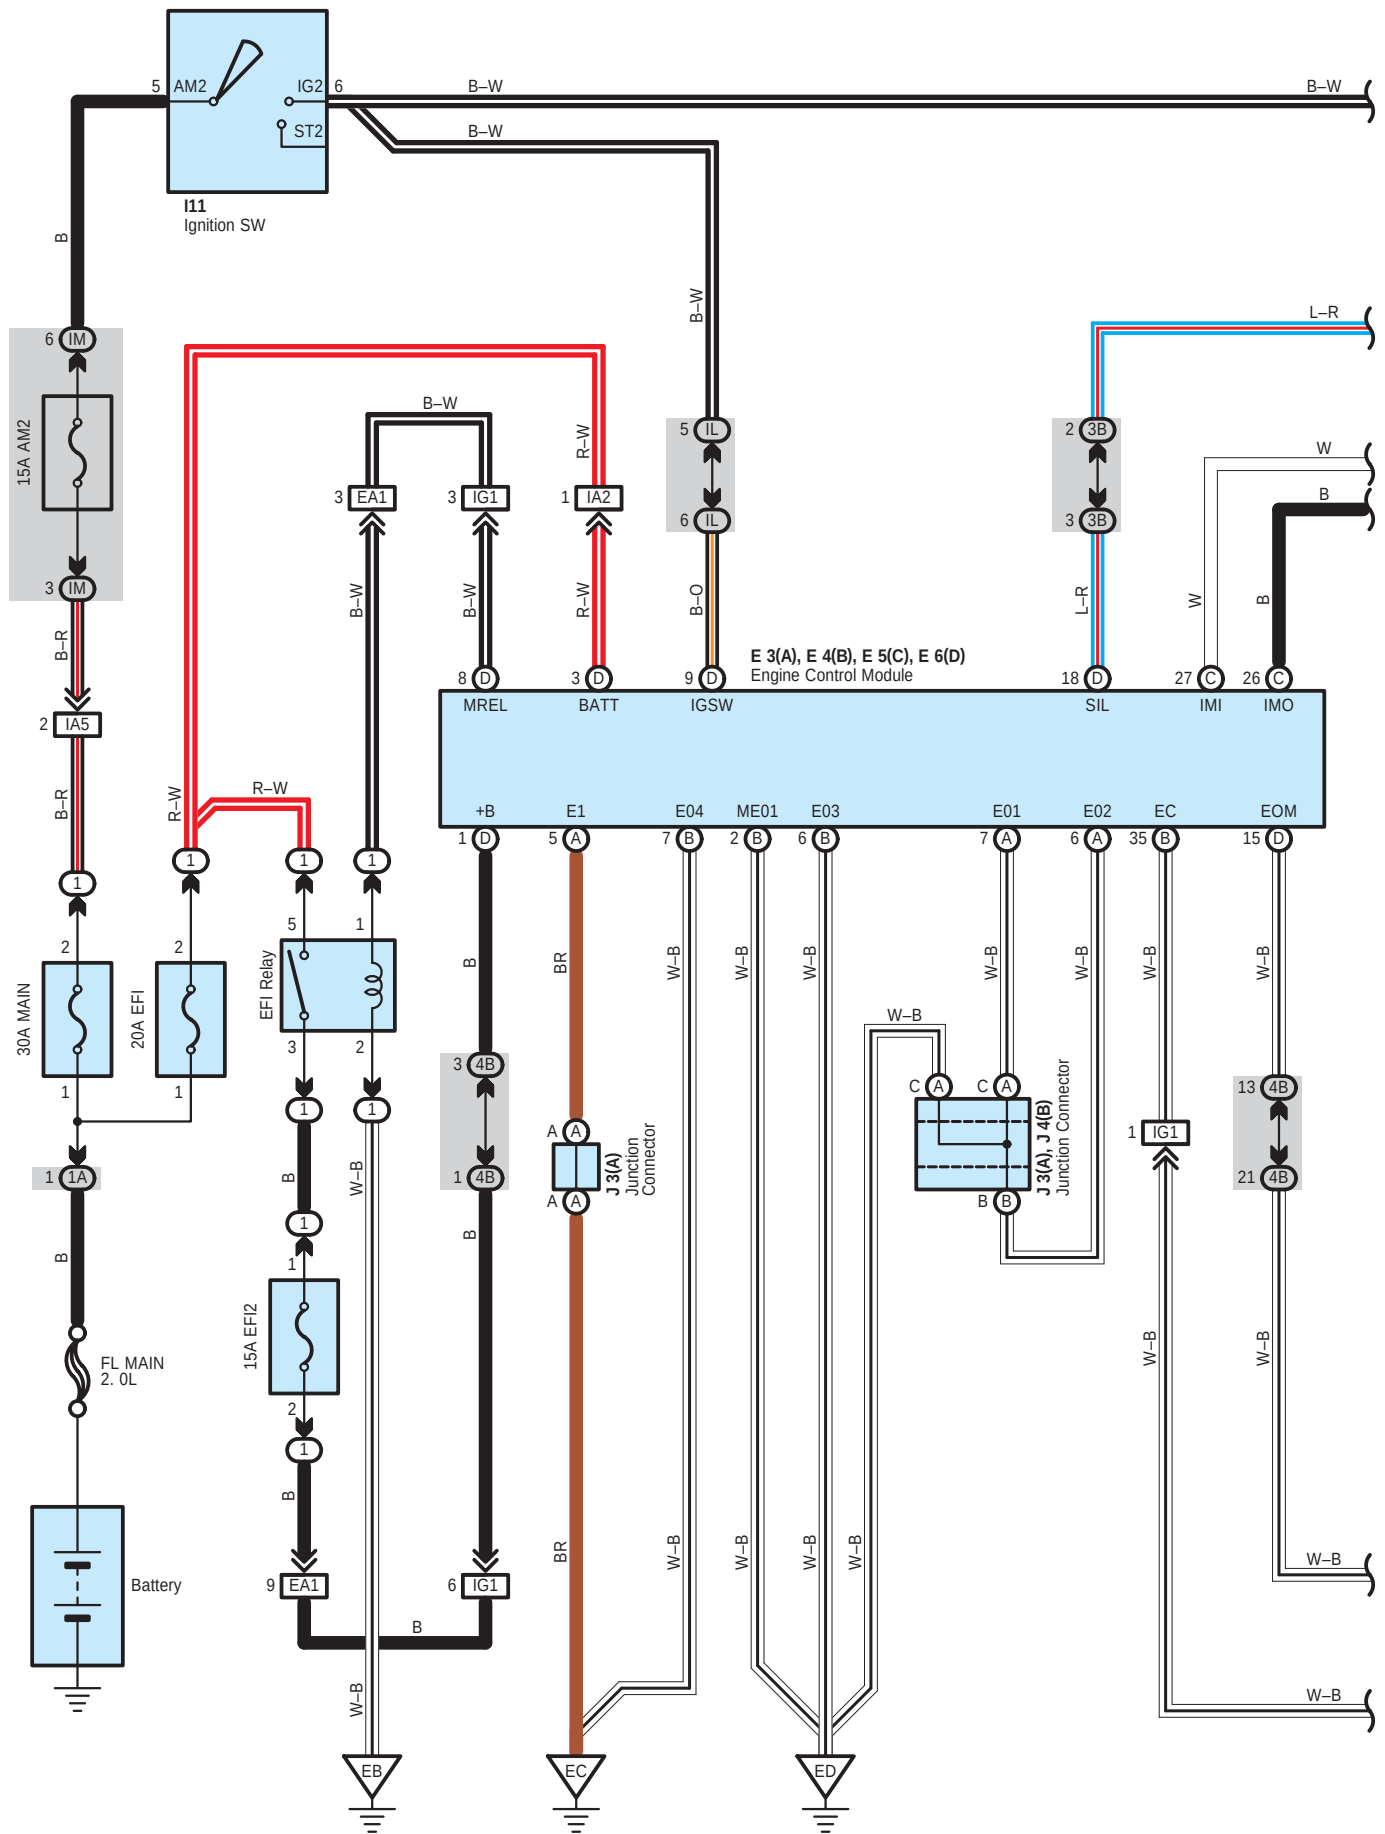

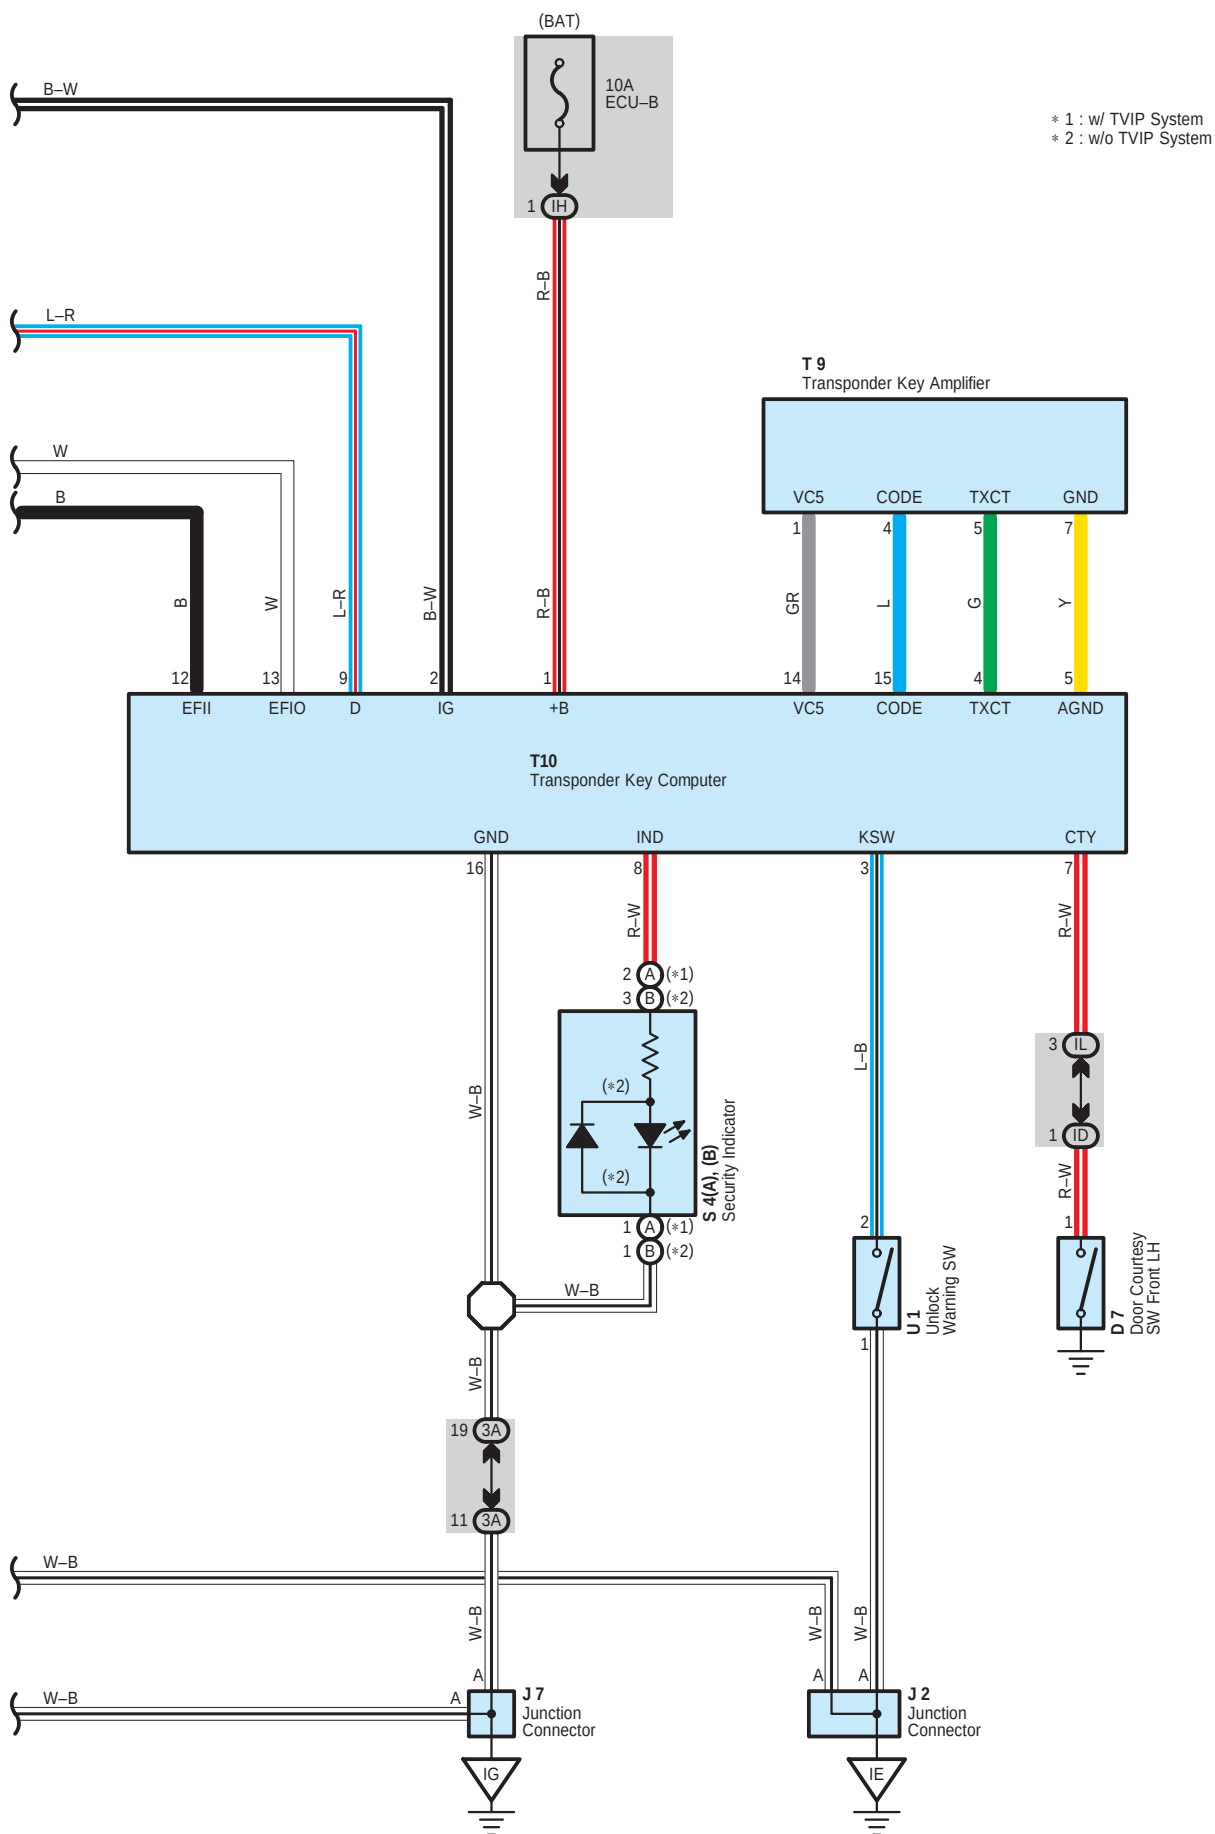

Engine Immobiliser System

: Parts Location

Code	See Page	Code	See Page	Code	See Page
D7	38	I11	37	S4	A 37
E3	A 36	J2	37		B 37
E4	B 36	J3	A 37	T9	37
E5	C 36	J4	B 37	T10	37
E6	D 36	J7	37	U1	37

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IH	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IL	24	
IM		
1A	23	
3A	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
3B		
4B	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	40	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
IA2	42	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IA5		
IG1	43	Engine Wire and Instrument Panel Wire (Blower Unit RH)

: Ground Points

Code	See Page	Ground Points Location
EB	40	Front Left Suspension Tower
EC	40	Left Side of the Cylinder Head
ED		
IE	42	Behind Combination Meter
IG	42	Right Kick Panel

