


Turn Signal and Hazard Warning Light

* 1 : w/ Wireless Door Lock Control
* 2 : w/o Wireless Door Lock Control

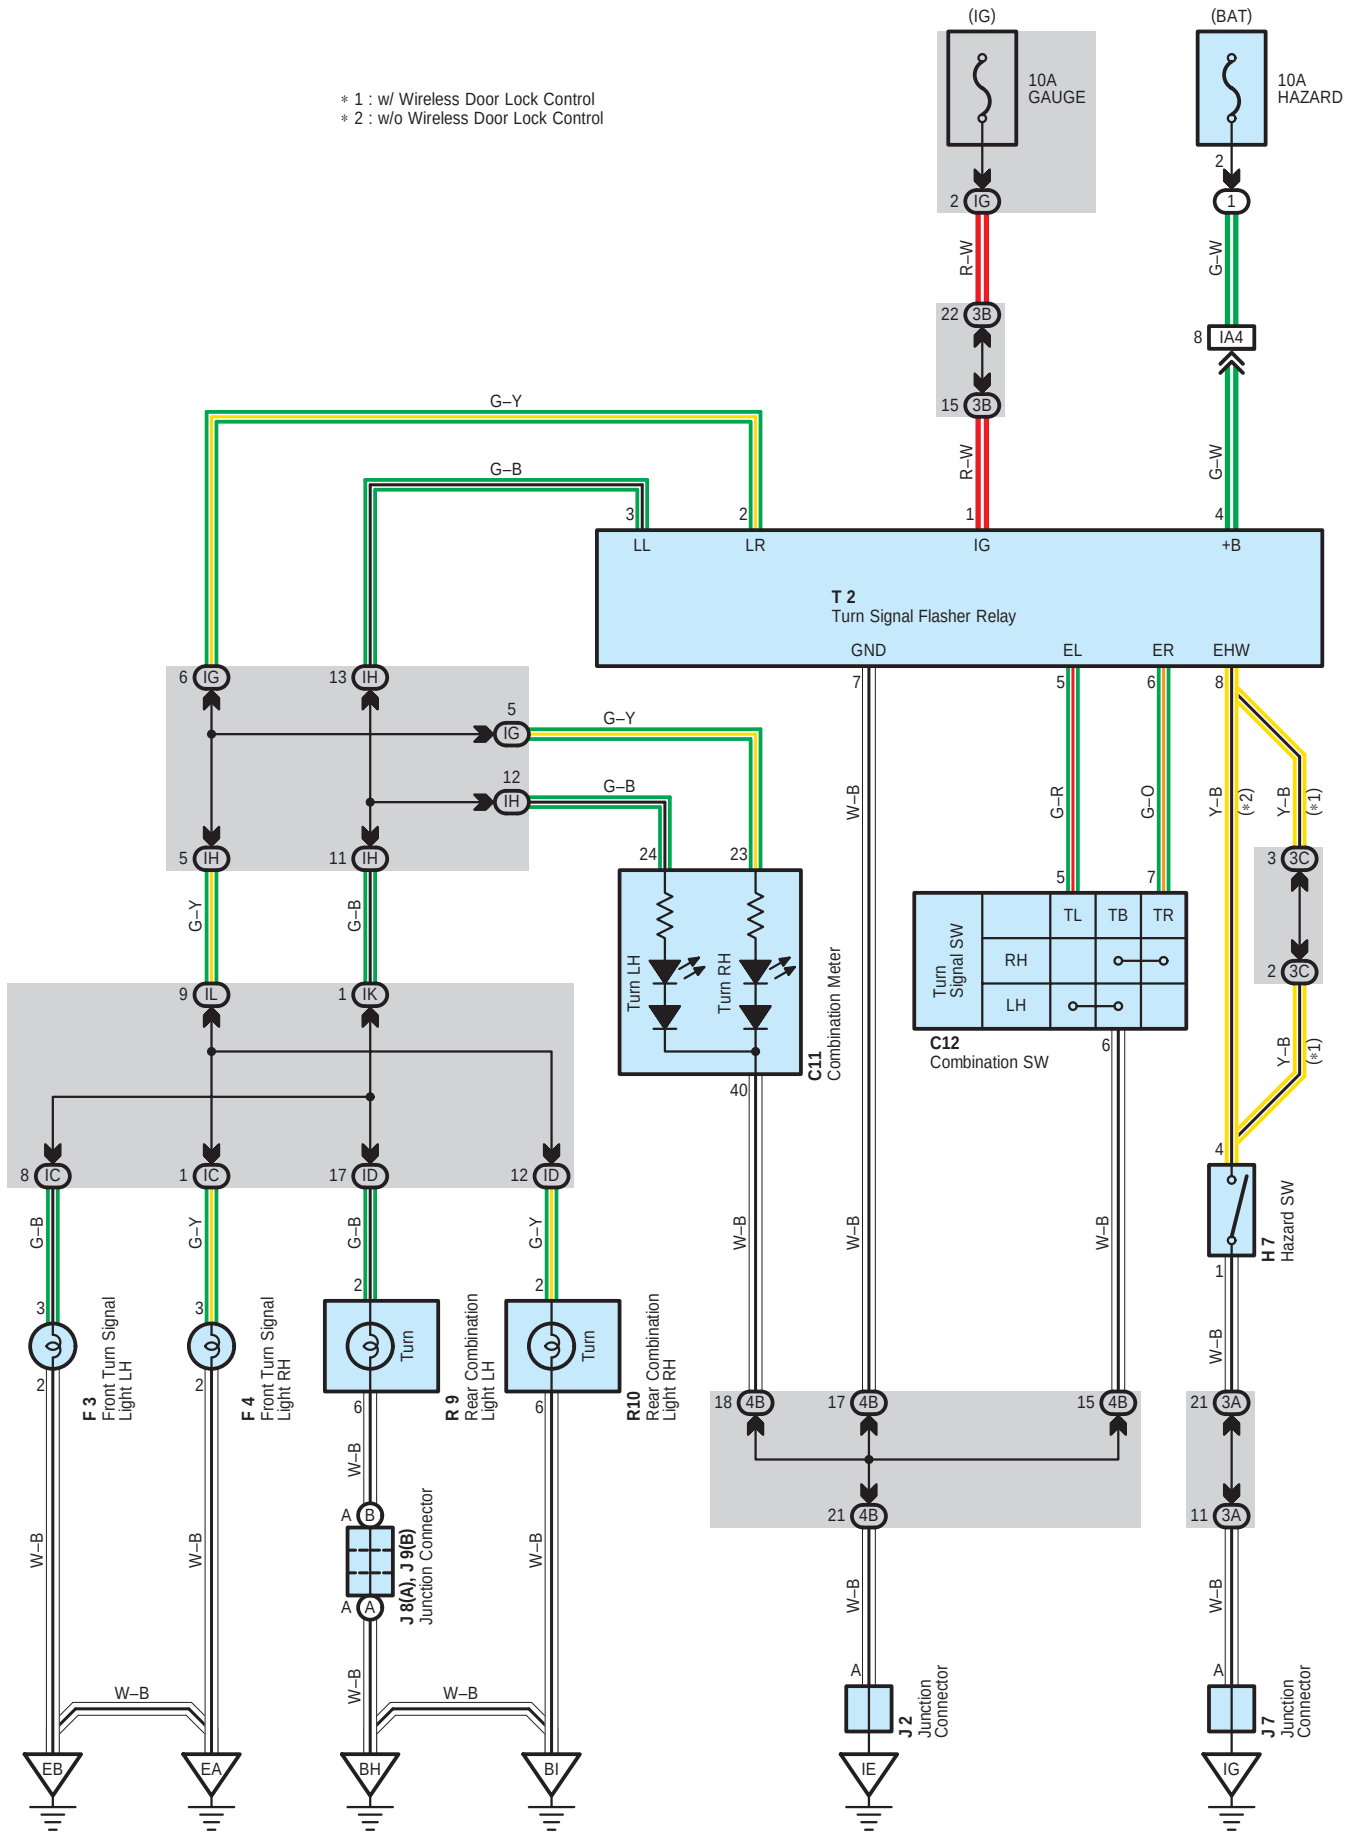

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
C11	36	H7	37	J9	B 38
C12	36	J2	37	R9	39
F3	34	J7	37	R10	39
F4	34	J8	A 38	T2	37

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IG	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IH		
IK		
IL	24	
3A	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
3B		
3C		
4B	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA4	42	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)

 : Ground Points

Code	See Page	Ground Points Location
EA	40	Front Right Fender
EB	40	Front Left Suspension Tower
IE	42	Behind Combination Meter
IG	42	Right Kick Panel
BH	44	Left Quarter Panel
BI	44	Right Quarter Panel