





Taillight and Illumination

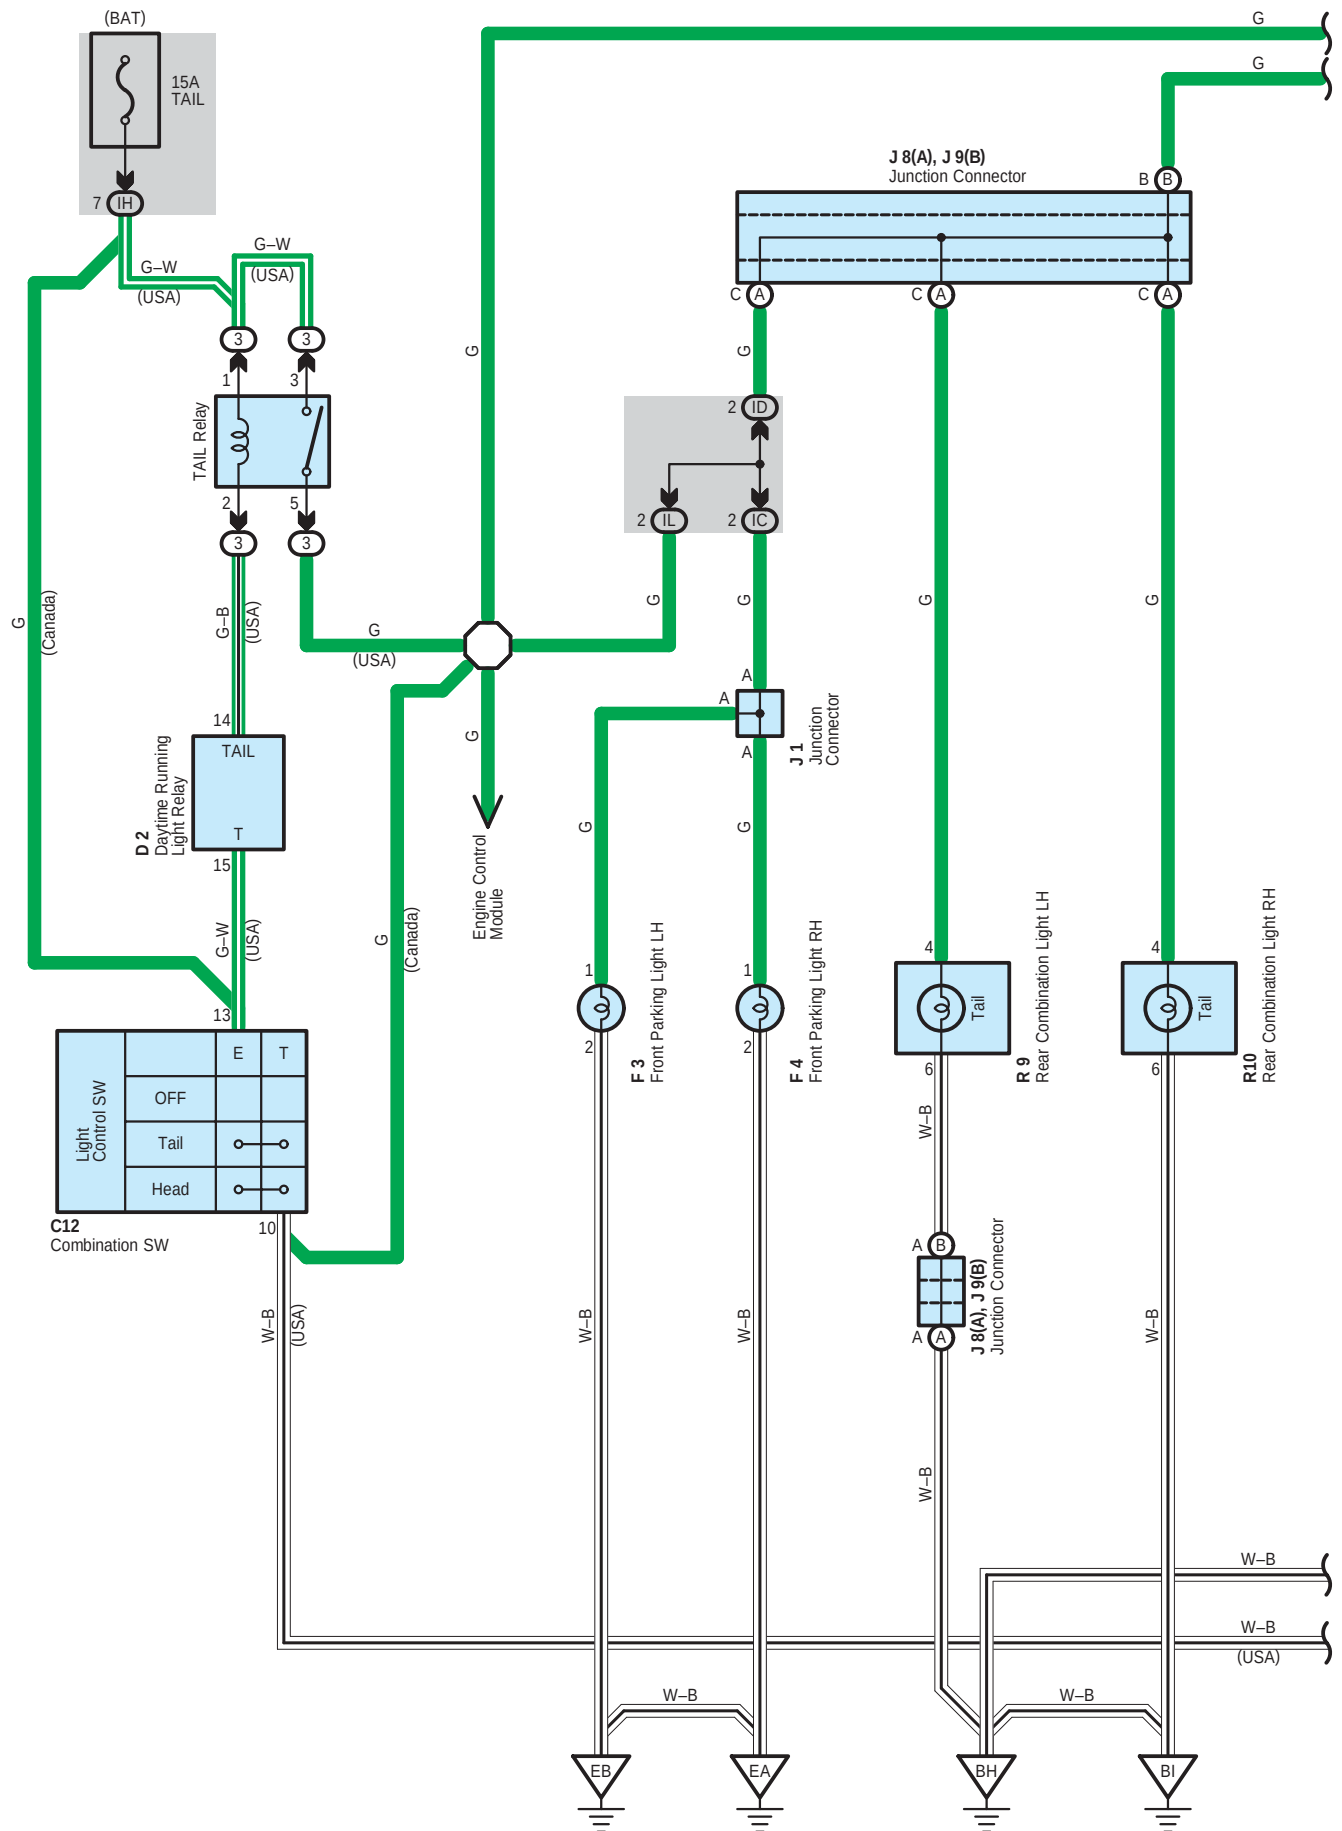

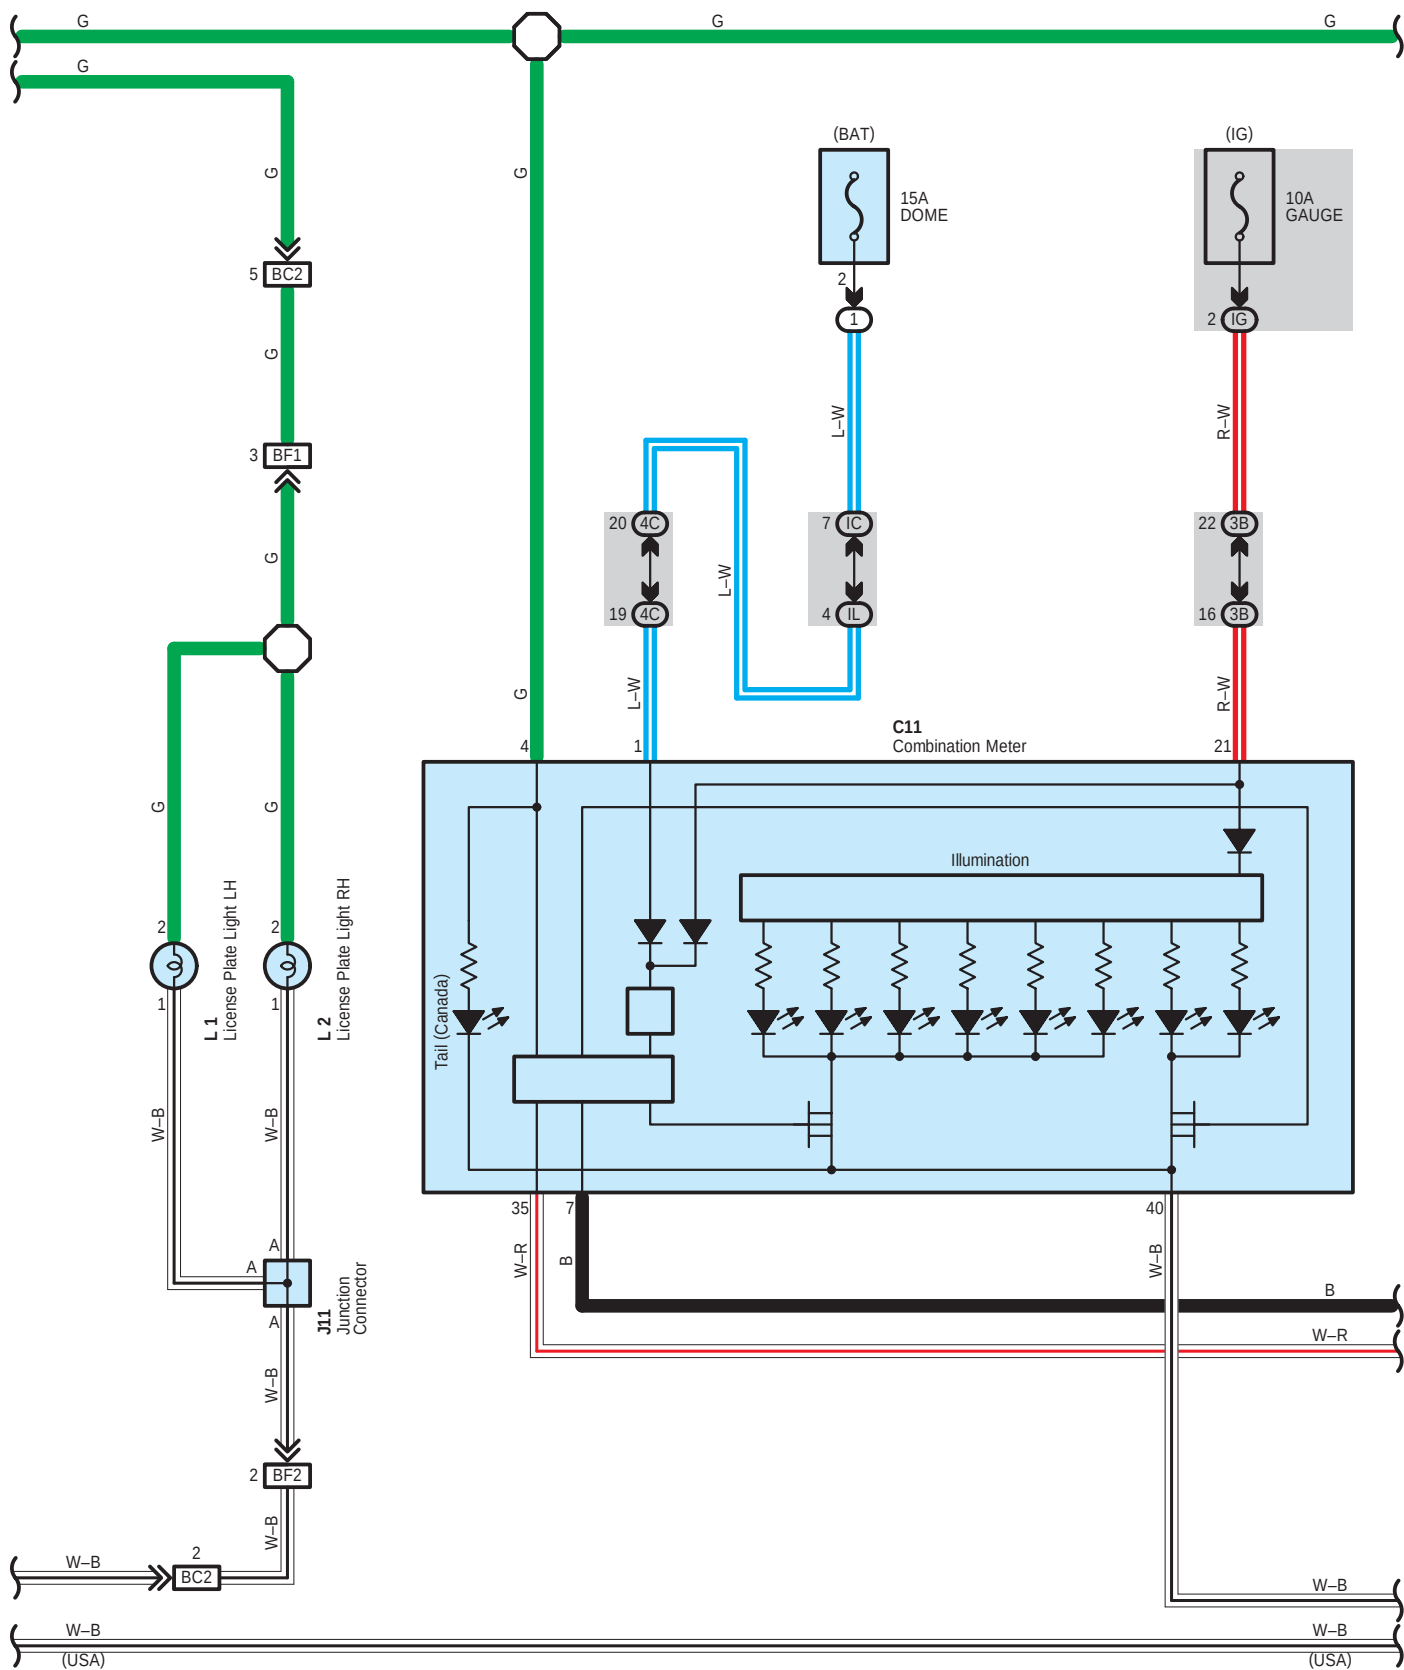

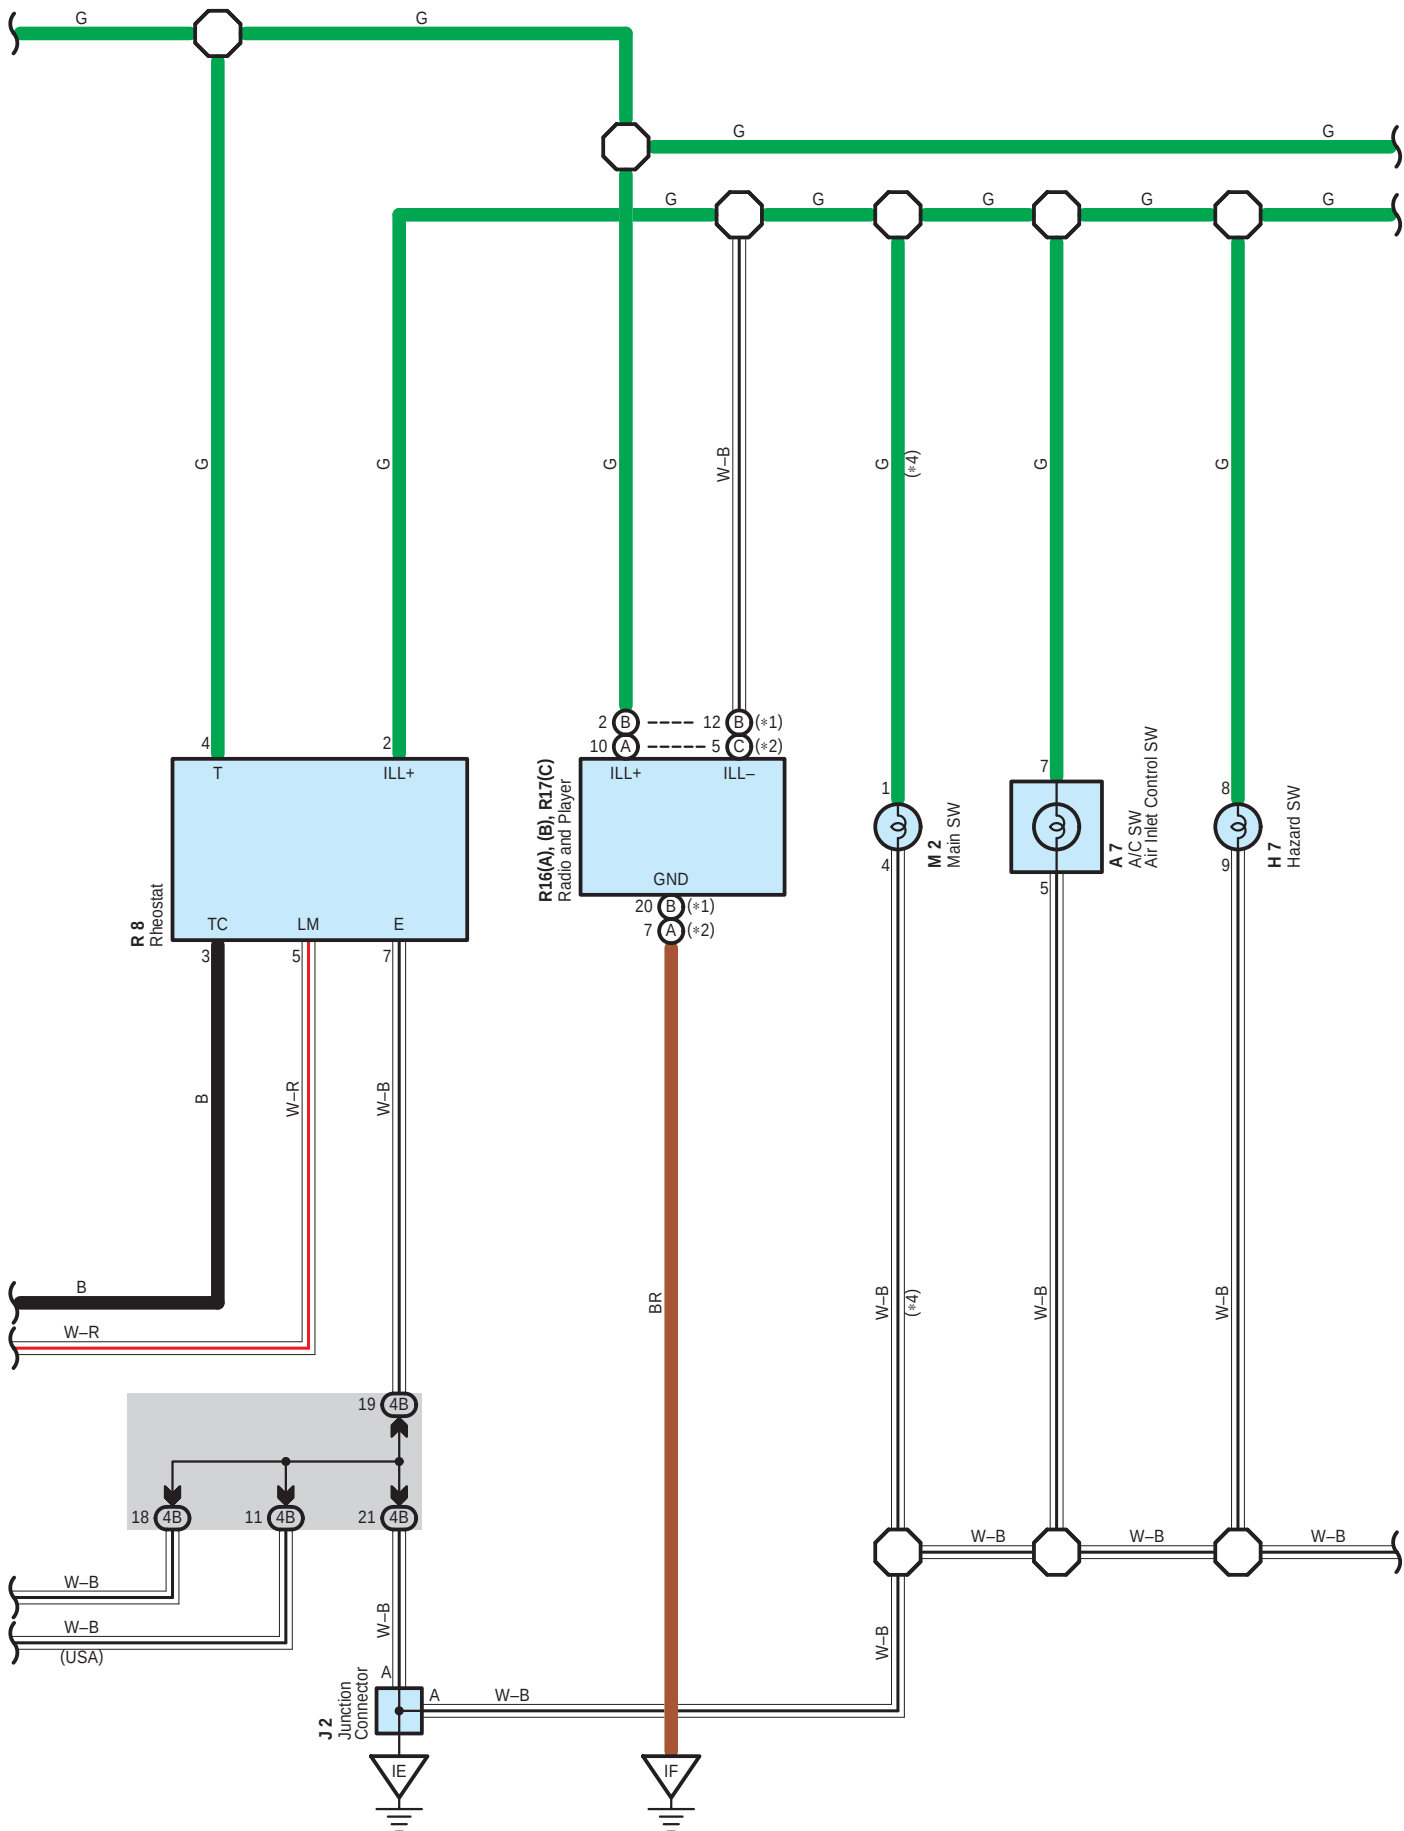

- * 1 : Separate Type Amplifier
- * 2 : Built-In Type Amplifier
- * 3 : w/ Cigarette Lighter Illumination
- * 4 : w/ AC 115 Volts Power Outlet

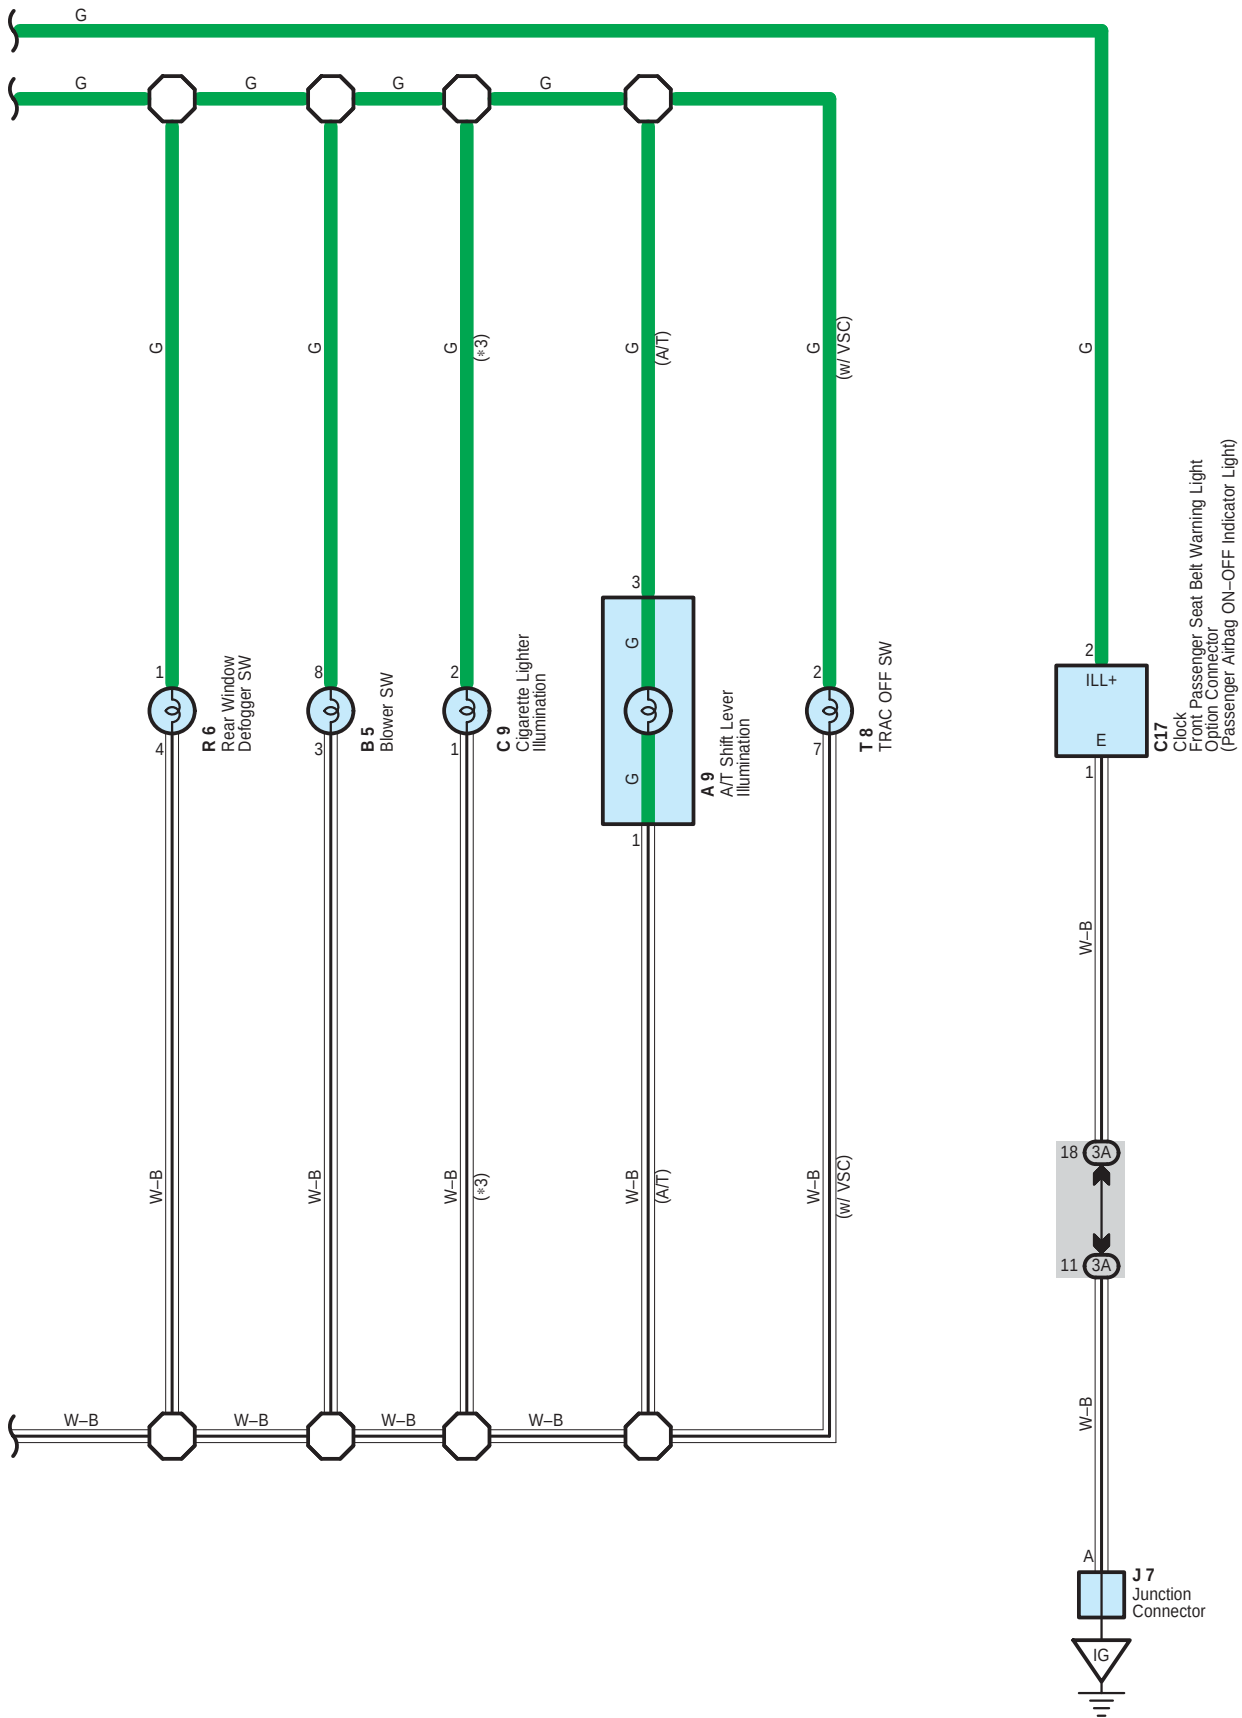

Taillight and Illumination

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A7	36	H7	37	R6	37
A9	36	J1	35	R8	37
B5	36	J2	37	R9	39
C9	36	J7	37	R10	39
C11	36	J8	A 38	R16	A 37
C12	36	J9	B 38		B 37
C17	36	J11	38	R17	C 37
D2	36	L1	39	T8	37
F3	34	L2	39		
F4	34	M2	37		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)
3	28	RH R/B (Right Side of the Instrument Panel Reinforcement)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IG	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IH		
IL	24	
3A	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
3B		
4B	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
4C		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BC2	44	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
BF1	44	Back Door No.1 Wire and Back Door No.2 Wire (Back Panel LH)
BF2		

: Ground Points

Code	See Page	Ground Points Location
EA	40	Front Right Fender
EB	40	Front Left Suspension Tower
IE	42	Behind Combination Meter
IF		
IG	42	Right Kick Panel
BH	44	Left Quarter Panel
BI	44	Right Quarter Panel

