




I GROUND POINT

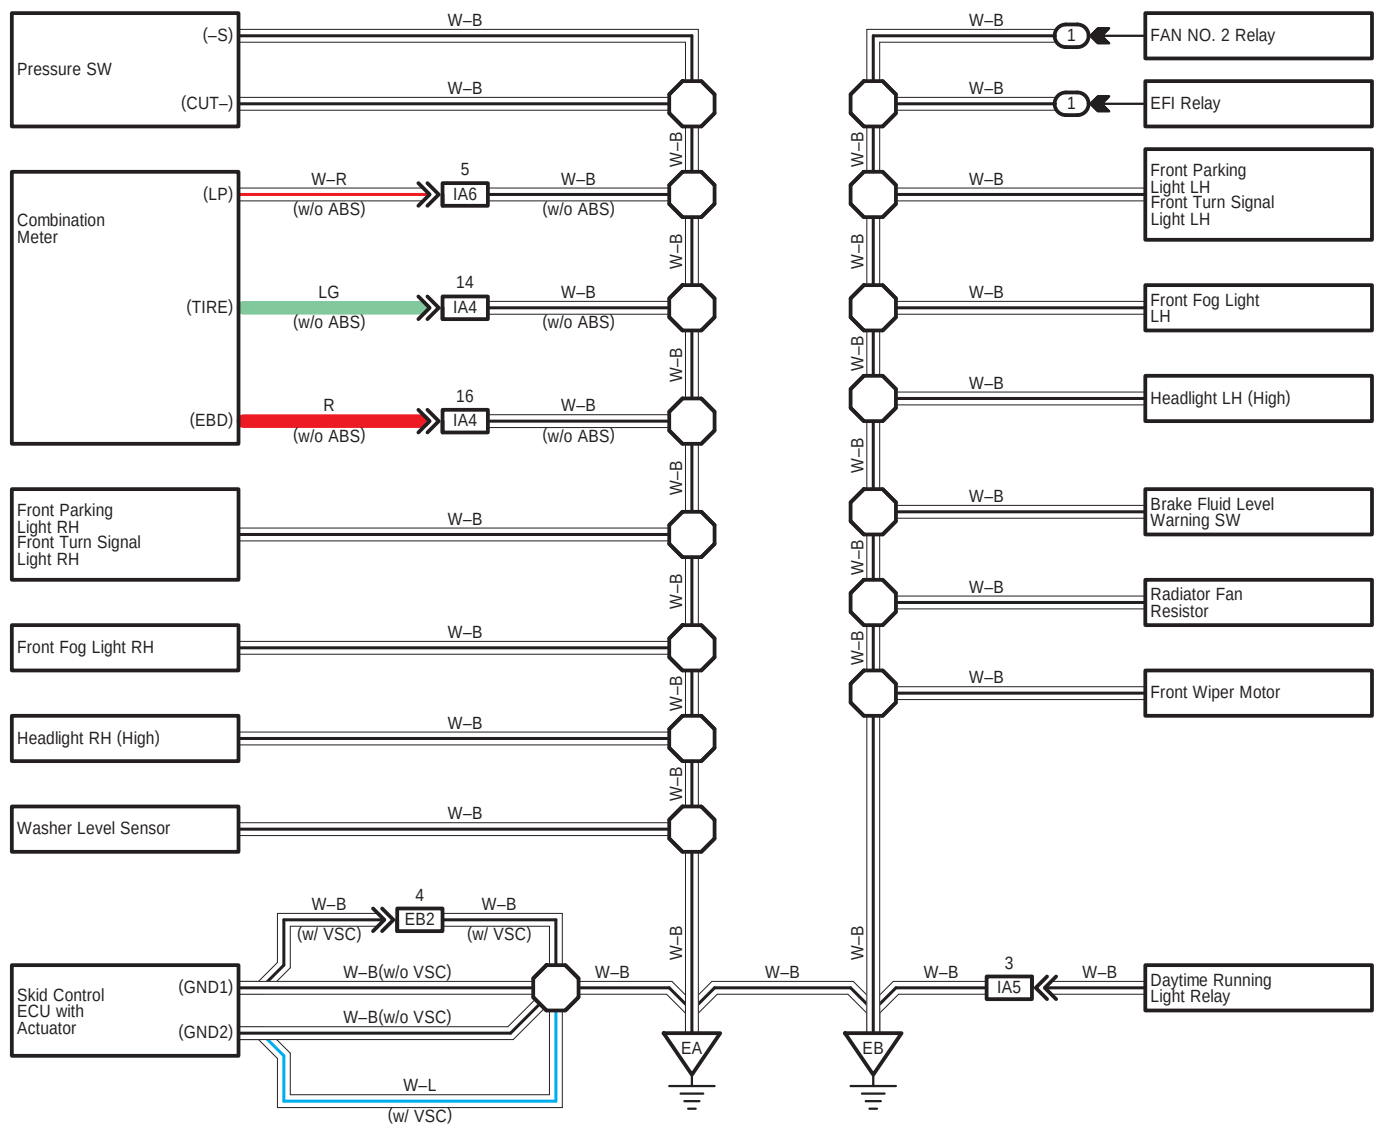


* 8 : w/ Side Airbag and/or Separate Type Amplifier
 * 9 : w/o Side Airbag and Built-In Type Amplifier

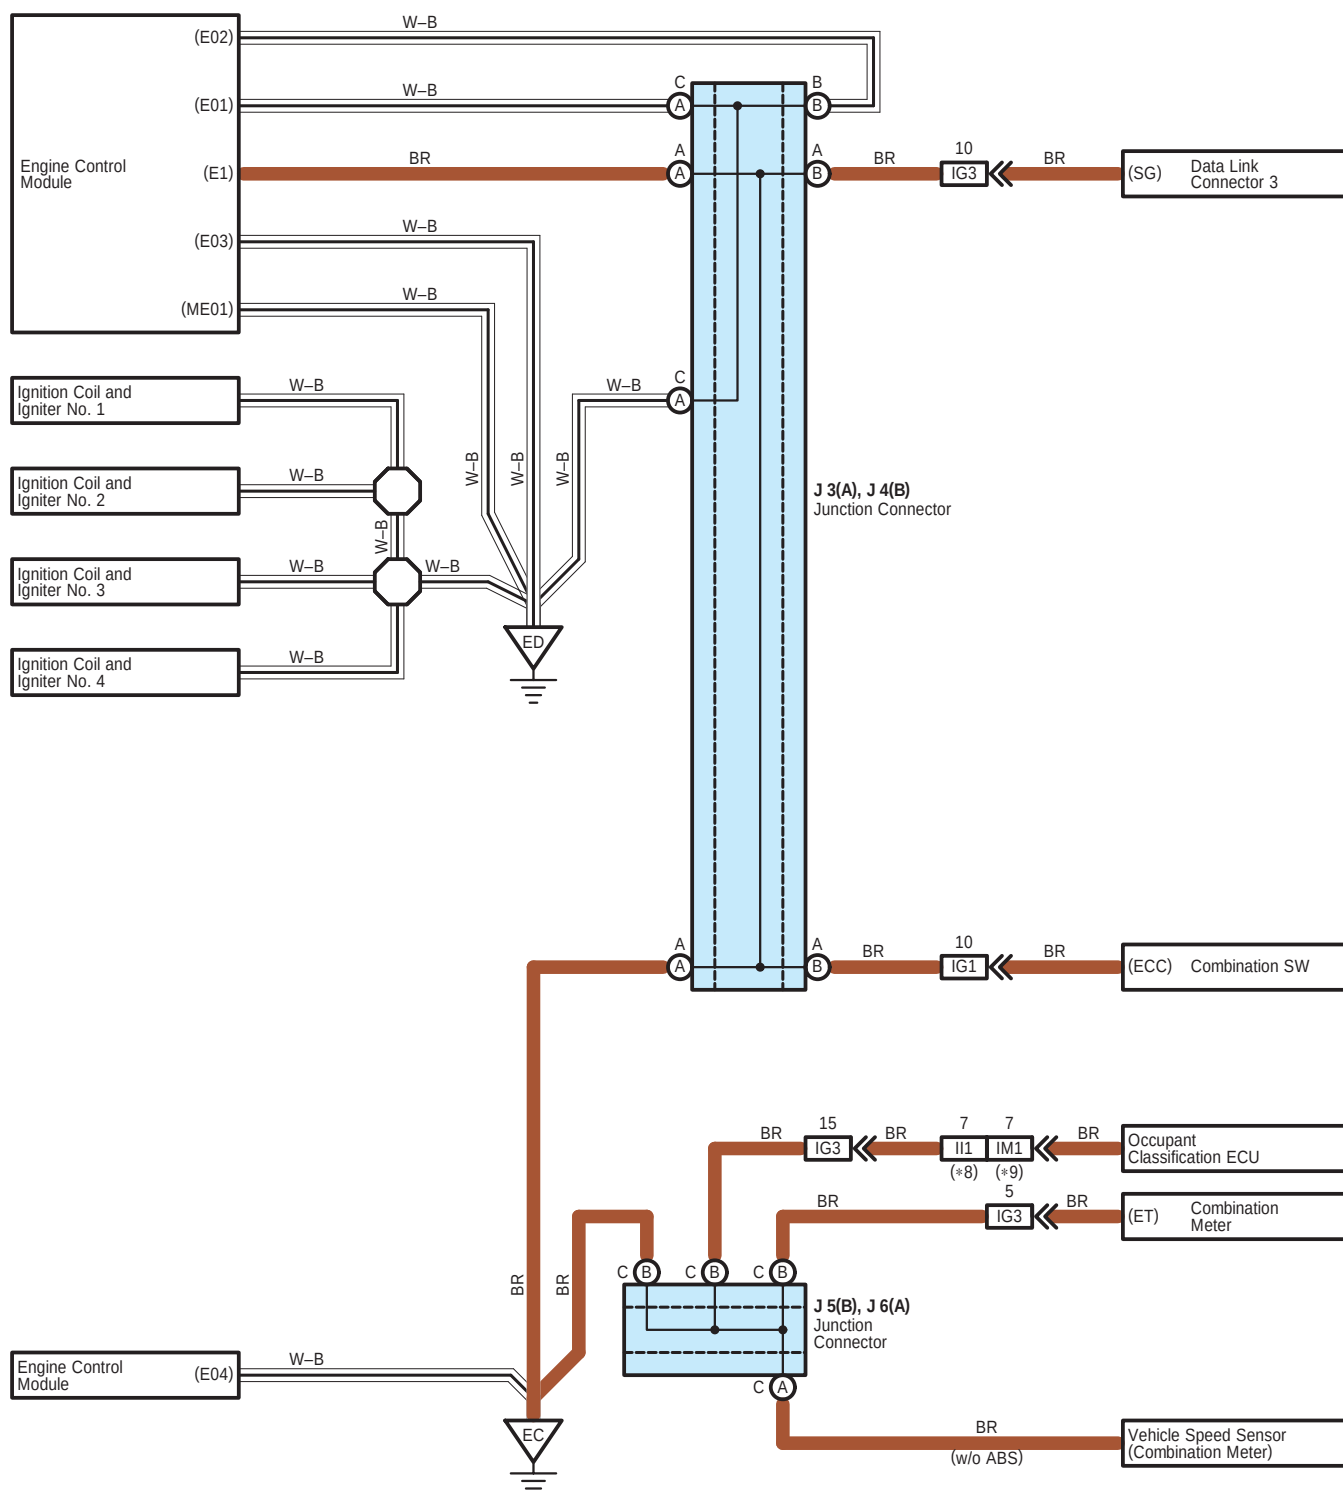

I GROUND POINT

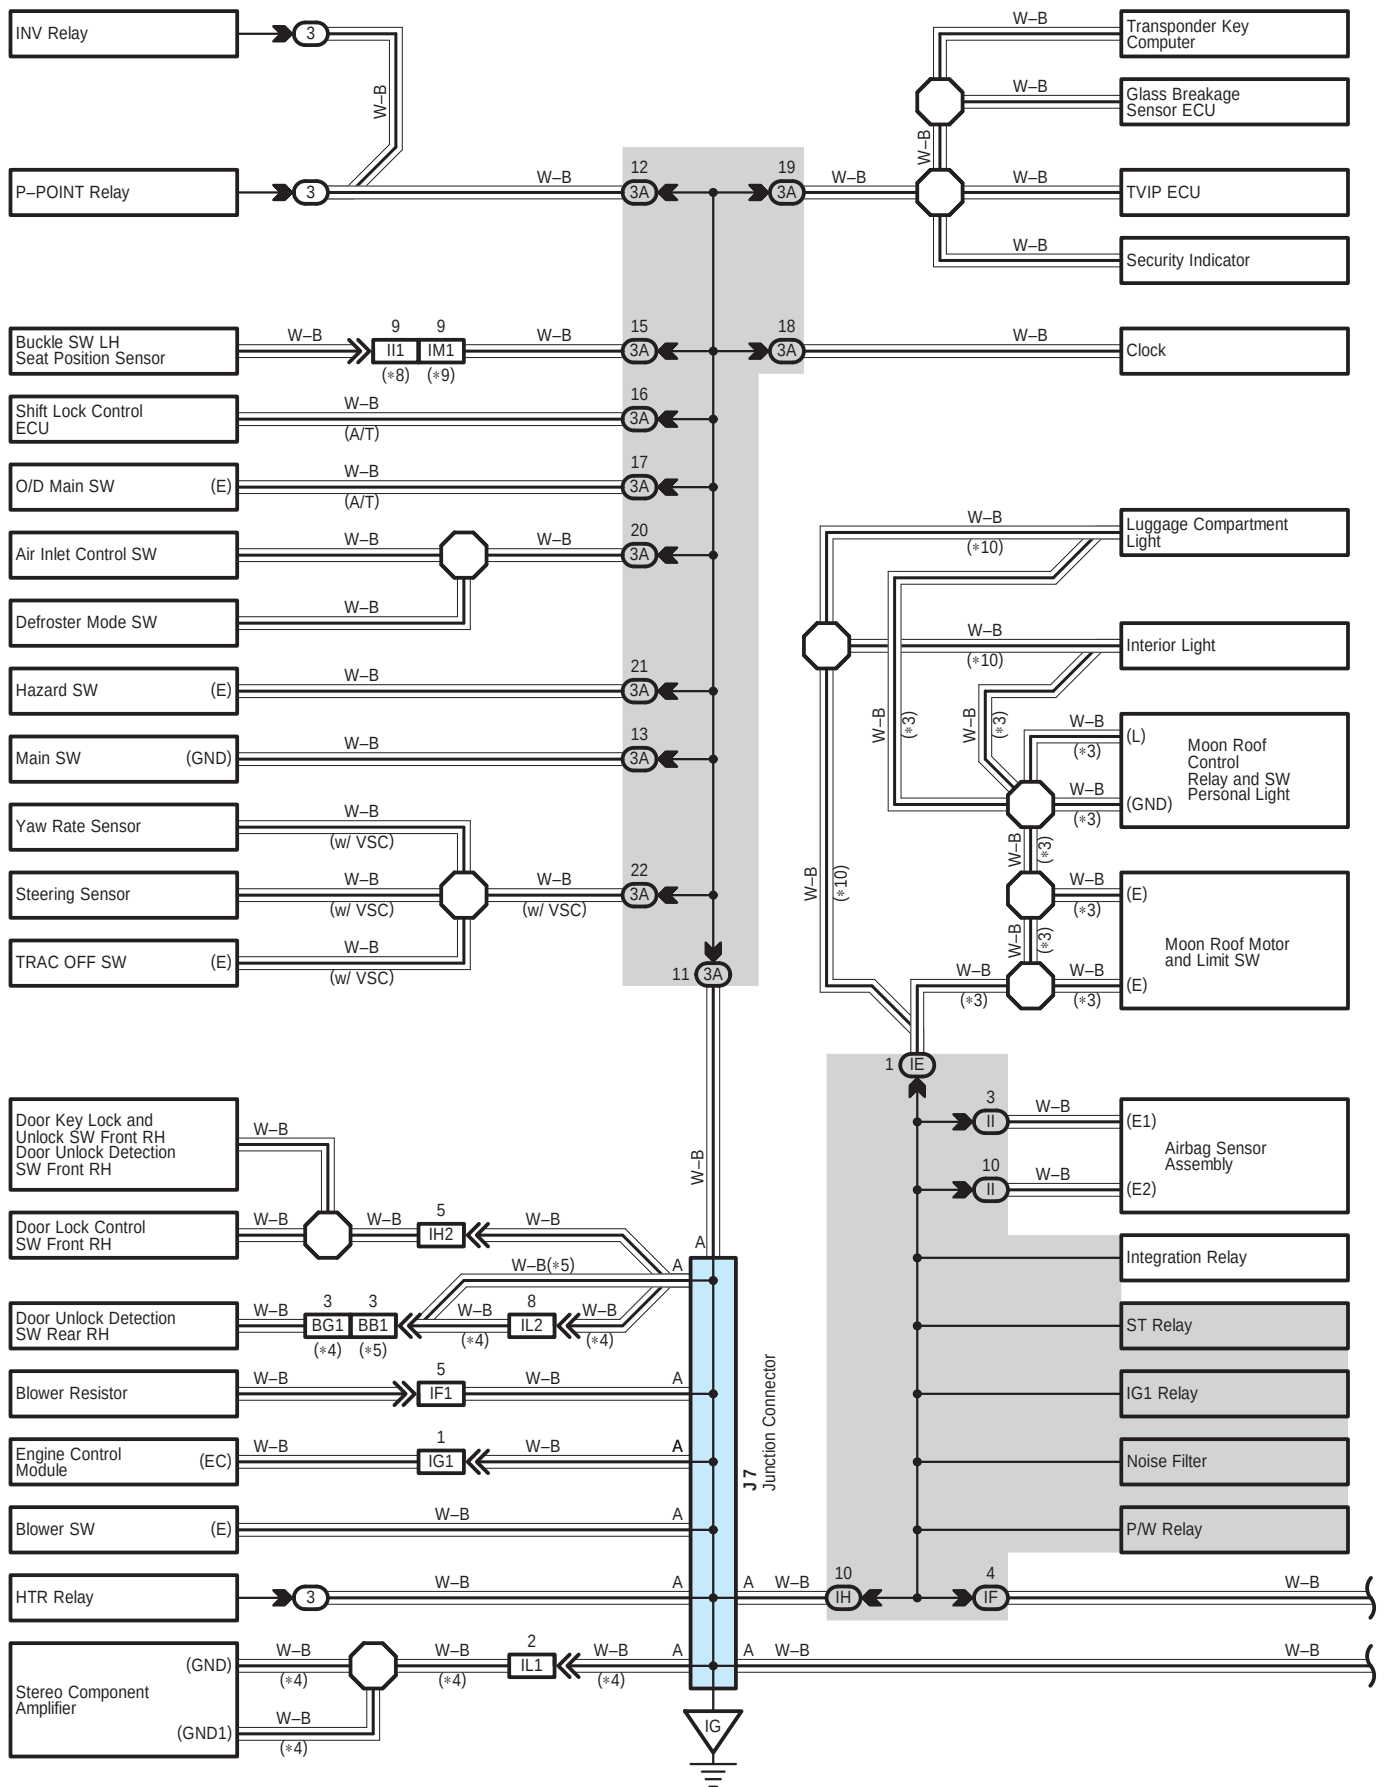

I GROUND POINT

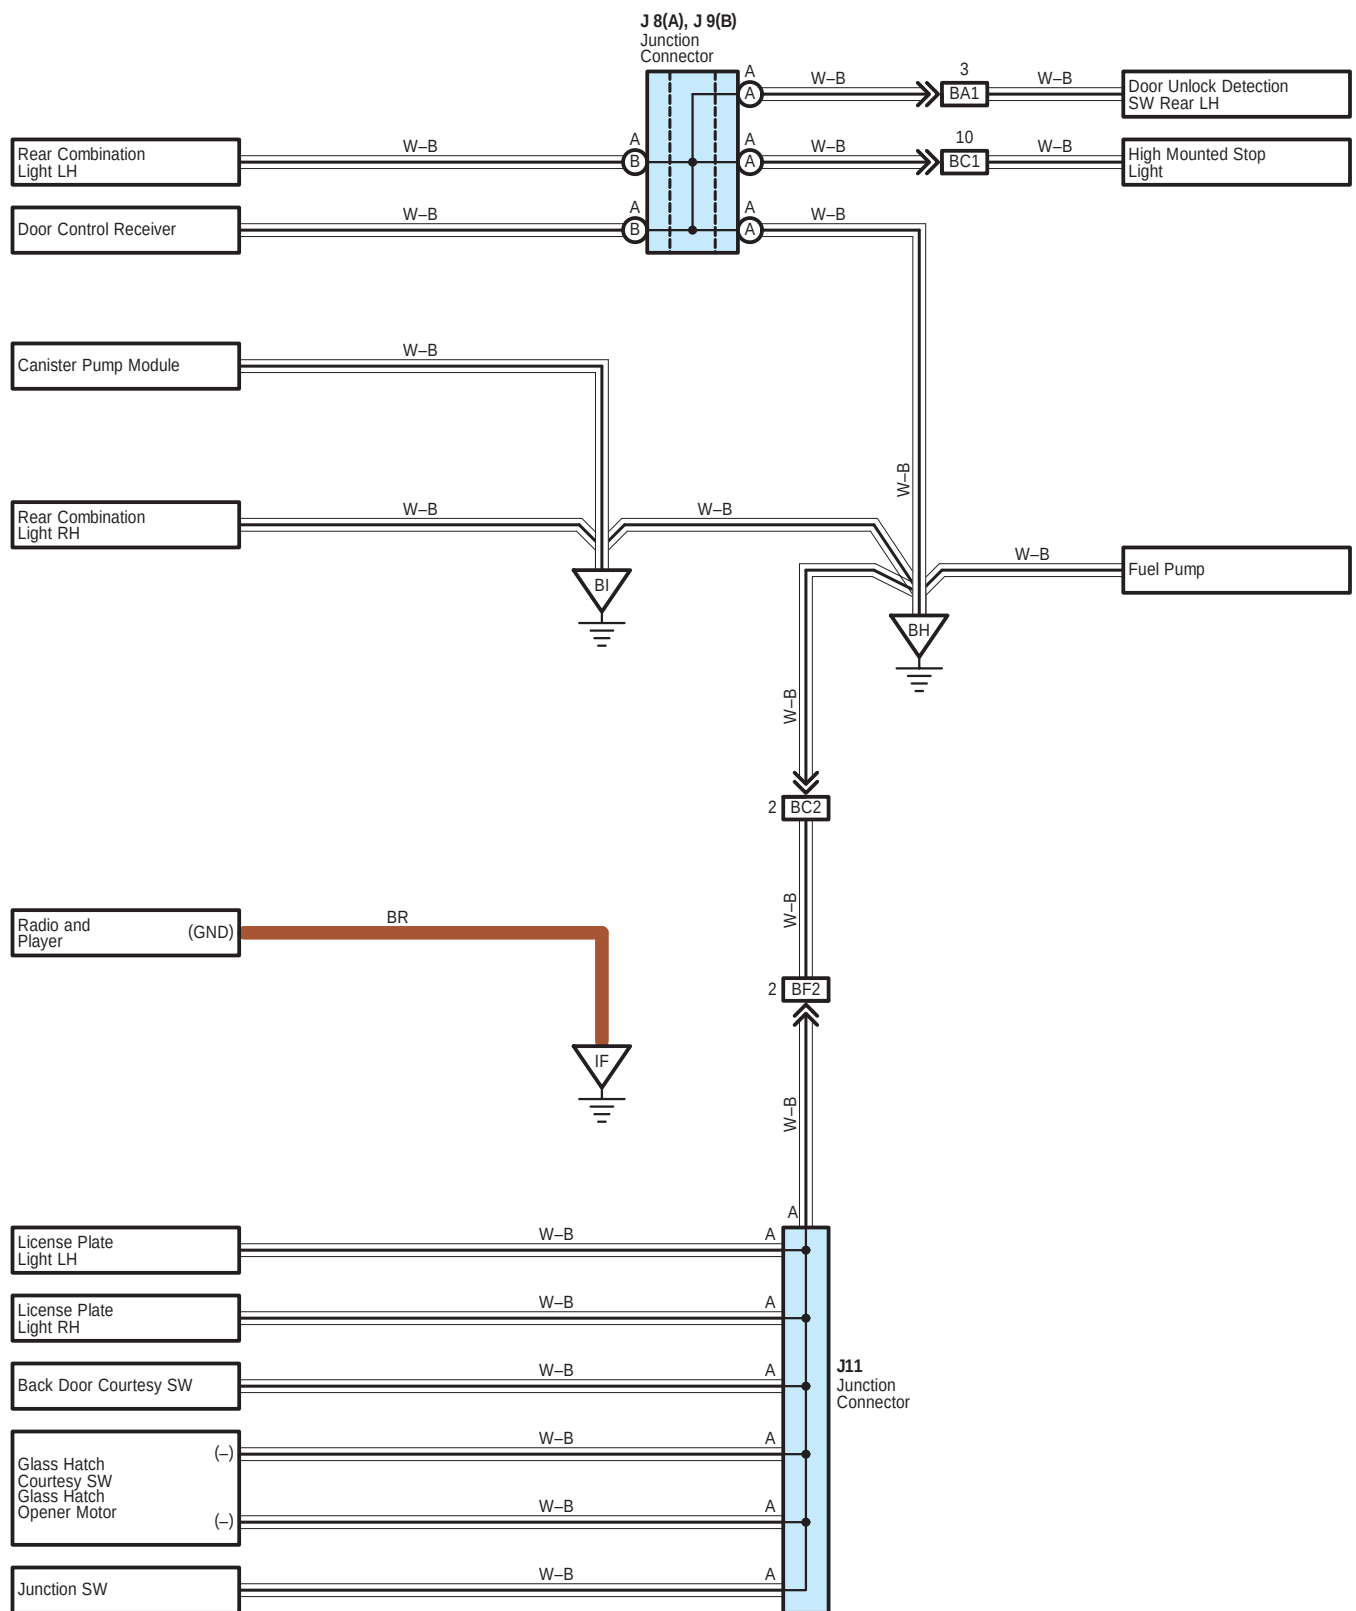

☐ : Parts Location

Code	See Page	Code	See Page	Code	See Page
J2	37	J5	B	J8	A
J3	A	J6	A	J9	B
J4	B	J7	37	J11	38

☐ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)
3	28	RH R/B (Right Side of the Instrument Panel Reinforcement)

☐ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IE	25	Roof Wire and Instrument Panel J/B (Lower Finish Panel)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IH		
II		
3A	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
4B	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

☐ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB2	40	Engine Room Main Wire and Engine Room Main Wire (Front Right Suspension Tower)
IA4	42	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IA5		
IA6		
IC1	42	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IF1	43	Instrument Panel Wire and A/C Sub Wire (Left Upper Side of the Blower Unit)
IG1	43	Engine Wire and Instrument Panel Wire (Blower Unit RH)
IG3		
IH2	43	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
II1	43	Instrument Panel Wire and Floor Wire (Under the Instrument Panel Center)
IJ1	43	Console Wire and Instrument Panel Wire (Front Side of the Parking Brake Lever)
IK1	43	Roof Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IL1	43	Floor Wire and Instrument Panel Wire (Right Kick Panel)
IL2		
IM1	43	Instrument Panel Wire and Instrument Panel No.3 Wire (Under the Instrument Panel Center)
BA1	44	Rear Door LH Wire and Floor Wire (Left Center Pillar)
BB1	44	Rear Door RH Wire and Instrument Panel Wire (Right Center Pillar)
BC1	44	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
BC2		
BF2	44	Back Door No.1 Wire and Back Door No.2 Wire (Back Panel LH)
BG1	44	Rear Door RH Wire and Floor Wire (Right Center Pillar)

I GROUND POINT



: Ground Points

Code	See Page	Ground Points Location
EA	40	Front Right Fender
EB	40	Front Left Suspension Tower
EC	40	Left Side of the Cylinder Head
ED		
IE	42	Behind Combination Meter
IF		
IG	42	Right Kick Panel
BH	44	Left Quarter Panel
BI	44	Right Quarter Panel

