

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Magnetic Clutch	90980-11271	C17	Clock	90980-11923
A 2	ABS Speed Sensor Front LH	90980-11003		Front Passenger Seat Belt Warning Light	
A 3	ABS Speed Sensor Front RH			Option Connector (Passenger Airbag ON-OFF Indicator Light)	
A 4	Airbag Sensor Front LH	90980-11856	C18	Combination Meter	90980-12155
A 5	Airbag Sensor Front RH		C19	Curtain Shield Airbag Squib LH	90980-12219
A 6	Ambient Temp. Sensor	90980-11030	C20	Curtain Shield Airbag Squib RH	
A 7	A/C SW	90980-12162	D 1	Data Link Connector 3	90980-11665
	Air Inlet Control SW		D 2	Daytime Running Light Relay	90980-12034
A 9	A/T Shift Lever Illumination	90980-10795	D 3	Defroster Mode SW	90980-10801
	O/D Main SW		D 4	Diode (IG Relay)	90980-10962
A11	Air Inlet Control Servo Motor	90980-11909	D 5	Diode (Door Courtesy)	90980-10660
A12	Airbag Sensor Assembly	90980-12449	D 6	Door Control Receiver	90980-11909
A13	Airbag Sensor Assembly	90980-12391	D 7	Door Courtesy SW Front LH	90980-10871
A14	Airbag Sensor Assembly	90980-12450	D 8	Door Courtesy SW Front RH	
A15	Airbag Squib (Front Passenger Airbag Assembly)	90980-12160	D 9	Door Courtesy SW Rear LH	
A16	Airbag Squib (Steering Wheel Pad)		D10	Door Courtesy SW Rear RH	
A17	Antenna Amplifier	90980-10871	D11	Door Key Lock and Unlock SW Front LH	90980-12226
A18	Automatic Light Control Sensor	90980-11107		Door Lock Motor Front LH	
A19	ABS Speed Sensor Rear LH	90980-11900		Door Unlock Detection SW Front LH	
A20	ABS Speed Sensor Rear RH		D12	Door Key Lock and Unlock SW Front RH	
A24	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-10869		Door Lock Motor Front RH	
A25	Accel Position Sensor	90980-11144		Door Unlock Detection SW Front RH	
B 1	Back-Up Light SW	90980-11250	D13	Door Lock Control SW Front LH	90980-10797
B 2	Brake Fluid Level Warning SW	90980-11207	D14	Door Lock Control SW Front LH	90980-12122
B 3	Blower Motor	90980-10214		Power Window Master SW	
B 4	Blower Resistor	90980-11136	D15	Door Lock Control SW Front RH	90980-10797
B 5	Blower SW	90980-10877	D16	Door Lock Motor Rear LH	90980-12226
B 6	Back Door Courtesy SW	90980-10795		Door Unlock Detection SW Rear LH	
	Back Door Lock Motor		D17	Door Lock Motor Rear RH	
B 7	Buckle SW LH	90980-12257		Door Unlock Detection SW Rear RH	
	Seat Position Sensor		D18	Diode (Rear Wiper)	
B 8	Buckle SW RH	90980-11019	E 1	Electronically Controlled Transmission Solenoid	90980-10854
	Occupant Detection Sensor		E 2	Engine Coolant Temp. Sensor	90980-10737
C 1	Camshaft Position Sensor	90980-10947	E 3	Engine Control Module	90980-12527
C 2	Camshaft Timing Oil Control Valve (VVT)	90980-11162	E 4	Engine Control Module	90980-12528
C 4	Crankshaft Position Sensor	90980-10947	E 5	Engine Control Module	90980-12529
C 8	Cigarette Lighter	90980-10760	E 6	Engine Control Module	90980-12525
	Power Outlet (Front)		F 1	Front Fog Light LH	90080-98038
C 9	Cigarette Lighter Illumination	90980-11148	F 2	Front Fog Light RH	
C10	Clutch Start SW	90980-10825	F 3	Front Parking Light LH	90980-11020
C11	Combination Meter	90980-12169		Front Turn Signal Light LH	
C12	Combination SW	90980-12007	F 4	Front Parking Light RH	
C13	Combination SW	90980-12183		Front Turn Signal Light RH	
C14	Combination SW	90980-12008	F 5	Front Washer Motor	90980-10981
C15	Cruise Control Clutch SW	90980-10906			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
F 6	Front Wiper Motor	90980-11599	K 1	Knock Sensor (Bank 1)	90980-11875
F 8	Front Door Speaker LH	90980-10935	L 1	License Plate Light LH	90980-11148
F 9	Front Door Speaker RH		L 2	License Plate Light RH	
F10	Fuel Pump	90980-11077	L 3	Luggage Compartment Light	90980-10908
	Fuel Sender		L 4	Canister Pump Module	90980-12380
G 1	Generator	90980-11349	M 1	Mass Air Flow Meter	90980-11317
G 2	Generator	90980-09373	M 2	Main SW	90980-10797
G 3	Glass Breakage Sensor ECU	90980-10799	M 3	Moon Roof Control Relay and SW	90980-10799
G 4	Glass Hatch Opener SW	90980-10789		Personal Light	
G 5	Glass Hatch Courtesy SW	90980-10795	M 4	Moon Roof Motor and Limit SW	90980-11011
	Glass Hatch Opener Motor		N 1	Noise Filter (Ignition)	90980-10843
H 1	Headlight LH (High)	90080-98039	N 2	Noise Filter (Rear Window Defogger)	90980-10825
H 2	Headlight LH (Low)	90080-98038	O 2	Oil Pressure SW	90980-11363
H 3	Headlight RH (High)	90080-98039	O 4	Occupant Classification ECU	90980-12356
H 4	Headlight RH (Low)	90080-98038	O 5	Occupant Classification ECU	90980-12357
H 6	Horn	90980-10619	O 6	Occupant Classification Sensor Front LH	90980-12353
H 7	Hazard SW	90980-10801	O 7	Occupant Classification Sensor Front RH	90980-12354
H 8	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-10794	O 8	Occupant Classification Sensor Rear LH	
H 9	High Mounted Stop Light	90980-11148	O 9	Occupant Classification Sensor Rear RH	90980-12353
I 2	Ignition Coil and Igniter No.1	90980-11885	P 1	Park/Neutral Position SW	90980-12362
I 3	Ignition Coil and Igniter No.2		P 2	Power Steering Oil Pressure SW	90980-11428
I 4	Ignition Coil and Igniter No.3		P 3	Pressure SW	90980-10943
I 5	Ignition Coil and Igniter No.4		P 4	Parking Brake SW	90980-10871
I 6	Injector No.1	90980-11875	P 5	Power Outlet (115V)	90980-10601
I 7	Injector No.2		P 6	Power Outlet (Rear)	90980-10760
I 8	Injector No.3		P 7	Power Window Control SW Front RH	90980-10789
I 9	Injector No.4		P 8	Power Window Control SW Rear LH	90980-10631
I10	IG Relay	82660-0C010	P 9	Power Window Control SW Rear RH	
I11	Ignition SW	90980-11778	P10	Power Window Motor Front LH	90980-10797
I12	Integration Relay	90980-12203	P11	Power Window Motor Front RH	
I13	Inner Mirror	90980-11794	P12	Power Window Motor Rear LH	
	Personal Light		P13	Power Window Motor Rear RH	
I14	Interior Light	90980-10908	P14	Pretensioner LH	90980-12253
J 1	Junction Connector	90980-10803	P15	Pretensioner RH	
J 2	Junction Connector	90980-11539	R 1	Radiator Fan Motor	90980-10928
J 3	Junction Connector	90980-11661	R 2	Radiator Fan Resistor	
J 4	Junction Connector		R 3	Rear Washer Motor	90980-10981
J 5	Junction Connector	90980-11915	R 6	Rear Window Defogger SW	90980-10797
J 6	Junction Connector		R 7	Remote Control Mirror SW	90980-11657
J 7	Junction Connector	90980-11686	R 8	Rheostat	90980-11989
J 8	Junction Connector	90980-11661	R 9	Rear Combination Light LH	90980-10797
J 9	Junction Connector		R10	Rear Combination Light RH	
J10	Junction Connector	90980-10803	R11	Rear Door Speaker LH	90980-10935
J11	Junction Connector	90980-11542	R12	Rear Door Speaker RH	
J12	Junction SW	90980-10772	R13	Rear Wiper Relay	90980-10797
J13	Junction Connector	90980-11915			

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
R14	Remote Control Mirror LH	90980-10907	S17	Side Airbag Sensor Rear LH	90980-12352
R15	Remote Control Mirror RH		S18	Side Airbag Sensor Rear RH	
R16	Radio and Player (Built-In Type Amplifier)	90980-10997	T 2	Turn Signal Flasher Relay	90980-10799
	Radio and Player (Separate Type Amplifier)	90980-12038	T 3	TVIP ECU	90980-12169
R17	Radio and Player	90980-10996	T 4	Tweeter LH	90980-10915
S 1	Skid Control ECU with Actuator (w/ VSC)	90980-12297	T 5	Tweeter RH	
	Skid Control ECU with Actuator (w/o VSC)	90980-12426	T 6	Throttle Control Motor	90980-11858
S 2	Starter	90980-09463		Throttle Position Sensor	
S 3	Starter	90980-11400	T 7	Tire Pressure Warning Reset SW	90980-10321
S 4	Security Indicator (w/ TVIP System)	90980-11013	T 8	TRAC OFF SW	90980-10801
	Security Indicator (w/o TVIP System)	90980-11490	T 9	Transponder Key Amplifier	90980-12092
S 5	Shift Lock Control ECU	90980-11909	T10	Transponder Key Computer	90980-12423
S 6	Starter Cut Relay	82660-0C010	U 1	Unlock Warning SW	90980-10860
S 7	Stop Light SW	90980-11118	V 1	Vehicle Speed Sensor (Combination Meter)	90980-11143
S10	Side Airbag Squib LH	90980-11864	V 5	VSV (Purge)	90980-11156
S11	Side Airbag Squib RH		V 6	Voltage Inverter	90980-10799
S12	Steering Sensor	82824-45030	V10	VSC Warning Buzzer	90980-10906
S13	Stereo Component Amplifier	90980-10821	W 1	Woofer	90980-10795
S14	Stereo Component Amplifier	90980-12200	W 2	Washer Level Sensor	90980-11068
S15	Side Airbag Sensor Front LH	90980-12225	Y 1	Yaw Rate Sensor	90980-11904
S16	Side Airbag Sensor Front RH				

Note: Not all of the above part numbers of the connector are established for the supply.

