AUTOMATIC TRANSAXLE ASSY (A246E)

COMPONENTS

400MQ–01

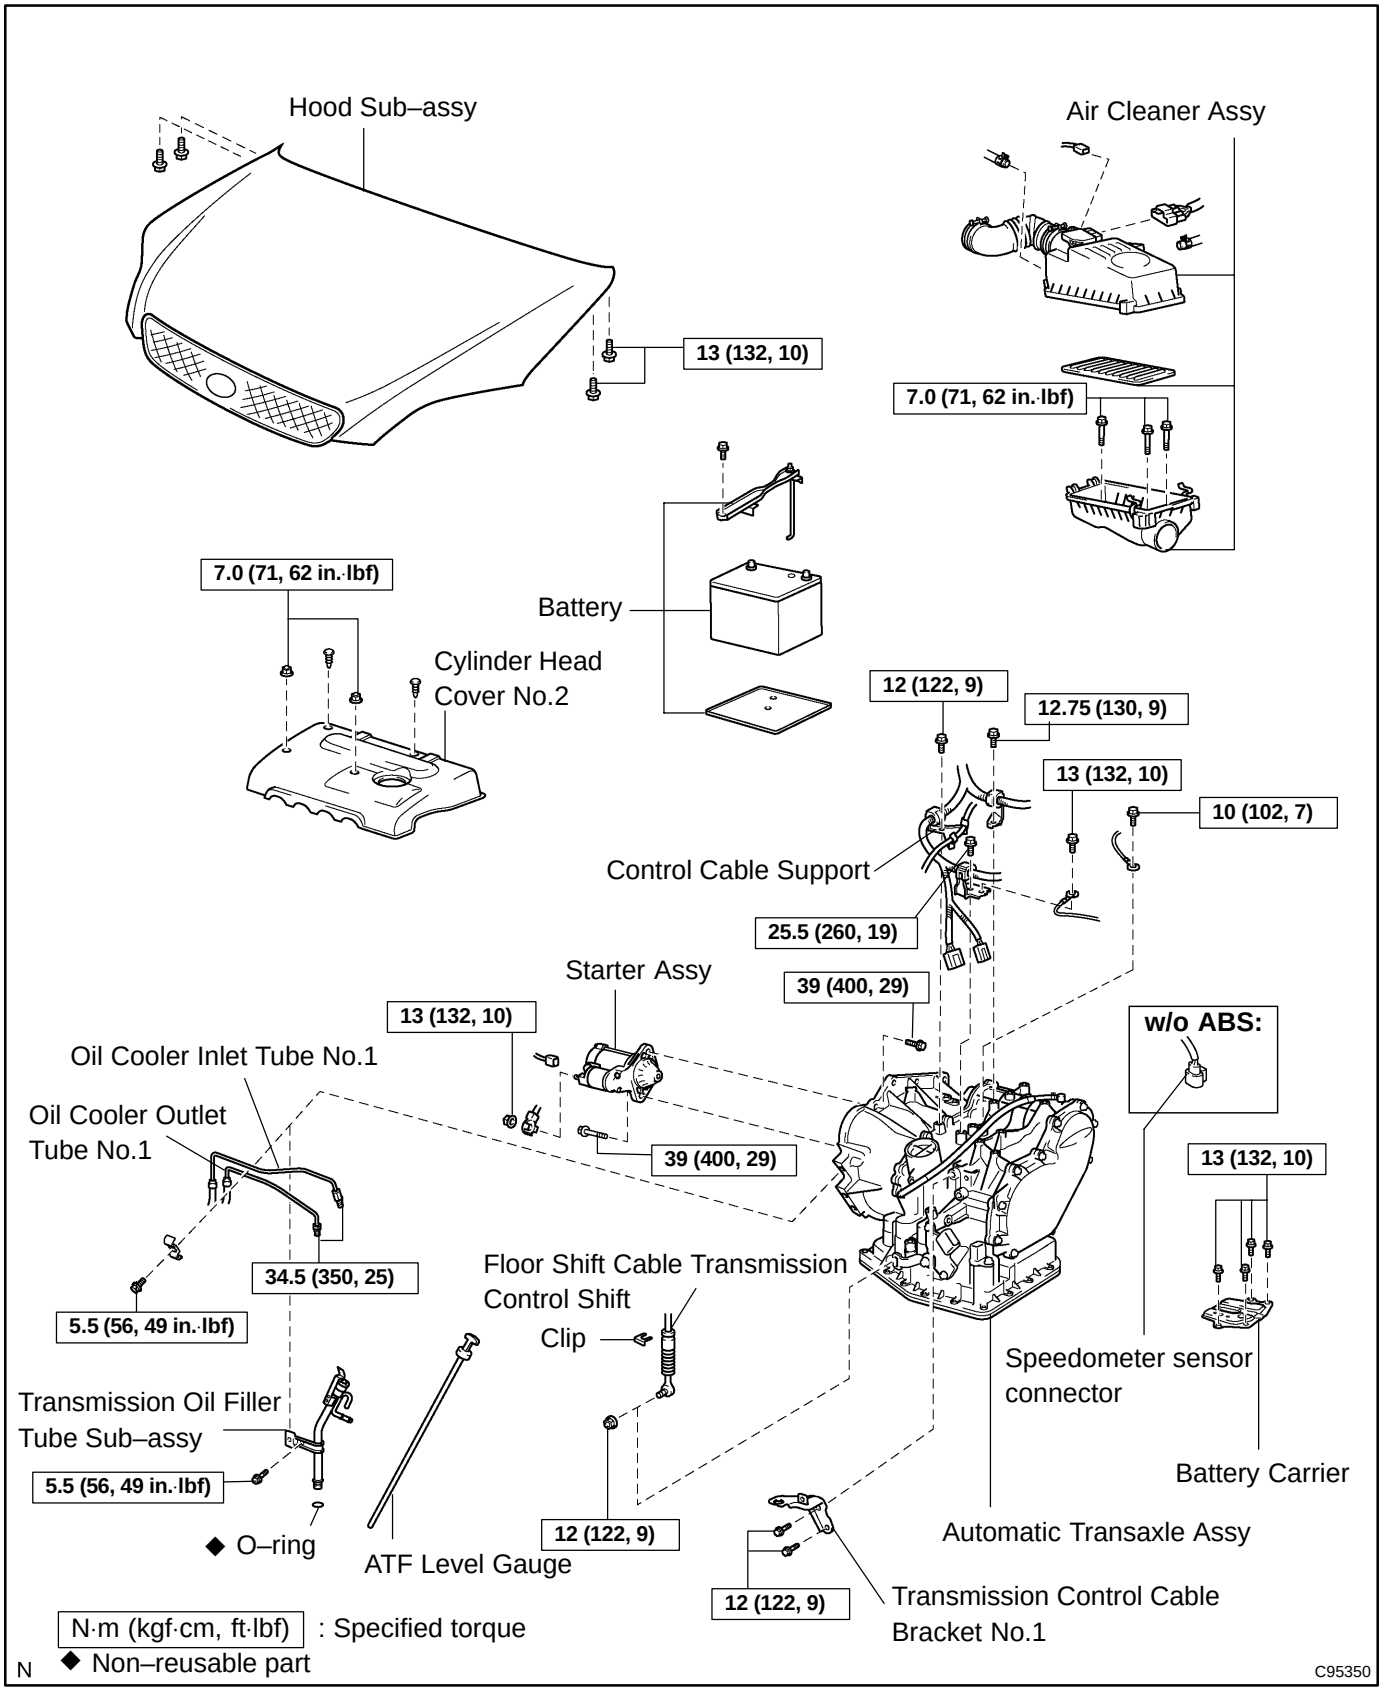

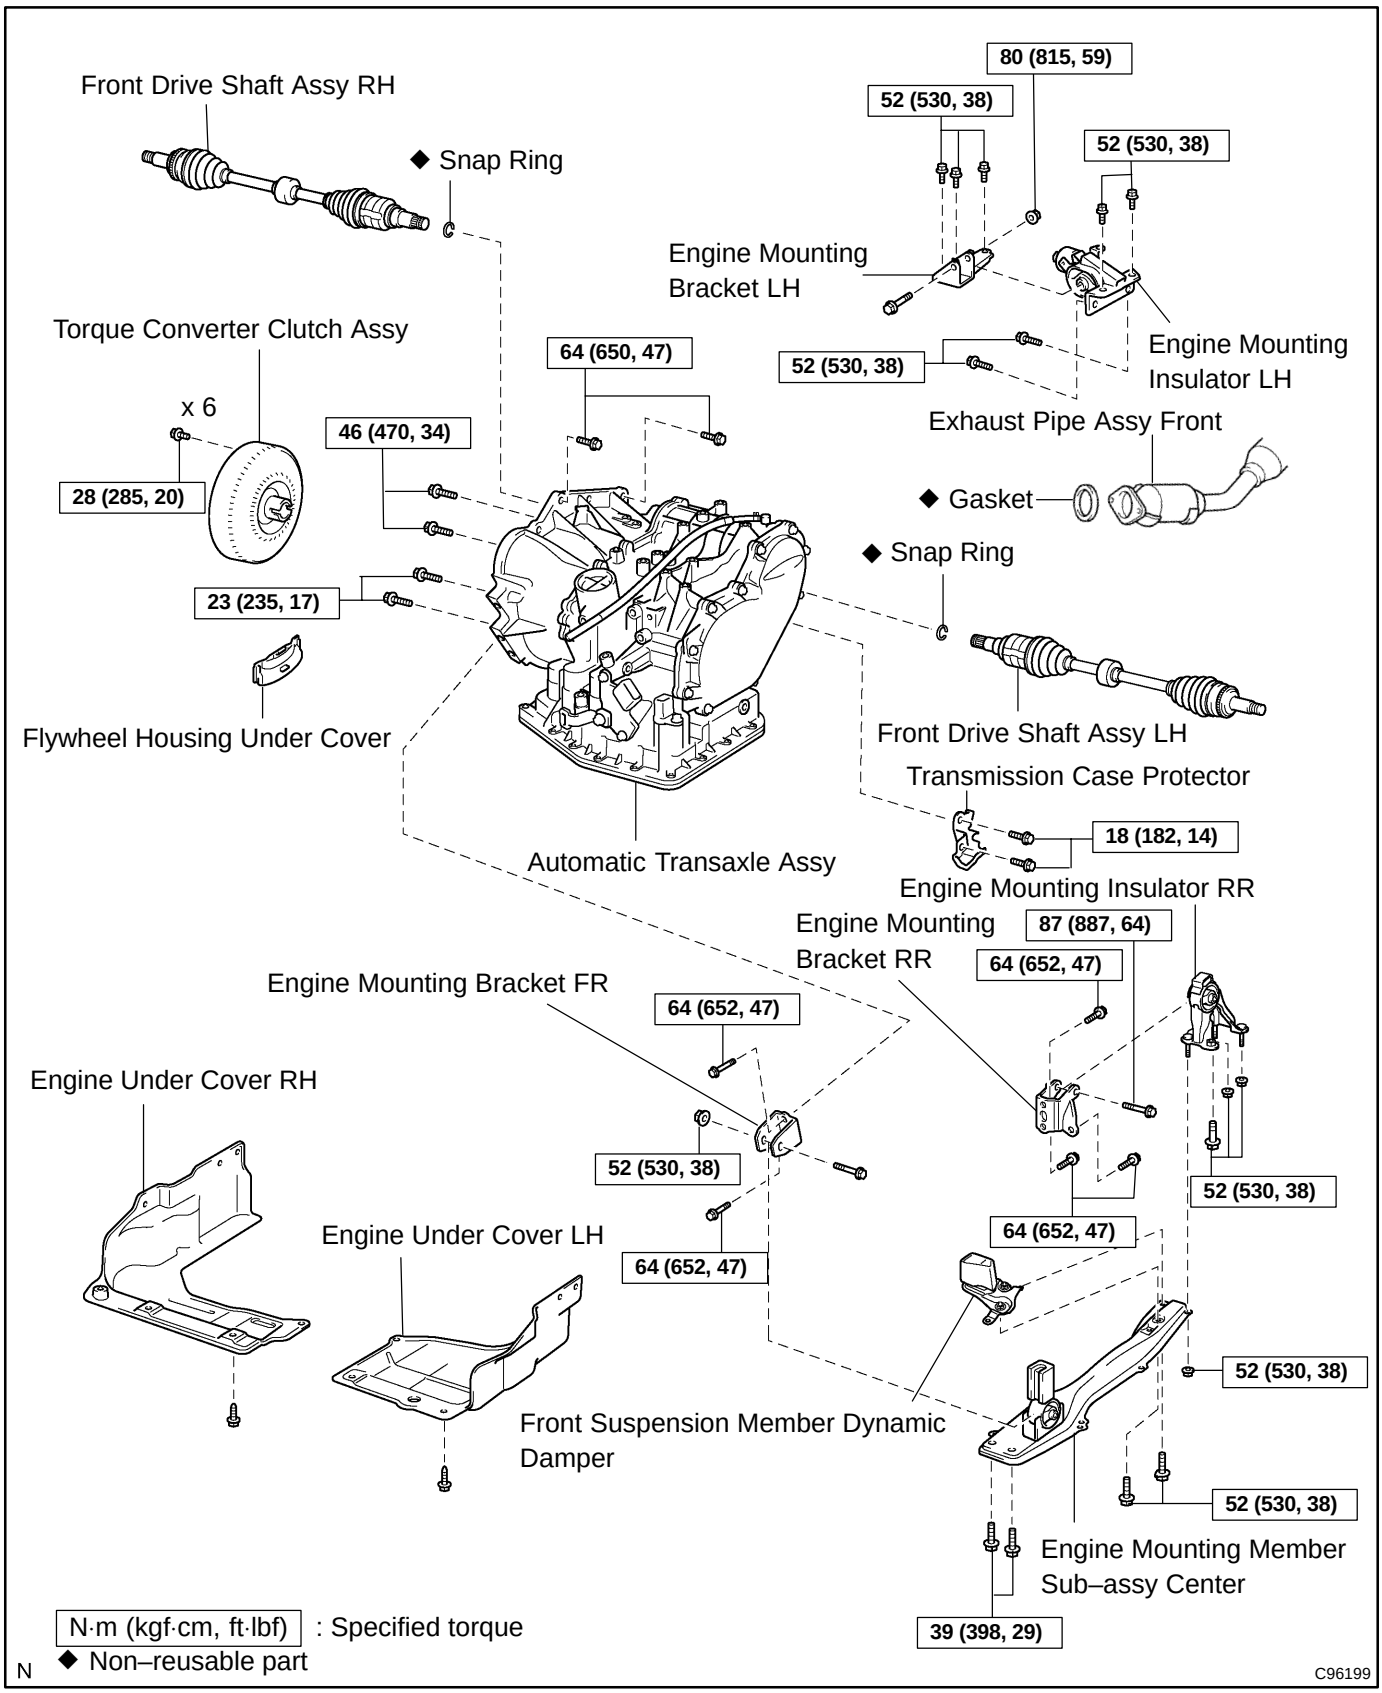
Front Drive Shaft Assy RH
◆ Snap Ring
80 (815, 59)
52 (530, 38)
52 (530, 38)
Engine Mounting Bracket LH
Engine Mounting Insulator LH
52 (530, 38)
Torque Converter Clutch Assy
x 6
28 (285, 20)
64 (650, 47)
46 (470, 34)
Exhaust Pipe Assy Front
◆ Gasket
◆ Snap Ring
23 (235, 17)
Flywheel Housing Under Cover
Front Drive Shaft Assy LH
Transmission Case Protector
18 (182, 14)
Automatic Transaxle Assy
Engine Mounting Insulator RR
Engine Mounting Bracket RR
87 (887, 64)
64 (652, 47)
Engine Mounting Bracket FR
64 (652, 47)
Engine Under Cover RH
52 (530, 38)
52 (530, 38)
Engine Under Cover LH
64 (652, 47)
64 (652, 47)
52 (530, 38)
Front Suspension Member Dynamic Damper
52 (530, 38)
Engine Mounting Member Sub–assy Center
39 (398, 29)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
N
C96199