




Cruise Control

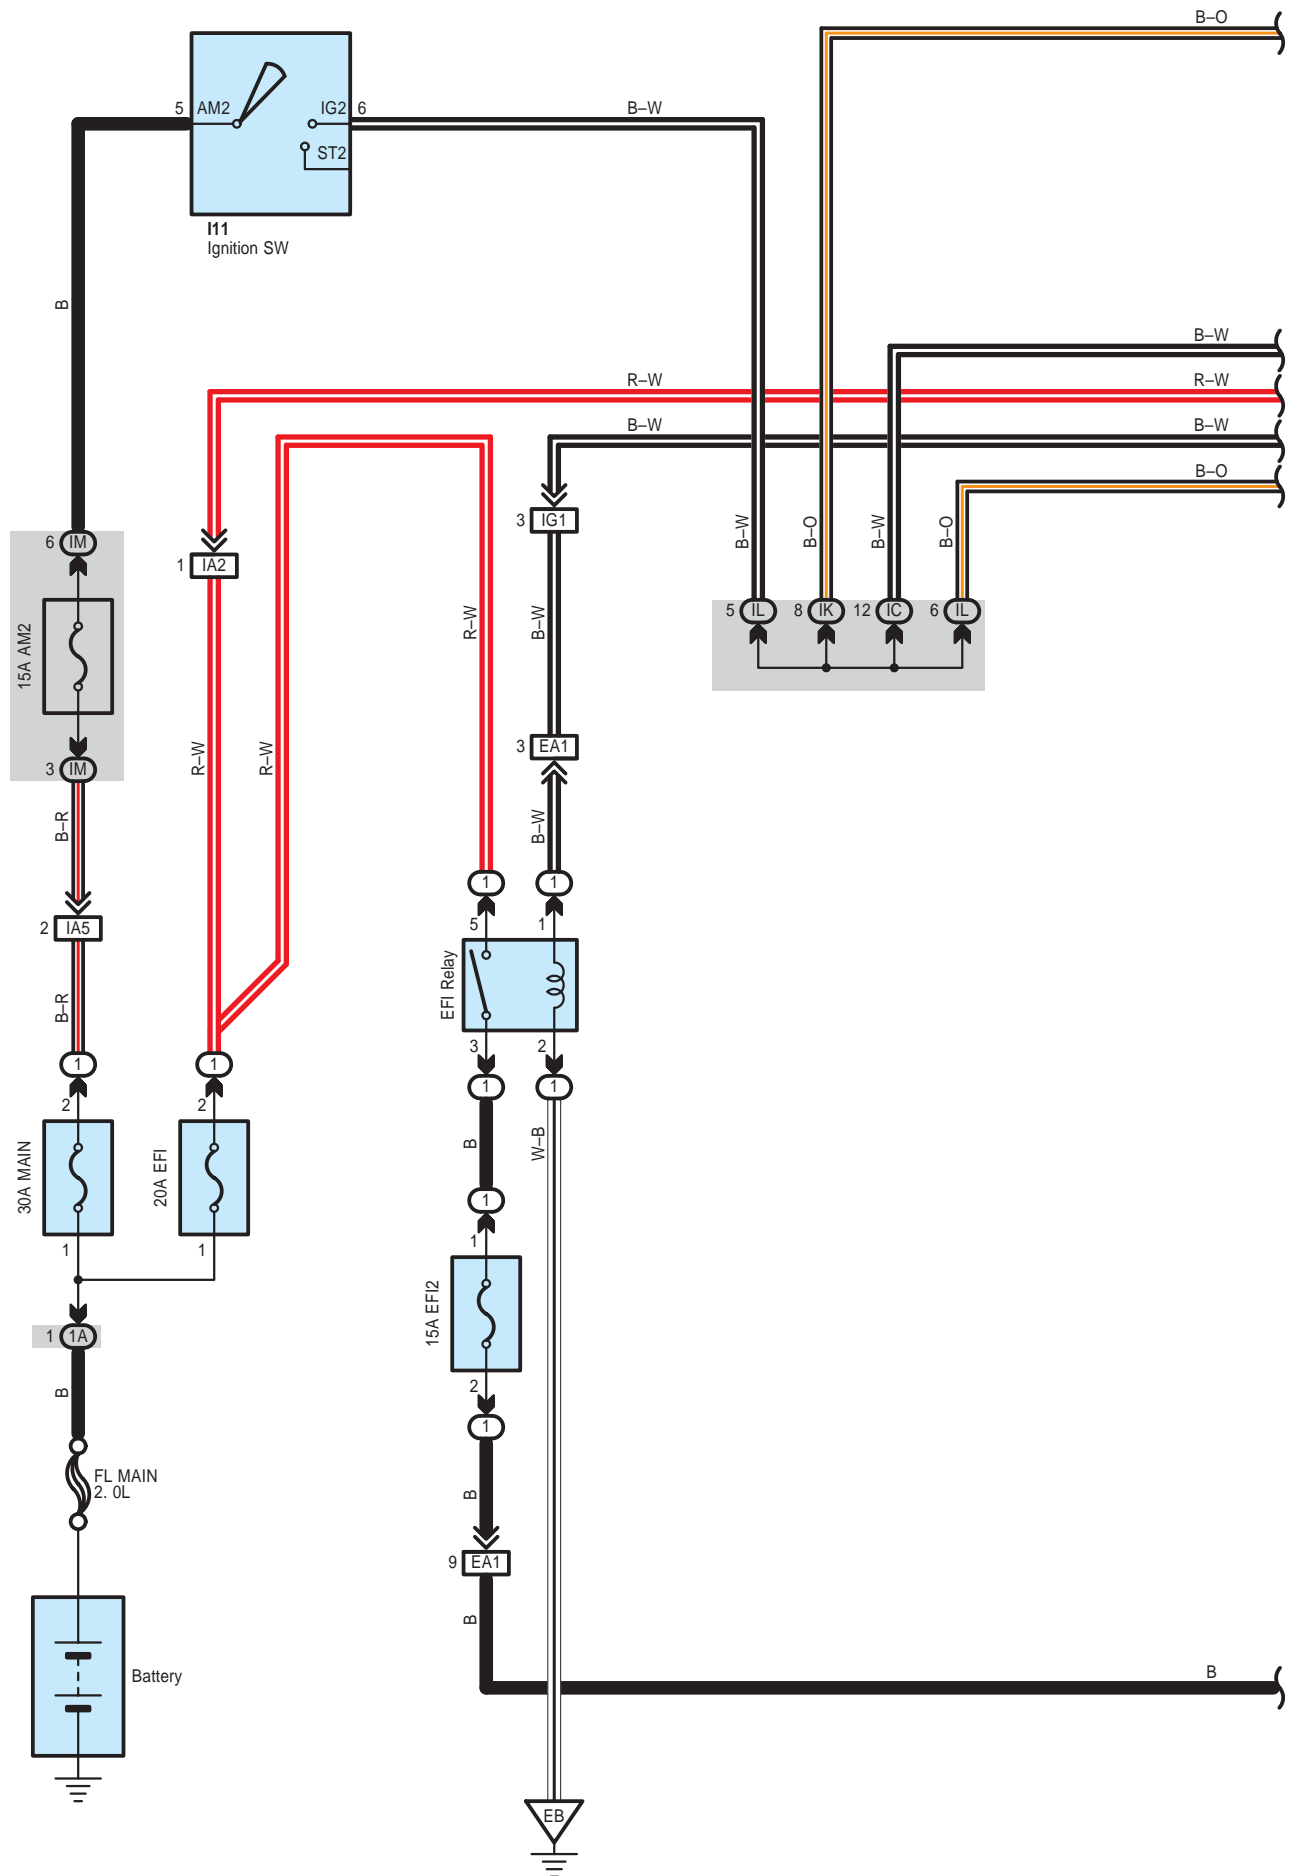

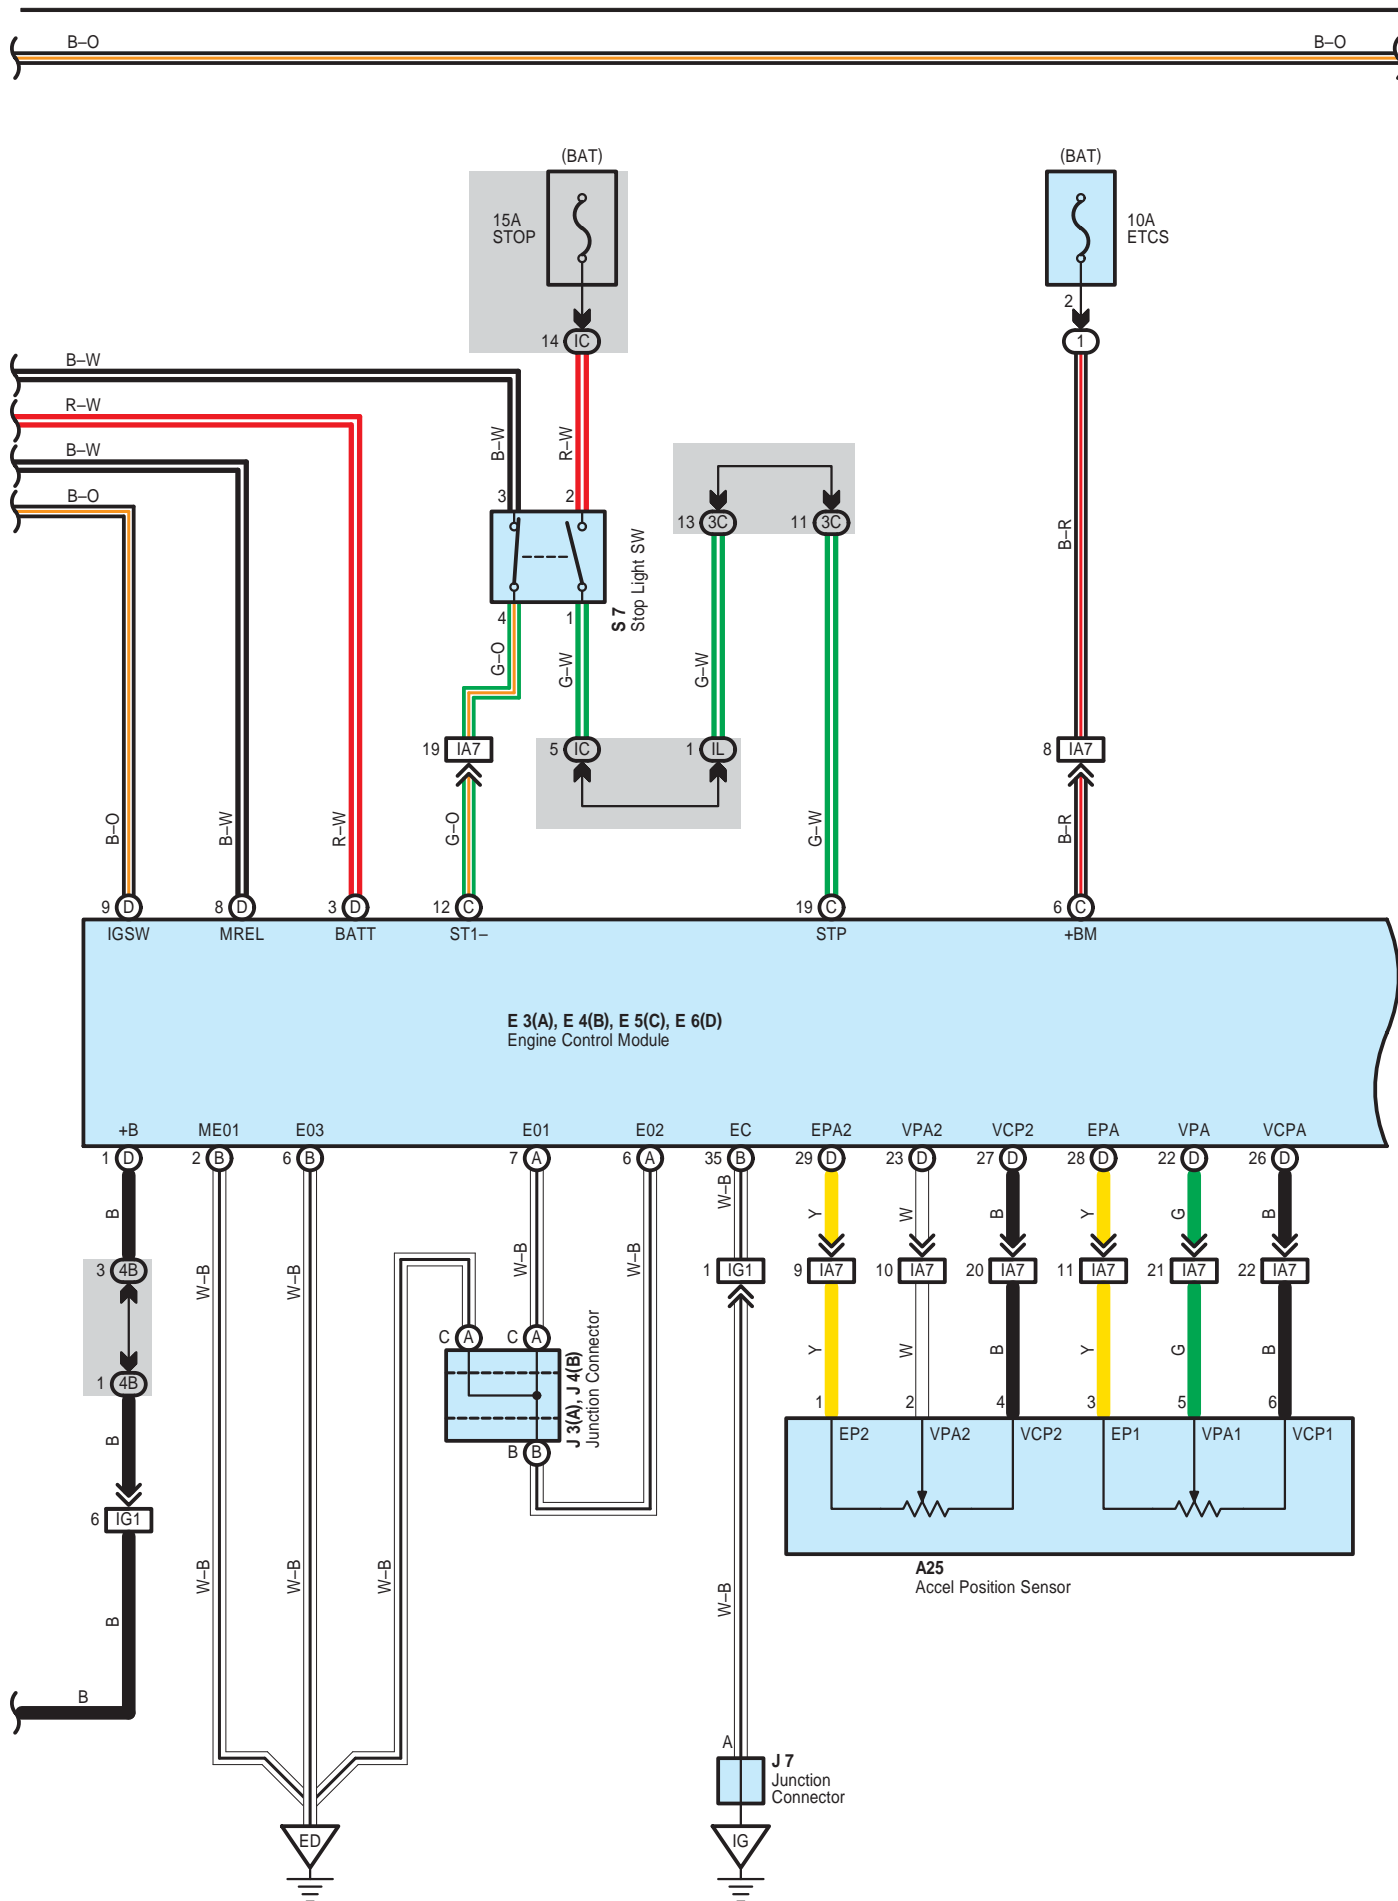

Cruise Control

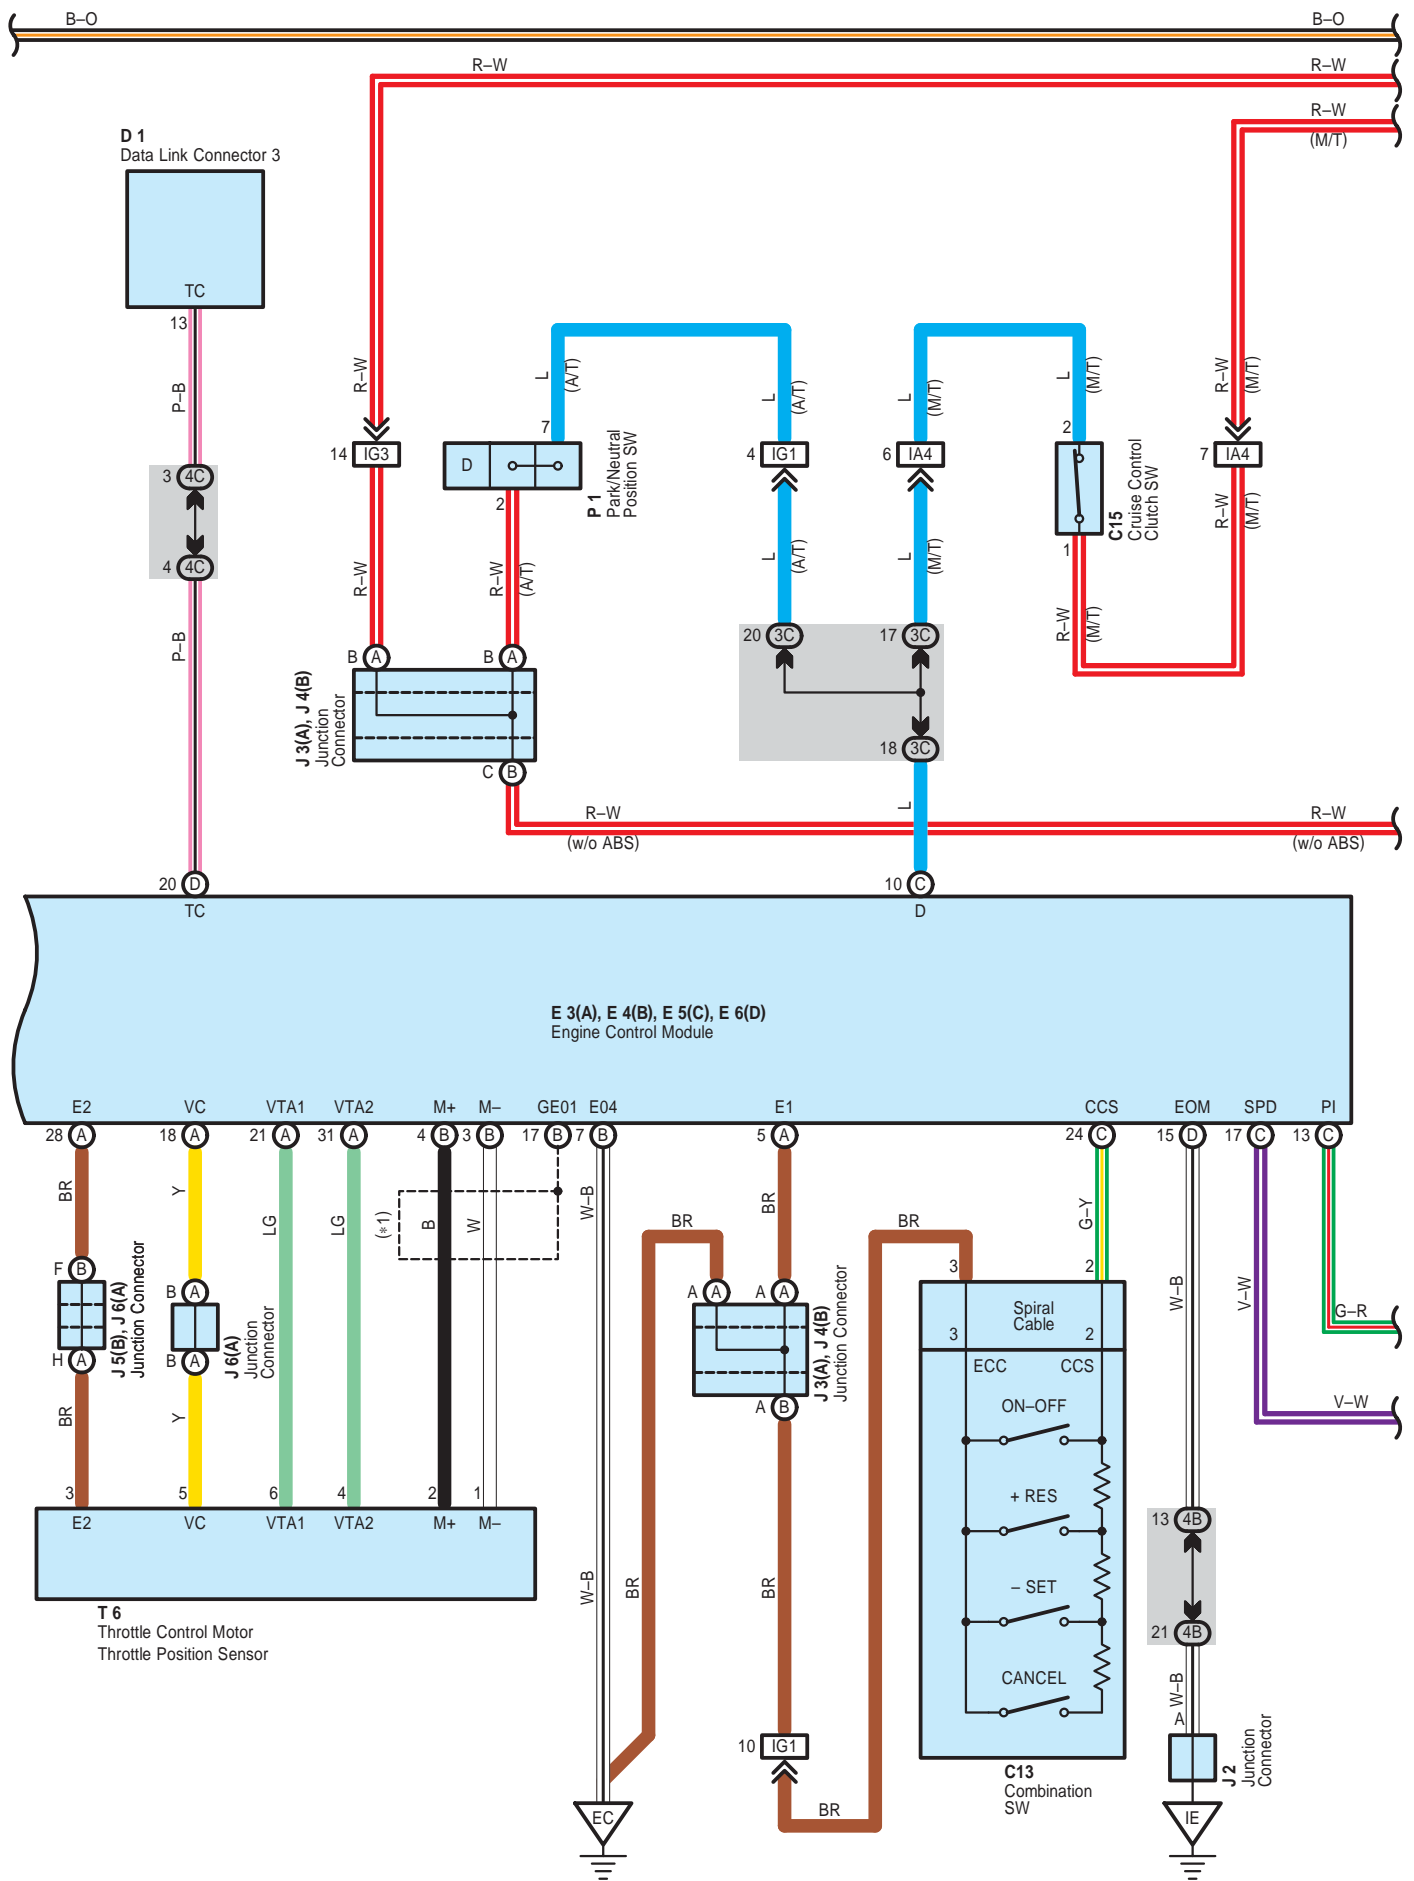

Cruise Control

System Outline

The cruise control system is a constant vehicle speed controller in which control of the switch on the instrument panel makes it possible to automatically adjust the opening of the engine throttle valve without depressing of the accel pedal.

1. Set Operation

When the cruise control main SW is turned on, the system starts preparations necessary for the cruise control and turns on the indicator light in the combination meter.

2. Set Speed Control

When the – SET SW is operated with the cruise control main SW turned on during travelling, the constant vehicle speed is controlled.

3. Coast Control

When the – SET SW is kept turned on during cruise control travelling, the engine control module controls the throttle valve to decelerate the vehicle. Every time the – SET SW is turned on momentarily, the vehicle speed is decelerated by approximately 1.6 km/h.

4. Accel Control

When the + RES SW is kept turned on during cruise control travelling, the engine control module controls the throttle valve to accelerate the vehicle. Every time the + RES SW is turned on momentarily, the vehicle speed is accelerated by approximately 1.6 km/h.

5. Resume Control

If the cruise control is cancelled, use of the + RES SW accelerates the vehicle to the speed level used before canceling the cruise control.

6. Manual Cancel Mechanism

If any of the following signals is input during cruise control travelling, the cruise control is cancelled.

- * The stop light SW is turned on.
- * The CANCEL SW is turned on.
- * The cruise control main SW is turned off.

7. Auto Cancel Function

If any of the following conditions is encountered, the cruise control is automatically cancelled.

- * The stop light SW wiring is faulty or short-circuited.
- * The vehicle speed signal is faulty.
- * The electronically controlled throttle malfunctions.

8. Overdrive Control Function

The overdrive control may be cancelled if the vehicle travels on the slope during cruise control travelling. After the overdrive control has been cancelled it is decided that the slope is finished, the vehicle returns to the overdrive control mode again.

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A25		36		E6	D	36		P1		35	
C11		36		I11		37		S1	A	35	
C13		36		J2		37			B	35	
C15		36		J3	A	37		S7		37	
D1		36		J4	B	37		T6		35	
E3	A	36		J5	B	37		V1		35	
E4	B	36		J6	A	37					
E5	C	36		J7		37					

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

**: Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IG	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IK	24	
IL		
IM		
1A	23	Engine Wire and Engine Room J/B (Engine Compartment Left)
3B	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
3C		
4B	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
4C		

**: Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	40	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
IA2	42	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IA4		
IA5		
IA6		
IA7		
IG1	43	Engine Wire and Instrument Panel Wire (Blower Unit RH)
IG3		

**: Ground Points**

Code	See Page	Ground Points Location
EB	40	Front Left Suspension Tower
EC	40	Left Side of the Cylinder Head
ED		
IE	42	Behind Combination Meter
IG	42	Right Kick Panel